



High Performance Sensorless Vector Control AC Drive
USER MANUAL
Glory Series

Preface

Thank you for using INTOUSS Electric Tech CO., Limited of the GLORY.

GLORY series is the new generation products to meet general purpose and special technical demand. The new designed sensorless vector control performance of GLORY inverter have improved the reliability at low speed, the overload capacity at low frequency and high control precision at open loop tension control mode. Its function of anti-trip and strong adaptability to worse grid, temperature, humidity and dust make it meet the high performance requirement of the customer application.

GLORY power range is from 0.4KW to 450KW. It is built in RS 485 interface which can use software upload, download and monitoring the parameter of inverter. Built-in PID16 multi-speed, traverse control can realize various complicate high-accuracy drives and widely apply in Textile, paper industry, machine tool, package, printing, pump and fan.

This manual provides installation and configuration, parameters setting, fault diagnoses and daily maintenance and relative precautions to customers. Please read this manual carefully before the installation to ensure a proper installation and operation and high performance of GLORY series inverters.



ANGER: indicates the situation in which the failure to follow operating requirements may result in fire or serious personal injury or even death.



CAUTION: indicates the situation in which the failure to follow operating requirements may cause moderate or slight injury and damage to equipment.

Contents

Preface ·····	1
Chapter 1 Safety Precautions	5
1.1 Unpackage Inspection ·····	5
1.2 Safety Information·····	5
1.3 General Precautions	g
1.4 Disposal ·····	11
Chapter 2 Models and Specifications	12
2.1 Models	12
2.2 Specifications ·····	13
2.3 Parts of Inverter	16
2.4 Dimensions ·····	17
2.5 Optional Parts·····	18
Chapter 3 Installation and Wire Connection	22
3.1 Installation ·····	22
3.2 Removing and Mounting Front Cover of Inverter	23
3.3 Wire Connection	23
3.4 Main Circuit Wiring·····	24
3.5 Basic Wiring Diagram ·····	26
3.6 Control Circuit Terminal Wiring·····	26
3.7 EMC Installation Instruction ·····	34
Chapter 4 Running of Inverter	38
4.1 Running of Inverter ·····	38
4.2 Operation and Using of the Control Panel ·····	41
4.3 Inverter power switch on ·····	48
Chapter 5 Function Code Table	49
Chapter 6 Description of Function Codes	97

6.1 Basic Parameters (Group P0)	97
6.2 Start/Stop Control (Group P1)	105
6.3 Auxiliary Functions (Group P2)	-110
6.4 Input Terminals (Group P3)	123
6.5 Output Terminals (Group P4) ·····	138
6.6 V/F Control Parameter (Group P5)	144
6.7 PID Function(Group P6)	149
6.8 Operation Panel and Display (Group P7)	156
6.9 Motor Parameters (Group P8)	159
6.10 Torque Control and Vector Control Parameters (Group P9)	162
6.11 Parameter Protection (Group PA)	167
6.12 Multi-Reference and Simple PLC Function (Group Pb)	176
6.13 Communication Parameter (Group PC)	179
6.14 Function Code Parameter (Group Pd)	179
6.15 Swing Frequency, Fixed Length and Count (Group PE)	180
6.16 AI/AO Correction and AI Curve Setting (Group PF)	183
6.17 User-Defined Function Codes (Group E0)	187
6.18 Motor 2 to Motor 4 Parameters (Group E3、E4、E5)	188
6.19 Standard Monitoring Parameters (Group b0)	188
Chapter 7 Troubleshooting	189
7.1 Fault Alarm and Troubleshooting·····	189
7.2 Fault Record Search ·····	194
7.3 Fault Reset ·····	194
Chapter 8 Preservation and Maintenance ·····	195
8.1 Preservation and Maintenance ·····	195
8.2 Periodic Preservation and Maintenance·····	195
8.3 Warranty of Inverter ·····	196

INTOUSS Glory Series User Manual

Chapter 9 Serial port RS485 communication protocol	198
9.1 Communication overview	198
9.2 Communication protocol specification ·····	199
9.3 RTU protocol	199

Chapter 1 Safety Precautions

Unpackage Inspection

Upon unpacking, check:

- Whether the nameplate model and AC drive ratings are consistent with your order. The box contains the AC drive, certificate of conformity, user manual and warranty card.
- Whether the AC drive is damaged during transportation. If you find any omission or damage, contact INTOUSS or your supplier immediately.

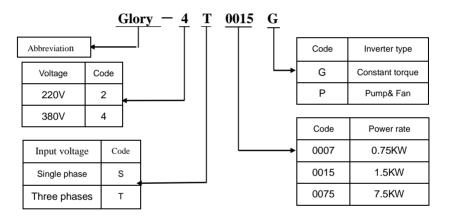


Fig 1-1. Models description

1.2 Safety Information

The use phase	Safety class	Precaution
		◆Do not install the product if the package is with
Before	A	water, or component is missing or broken.
Installation	Danger	◆Do not install the product if the label on the
		package is not identical to that on the inverter.

		1 .
		◆Be careful of carrying or transportation. Risk of
	•	devices damage.
	<u> </u>	◆Do not use damaged product or the inverters
	Caution	missing component .Risk of injury.
		◆Do not touch the parts of control system with
		bare hands. Risk of ESD hazard.
		◆Installation base shall be metal or other
		non-flammable material. Risk of fire.
	^	◆Do not install inverter in an environment
	<u> </u>	containing explosive gases, otherwise there is
	Danger	danger of explosion.
		◆Do not unscrew the fixing bolts, especially the
		bolts with red mark.
Installation		◆ Do not leave cable strips or screws in the
		inverter. Risk of inverter damage.
	^	◆ Install the product at the place with less
	<u> </u>	vibration and no direct sunlight.
	Caution	◆ Consider the installation space for cooling
		purpose when two or more inverters are placed in
		the same cabinet.
		◆Wiring must be performed by authorized and
		qualified personnel. Risk of danger.
		◆ Circuit-breaker should be installed between
Wiring	A	inverter and the mains. Risk of fire.
	Danger	◆Make sure the input power supply has been
		completely disconnected before wiring. Failure to
		comply may result in personnel injury and/or
		equipment damage.

		◆Since overall leakage current of this equipment
		may be bigger than 3.5mA, for safety's sake, this
		equipment and its associated motor must be well
		grounded so as to avoid risk of electric shock.
		◆Never connect the power cables to the output
		terminals (U, V, W) of the AC drive. Pay attention
		to the marks of the wiring terminals and ensure
		correct wiring. Failure to comply will result in
		damage to the AC drive.
		◆Install braking resistors at terminals (P+)and (P-
		or PB) only. Failure to comply may result in
		equipment damage.
		◆Since all adjustable frequency AC drives from
		INTOUSS have been subjected to hi-pot test
		before delivery, users are prohibited from
		implementing such a test on this equipment.
		Failure to comply may result in equipment
		damage.
	\wedge	◆Signal wires should to the best of the possibility
		be away from main power lines. If this cannot be
	Caution	ensured, vertical cross-arrangement shall be
		implemented, otherwise interference noise to
		control signal may occur.
		♦ If motor cables are longer than 100m, it is
		recommended output AC reactor be used. Failure
		to comply may result in faults.

	<u> </u>	◆Inverter shall be power-on only after the front
	Danger	cover is assembled. Risk of electrical hazard.
Before		◆ Verify that the input voltage is identical to the
belole		rated voltage of product, correct wiring of input
Power-on	⚠	terminals R, S, T and output terminals U, V, and
	Caution	W, wiring of inverter and its peripheral circuits,
		and all wires should be in good connection. Risk
		of inverter damage.
		◆ Do not open the cover after power. Rick of
	A	electrical hazard.
	Danger	◆ Do not touches any input/output terminals of
After Power-on		inverter with bare hands. Rick of electrical hazard.
After Power-on		◆If auto tuning is required, be careful of personal
	\triangle	injury when motor is running. Risk of accident.
	Caution	◆Do not change the defaults of parameters. Risk
		of devices damage.
		◆ Non-professionals shall not detect signals
		during operation. Risk of personal injury or device
	A	damage.
	Danger	◆ Do not touch the fan or the discharging resistor
During		to check the temperature. Failure to comply will
Operation		result in personal burnt.
		◆Prevent any foreign items from being left in the
	\triangle	devices during operation. Risk of device damage.
	Caution	◆ Do not control start/stop of inverter by ON/OFF
		of contactor. Risk of device damage.

		◆Maintenance and inspection can only be
		performed by professionals. Risk of
		personal injury.
		◆Maintain and inspect devices after power
		is off. Risk of electric hazard.
		◆Repair or maintain the AC drive only ten
		minutes after the AC drive is powered off.
Maintenance	<u>A</u> Danger	This allows for the residual voltage in the
Maintenance		capacitor to discharge to a safe value.
		Failure to comply will result in personal
		injury.
		◆All pluggable components can be
		inserted or pulled out only when power has
		been turned off.
		◆Set and check the parameters again
		after the AC drive is replaced.

1.3 General Precautions

1. Constant torque low frequency running

When inverter with induce motor running at long time low speed, the effection of heat emission will get worse and influence motor using life. If low speed constant torque running for long time, user have to use Variable frequency motor.

2. Motor insulation test

Perform the insulation test when the motor is used for the first time, or when it is re-used after being stored for a long time, or in a regular check-up, in order to prevent the poor insulation of motor windings from damaging the AC drive. The motor must be disconnected from the AC drive during the insulation test.

3. Hoist load

In Hoist load application, as the inertia exist, inverter will trip as over current or overvoltage fault. In the case, braking unit and resistor should be connected.

4. Vibration of mechanical device

The AC drive may encounter the mechanical resonance point at some output frequency, which can be avoided by setting the skip frequency.

5. Voltage-sensitive device or capacitor on output side of the AC drive

Do not install the capacitor for improving power factor or lightning protection voltage sensitive resistor on the output side of the AC drive because the output of the AC drive is PWM wave. Otherwise, the AC drive may suffer transient overcurrent or even be damaged.

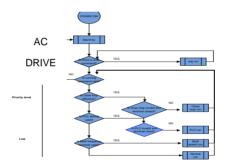


Fig 1-2. Inverter not allowed to connect capacitor

6. Derate at Basic frequency setting

When basic frequency is lower than rated frequency, be caution to derate motor avoilding motor burn

7. Running at over 50 Hz

If the AC drive is required to run at over 50 Hz, motor viberation and noise will increase. Consider the capacity of the machine.

8. Thermal protection of motor

If the rated capacity of the motor selected does not match that of the AC drive,

especially when the AC drive's rated power is greater than the motor's, adjust the motor protection parameters on the operation panel of the AC drive or install a thermal relay in the motor circuit for protection.

9. Altitude and de-rating

In places where the altitude is above 1000 m and the cooling effect reduces due to thin air, it is necessary to de-rate the AC drive.



Fig 1-3. Inverter output current derating and Altitude

10. Protection class

GLORY protection level is IP20 when inverter with keypad.

1.4 Disposal

The electrolytic capacitors on the main circuits and PCB may explode when they are burnt. Poisonous gas is generated when the plastic parts are burnt. Treat them as ordinary industrial waste.

Chapter 2 Models and Specifications

2.1 Models

GLORY series inverter has 2 kinds of voltage levels, 220V and 380V. The Power range is from 0.4KW to 450KW. Models of GLORY series are shown in Table 2-1.

Table 2-1. Models description

Voltage level	Models		Rated capacity (KVA)	Rated	Applicable
	01.000/.000040			output	motor(KW)
220V	GLORY-2S0004G		1.1	3.0	0.4
Single	GLORY-2S0007G		1.5	4.7	0.75
ŭ	GLORY-2S0015G		2.8	7.5	1.5
phase	GLORY-2S0022G		3.8	10.0	2.2
220V	GLORY-2T0015G		3.0	7.0	1.5
Three phase	GLORY-2T0022G		4.0	10.0	2.2
	GLORY-4T0007G		1.5	2.5	0.75
	GLORY-4T0015G		2.5	4.0	1.5
380V	GLORY-4T0022G	GLORY-4T0022P	3.0	6.0	2.2
Three phase	GLORY-4T0037G	GLORY-4T0037P	5.9	9.6	3.7
-	GLORY-4T0055G	GLORY-4T0055P	8.5	14.0	5.5
-	GLORY-4T0075G	GLORY-4T0075P	11	17.0	7.5
	GLORY-4T0110G	GLORY-4T0110P	17	25	11
	GLORY-4T0150G	GLORY-4T0150P	21.7	32	15
	GLORY-4T0185G	GLORY-4T0185P	25.7	39	18.5
	GLORY-4T0220G	GLORY-4T0220P	29.6	45	22
	GLORY-4T0300G	GLORY-4T0300P	39.5	60	30
	GLORY-4T0370G	GLORY-4T0370P	49.4	75	37
	GLORY-4T0450G	GLORY-4T0450P	60	91	45
	GLORY-4T0550G	GLORY-4T0550P	73.7	112	55
	GLORY-4T0750G	GLORY-4T0750P	99	150	75

	GLORY-4T0900G	GLORY-4T0900P	116	176	90
	GLORY-4T1100G	GLORY-4T1100P	138	210	110
	GLORY-4T1320G	GLORY-4T1320P	167	253	132
	GLORY-4T1600G	GLORY-4T1600P	200	304	160
	GLORY-4T1850G	GLORY-4T1850P	234	355	187
	GLORY-4T2000G	GLORY-4T2000P	248	377	200
380V	GLORY-4T2200G	GLORY-4T2200P	280	426	220
Three phase	GLORY-4T2500G	GLORY-4T2500P	318	474	250
	GLORY-4T2800G	GLORY-4T2800P	342	520	280
	GLORY-4T3150G	GLORY-4T3150P	390	600	315
	GLORY-4T3500G	GLORY-4T3500P	435	660	350
	GLORY-4T4000G	GLORY-4T4000P	493	750	400
	GLORY-4T4500G	GLORY-4T4500P	560	850	450

2.2 Specifications


Items		Specifications
	Rated	Single phase220V, three phase 200V, three phase
Input	Voltage	380V;50Hz/60Hz
	Range	Voltage: ±20% voltage unbalance rate:<3%; frequency: ±5%
	Rated	0~200V/220V/380V
	voltage	
	Frequency	0Hz∼500Hz
Output	range	
Output	Frequency	0.01Hz
	resolution	
	Overload	150% rated current for1minute, 180% rated current for3 seconds
	ability	
0	Modulation	Optimized space voltage vector SVPWM modulation
Con	modes	
tro	Control	V/F, Sensor less vector and Closed loop vector control
func	mode	
Control function	Frequency	Digital setting: The highest frequency×± 0.01% Analog
_	accuracy	setting: The highest frequency x±0.2%

Eroguenes	Digital setting: 0.01Hz; Analog setting: The highest
Frequency resolution	
	frequency× 0.1%
Start	0.40Hz∼20.00Hz
frequency	
Torque	Auto torque boost, manual torque boost 0.1%~30.0%
boost	
	Five ways: constant torque V/F curve, 1 kind of user defined
V/F curve	V/F curve ,3 kinds of down torque curve(2.0/1.7/1.2times the
	power)
Acc./Dec.	Two ways: linear Acc./Dec.,S-curveAcc./Dec.;7 kinds of
curve	Acc./Dec. time,
	Time unite (minute/second) optional, max time: 6000 minutes.
DC braking	DC braking start frequency: 0~15.00Hz
	braking time: 0∼60.0s braking current: 0∼180%
Energy	Below 22KW drive built-in energy consuming braking unit,
consuming	30-37KW built-in braking unit optional, external braking
braking	resistor is optional.
Jog	Jog frequency range:0.1Hz~50.00Hz, JOG Acc./Dec. time:
running	0.1~60.0s
PI built-in	Easily constitute a close loop control system
Multi-stage	Multi-stage speed running available through built-in PLC or
speed	control terminals
running	
Textile	Swing frequency available with preset and central frequency
swing	adjustable
frequency	
Auto	Keep a stable voltage automatically when the grid voltage
voltage	transients
regulation	Tariofillo
Auto	Saving energy by auto optimizing V/F curve according to the
energy	load
saving	
running	

	l	
	Auto	Auto current limiting to prevent frequent over current fault trip
	current	
	limiting	
	Multi	With water supply card, the function can implement multi pumps
	pumps	constant pressure water supply
	control	
	Communic	4 field bus: Modbus, Profibus, CANlink, CANopen
	ation	
	Demois	October I according to a section of the control of
	Running	Control panel: control terminal:serial port:3 channels
	command	switchable
	channel	Ocatal acceleration to attion A. — cont. I
		Control panel potentiometer setting: ▲ ▼ control panel keys
	Frequency	setting; Function code setting: Serial port setting; Terminal
	setting	up/down setting: Input Analog voltage setting: Input Analog
	channel	current setting: Input pulse setting; Combination ways setting;
	O it - Ir	Above ways are switchable.
	Switch	FWD/REV command: 8channels programmable switch inputs,
	input	35kinds of function can be set separately
	channel	A COMPAN O AOVA O América de la misma de
Dummina	Analog	4~20mA: 0-10V: 2 optional analog inputs
Running function	input	
Turiction	channel	4.00 A 0.40V ii 1 iii 1
	Analog	4~20mA or 0~10V optional, setting frequency and output
	output	frequency ,etc feature output
	channel	
	Switch/puls	2 channels Programmable open collectors output, 2 channels
	e output	relays output, 1 channel 0~20KHz pulse output
	channel	Disales at the first section of the
Cor	LED digital	Display setting frequency, output voltage, output current, etc.
Control panel	display	
par	External	Display output frequency, output current, output voltage, etc.
nel	meter	
	display	
	Key lock	All the keys can be locked

	Parameter	Function code parameters are able to be copied between
	сору	inverters when use remote control panel。
Protection	n function	Overcurrentprotection:overvoltageprotection:undervoltageprote
		ction:overheating protection: overload protection, etc.
Optio	nal parts	Braking unit: remote control panel: cable: panel mounting feet,
		etc.
	Environment	Indoors, free from direct sunlight, dust, corrosive gas, oil mist,
	Environment	steam, water dropper salt, etc
_	Altitude	Lower than 1000m (derating is necessary above 1000m)
invi.	Ambient	-10°C~+40°C
ronr	temperature	
Environment	Humidity	<90%RH, no condensation
_	Vibration	Lower than 5.9m/s (0.6g)
	Storage	−20°C~+60°C
	temperature	
	Protection	IP20 (In the selection of state display unit or the keyboard state)
Structure	level	
	Cooling	Forced air cooling
Installation		Wall mounted; Floor mounted

2.3 Parts of Inverter

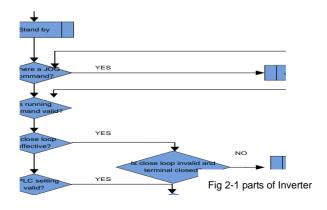

2.4 Dimensions

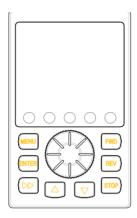


Fig 2-2 Inverter Dimension

Table 2-2 Dimensions (mm)

Wall mounting

Inverter Model		W1	w	H1	Н	D	Mount
G Type	P Type	(mm	(mm	(mm	(mm	(mm	hole
GLORY-2S0004G							
GLORY-2S0007G		74	85	144	142	113	Ф5
GLORY-2S0015G							
GLORY-4T0007G	GLORY-4T0015P						
GLORY-4T0015G	GLORY-4T0022P	88	98	174	184	135	Ф5
GLORY-2S0022G							
GLORY-4T0022G	GLORY-4T0037P	108	118	220	230	153	Ф5
GLORY-4T0037G	GLORY-4T0055P	106	110	220	230	155	Ψ
GLORY-4T0055G	GLORY-4T0075P	155	172	256	271	183	Ф5
GLORY-4T0075G	GLORY-4T0110P	155	172	236	2/1	103	Ψ5
GLORY-4T0110G	GLORY-4T0150P	137	176	330	340	180	Ф6
GLORY-4T0150G	GLORY-4T0185P	131	170	330	340	100	Ψυ

GLORY-4T0185G	GLORY-4T0220P	200	280	426	445	210	Ф8
GLORY-4T0220G	GLORY-4T0300P	200	200	420	440	210	Ψο
GLORY-4T0300G	GLORY-4T0370P	200	320	511	530	235	Ф8
GLORY-4T0370G	GLORY-4T0450P	∠00	320	511	530	233	Ψδ
GLORY-4T0450G	GLORY-4T0550P	280	380	590	610	270	Ф10
GLORY-4T0550G	GLORY-4T0750P	200	360	330	010	210	Ψ10 I
GLORY-4T0750G	GLORY-4T0900P	280	400	700	730	300	Ф14
GLORY-4T0900G	GLORY-4T1100P	200	400	700	730	300	Ψ14
GLORY-4T1100G	GLORY-4T1320P	400	510	867	895	330	Ф16
GLORY-4T1320G	GLORY-4T1600P	400	310	007	090	330	¥10

Floor mouthing

Inverte	Inverter Model			5 ()
G Type	P Type	W(mm)	H(mm)	D(mm)
GLORY-4T1600G	GLORY-4T1850P			
GLORY-4T1850G	GLORY-4T2000P		1440	
GLORY-4T2000G	GLORY-4T2200P	600		399
GLORY-4T2200G	GLORY-4T2500P			
GLORY-4T2500G	GLORY-4T2800P			
GLORY-4T2800G	GLORY-4T3150P	720	1400	440
GLORY-4T3150G	GLORY-4T3500P	720	1400	440
GLORY-4T3500G	GLORY-4T4000P	950	4700	475
GLORY-4T4000G	GLORY-4T4000P	930	1700	4/5

2.5 Optional Parts:

The following parts are optional. If require, please order

2.5.1 Remote control Keypad

Model: GLORY-YK01 (LED keypad) and GLORY-YK02 (LCD Keypad)

RS 485 communications applied between remote control keypad and inverter which are connected by a 4-core cable via RJ45 network port.

The maximum connection distance is 500M. The inverter supports local keypad and remote control keypad using at the same time, no priority. Both can control the inverter. Hot plug in for remote control keypad is available.

The following functions are available by using remote control keypad:

- (1) Control slave inverter to run, stop, jog run, fault reset, change setting frequency, change function parameters and running direction.
- (2) Monitor slave inverter's running frequency, setting frequency, output voltage, output current, bus bar voltage, etc.

2.5.2 Communication cable for remote control panel

Type: GLORY-LAN0020 (2.0m)

Standard options:1m, 2m, 5m, 10m, 20m. Which is more than 20m can be customized for the remote keypad and inverter connection.

2.5.3 Field bus Adaptor

The inverter can be connected into MODBUS field bus net work via adaptor as a slave station in the network.

The function as follow:

- (1) Send command to inverter such as start, stop, jog running, etc.
- (2) Send speed or frequency signal to inverter.
- (3) Read status and actual value from inverter.
- (4) Fault reset for the inverter.

Please refer to Chapter 9 for communication protocol

2.5.4 Braking Resistors

GLORY series inverters under 22KW have built-in braking units. If energy consuming braking is needed, please choose braking resistors according to Table 2-3. The wire connection of braking resistors is shown in Fig. 2-3.



Fig.2-2 The wire connection of braking resistors

Table 2-3 Braking resistors selection table

Model	Applicable motor	Resistance	Resistance	Braking unite
	(KW)	(Ω)	power (W)	
GLORY-2S0004G	0.4	200	100	Built in
GLORY-2S0007G	0.75	150	200	Built in
GLORY-2S0015G	1.5	100	400	Built in
GLORY-2S0022G	2.2	75	500	Built in
GLORY-4T0007G	0.75	300	400	Built in
GLORY-4T0015G	1.5	300	400	Built in
GLORY-4T0022G	2.2	200	500	Built in
GLORY-4T0037G	4.0	200	500	Built in
GLORY-4T0055G	5.5	100	800	Built in

GLORY-4T0075G	7.5	75	800	Built in
GLORY-4T0110G	11	50	1000	Built in
GLORY-4T0150G	15	40	1500	Built in
GLORY-4T0185G	18.5	30	4000	Built in
GLORY-4T0220G	22	30	4000	Built in
GLORY-4T0300G	30	20	6000	Built in or
GLOK1-410300G	30	20		External
GLORY-4T0370G	37	16	9000	Built in or
GLOIN1-410370G	31	10		External
GLORY-4T0450G	45	13.6	9000	External
GLORY-4T0550G	55	20*2	12000	External
GLORY-4T0750G	75	13.6*2	18000	External
GLORY-4T0900G	90	20*3	18000	External
GLORY-4T1100G	110	20*3	18000	External
GLORY-4T1320G	132	20*4	24000	External
GLORY-4T1600G	160	13.6*4	36000	External
GLORY-4T1850G	185	13.6*4	36000	External
GLORY-4T2000G	200	13.6*5	45000	External
GLORY-4T2200G	220	13.6*5	45000	External
GLORY-4T2500G	250	13.6*5	45000	External
GLORY-4T2800G	280	13.6*6	54000	External
GLORY-4T3150G	315	13.6*6	54000	External
GLORY-4T3500G	350	13.6*7	63000	External
GLORY-4T4000G	400	13.6*8	72000	External
GLORY-4T4500G	450	13.6*8	90000	External

Chapter 3 Installation and Wire Connection


3.1 Installation

3.1.1 Environment Requirements

- (1) Please mount inside a well-ventilated location. The ambient temperature is required to be within the range of -10 \sim 40°C. If the temperature is higher than 40 °C, the inverter should be derated, at the same time the ventilation and heat dissipation should be enhanced.
- (2) Be away from the location full of dust or metal powder, and mount in the location free of direct sunlight.
- (3) Mount in the location free of corrosive gas or combustible gas.
- (4) Humidity should be lower than 90% with no dew condensation.
- (5) Mount in the location where vibration is less than 5.9m/s² (0.6G).
- (6) Please try to keep the inverter away from EMI source and other electronic devices which are sensitive to EMI.

3.1.2 Mounting Space and Direction

- (1) Generally in vertical way.
- (2) For the requirements on mounting space and distance, refer to Fig.3-1.
- (3) When several inverters are installed in one cabinet, they should be mounted in parallel with special incoming and out coming ventilation and special fans. When two inverters are mounted up and down, an air flow diverting plate should be fixed as shown in Fig.3-2 to ensure good heat dissipation.

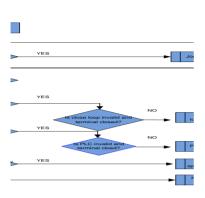

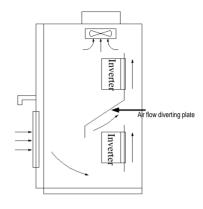


Fig.3-1 Mounting space and distance

Fig.3-2 Mounting of multiple inverters

3.2 Removing and Mounting Front Cover of Inverter

Removing: Remove 4screws on the cover and take the cover out.

Mounting: Align the mounting holes and screw them.

3.3 Wire Connection



Attentio

- (1) Before wiring, please ensure the power has been removed and be wait for at least 10minutes.
- (2) Please do not connect AC power to output terminals $\mbox{U/V/W}.$
- (3) To ensure the safety, the inverter and motor should be safety grounding. It is necessary to use copper wire above 3.5mmas ground wire, grounding resistance less than 10Ω .
- (4) The inverter has gone through voltage withstand test in factory, please do not make it again.

- (5) Solenoid switch or absorbing devices, such as ICEL, is prohibited to connect inverter output.
- (6) To provide input over current protection and for convenience in maintenance, the inverter should be connected to AC power through circuit breaker.
- (7) Please use twisted wire or shielded wire above 0.75mm for the wiring of relay input/output loop(X1~X6, FWD, REV, OC, DO). One end of shielding layer suspended, and the other side connected to PE grounding terminal of inverter, wiring length less than 50m.

Danger



- (1) The cover can be removed only when the power is switched off, all the LEDs on the panel are off and waiting at least for 10 minutes.
- (2) Wiring work can be performed only when the DC voltage between P+ and P-terminals is lower than 36V.
- (3) Wiring work can only be done by trained or professional personnel.
- (4) Before usage, check whether the mains voltage meets the requirement of inverter input voltage.

3.4 Main Circuit Wiring

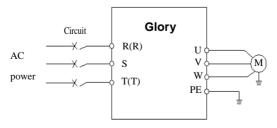


Fig. 3-3 Main circuit wiring

3.4.1 Main Circuit Wiring

Main Circuit input/output terminals, shown as Table 3-1

Table 3-1 Description of Main Circuit input/output terminals

Apply to	Main circuit terminal	Terminal name	Function
2201/ 4 mhann	<u></u>	L1、L2	220V 1-phase Input terminals
220V 1-phase 0.4KW~2.2KW		U、V、W	3-phase Output terminals'
U.4KVV~Z.ZKVV	L1 L2 E U V W	Е	Earthing
0001/0		R、S、T	380V 3-phase Input terminals
380V 3-phase 0.75KW~2.2KW	000000000000000000000000000000000000000	U、V、W	380V 3-phase Output terminals
0.75KVV~2.2KVV	(+) (-) R S T E U V WPB	P+、PB	Braking resistor wiring terminals
000// 0 h		R、S、T	380V 3-phase Input terminals
380V 3-phase	(+)(-) PB R S T E U V W	U、V、W	380V 3-phase Output terminals
2.2KW~22KW	` ' ' '	P+、PB	Braking resistor wiring terminals
0001/0		R、S、T	380V 3-phase Input terminals
380V 3-phase		U、V、W	380V 3-phase Output terminals
30KW~37KW	R S T (+) (+) E PBU V W	P+、PB	Braking resistor wiring terminals
0001/0		R, S, T	380V 3-phase Input terminals
380V 3-phase		U, V, W	380V 3-phase Output terminals
45KW~220KW	R S T P (+) (-) U V W E	P+, PB	Braking resistor wiring terminals
380V 3-phase		R,S, T	380V 3-phase Input terminals
280KW~630KW	R S T (+) (-) U V W E	U, V, W	380V 3-phase Output terminals

|--|

3.5 Basic Wiring Diagram

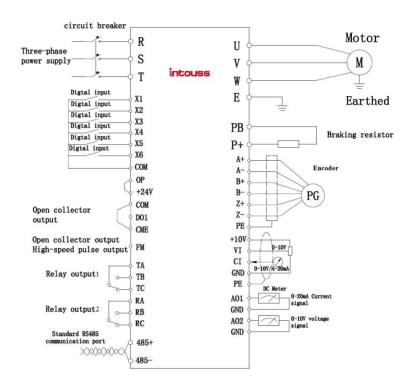


Fig. 3-5 Basic Wiring Diagram

3.6 Control Circuit Terminal Wiring

3.6.1 Position and Function of Terminals and Jumpers on Control Circuit

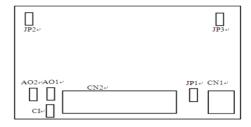


Fig. 3-6 Position of terminals and jumpers on control circuit

Before using the inverter, Please make correct terminals wiring and jumpers setting. It is suggested to use above 1mm² wire as terminal connection wire.

Table 3-2 Jumper switch function

NO	Function Setting	Setting	FD
JP1	COM and CME connecting selection	1-2 connection: COM and CME connected 2-3 connection: COM and CME disconnected	COM and CME connection
JP2	GND and Earthing connecting selection	1—2 connection: GND and E (Earthing) disconnected 2—3 connection: GND and E (Earthing) connected	1-2
JP3	COM and Earthing connecting selection	1—2 connection : COM and E (Earthing) disconnected 2—3 connection : COM and E (Earthing) connected	2-3
AO1	AO1 terminal current/ voltage selection	Current selection: AO2: 0~20mA or 4~20mA output Voltage selection: AO2: 0~10V output	0-10V
AO2	AO2 terminal current/ voltage selection	Current selection: AO2: 0~20mA or 4~20mA output Voltage selection: AO2: 0~10V output	0-10V

CI	Cltermial current/ voltage input selection	Current selection : CI: 0~20mA or 4~20mA input Voltage selection : CI: 0~10V input	0-10V
----	--	--	-------

3.6.2 Description of Terminals on Control Circuit

(1) Function of CN 1 terminal shown as Table 3-3

Table 3-3 CN 1 terminal function

Sort	Terminal	Name	Function Description	Specification	
Relay output terminal	TA/RA	Multi	Can be defined as	TA-TC: NC, TA-TB: Normal	
	TB/RB	functi	multifunctional	open contact capacity	
		onal	Relay output terminal by	AC250V/2A (COSФ=1)	
	TC/RC	relay	programming, refer to Chapter	AC250V/1A (COSФ=0.4)	
		output	6.5 P4.02, P4.03	DC30V/1A	
		terminal			

(2) Control Circuit CN2 terminal shown as Fig.3-7

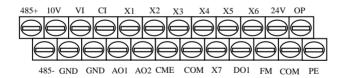


Fig.3-7 CN2 terminal order

(3) Function of CN 2 terminal shown as T able 3-4

Table 3-4 CN 2 terminal function

Sort	Terminal	Name	Function	Specification
Commu	485+	RS485	RS485 differential signal positive	Twisted or shielded wire
nication		interface	terminal	needed

	485-		RS485 differential signal negative terminal	
Digital output	DO1-CM E	Open collector output	Optical coupling isolation, dual polarity open collector output Note: CME and COM are internally insulated, but they are shorted by jumper JP1 on control board. DO1 is driven by +24 V by default. If you want to drive DO1 by external power supply, remove the JP1	Couple output Output voltage range: 0–24 V Output current range: 0–50 mA Refer to P4.0 2
Pulse output	FM-CO M	High speed pulse output collector	The programmable multi function terminal defined by P4.06 (FM input mode selection), As open-collector output, its specification is the same as that of DO1. (Common terminal: COM)	Output range defined by P4.09, Max 100KHz
A	VI	Analog input VI	Analog voltage input (Common terminal: GND)	Input voltage range: 0~10V (Impedance: 47KΩ) Resolution: 1/1000
Analog input	CI	Analog input Cl	Analog voltage/ current input, voltage/ current selected by Jumper CI, voltage input as default (Common terminal: GND)	Input voltage range: 0~10V (Impedance: 47ΚΩ) Input current range: 0~20mA (Impedance: : 500Ω) Resolution: 1/1000

A	AO1	Analog output AO1 Analog output AO2	Analog voltage/ current output, voltage/ current selected by Jumper AO1, voltage output as default. (Common terminal: GND) Analog voltage/ current output, voltage/ current selected by Jumper AO2, voltage output as default. (Common terminal: GND).	Current output range: 4~20mA Voltage output range: 0~10V Current output range: 4~20mA Voltage output range: 0~10V
Analog output	X1	Multifunctional input terminal 1	programming, refer to Chapter 6.5 (P3 group) . (Common terminal: COM)	Optical coupling isolation, compatible dual polarity input Input impedance: R=2 KΩ Max input frequency:
	X2	input terminal 2		
	Х3	Multifunctional input terminal 3		
	X4	Multifunctional input terminal 4	X5, besides features of XI1–XI6, it can be used for high-speed	200Hz Input voltage range: 9~
	X5	Multifunctional input terminal 5	pulse input.	30V
	X6	Multifunctional input terminal 6	Maximum input frequency: 100 kHz	
	P24	+24V common terminal	Supply +24V power (negative terminal: COM)	
Power	OP	External power supply	Default external power+24V When using external power supply for terminal X1~X6, OP have to connect to external power. And remove the Jumper of OP and +24V terminal	
	10V	+10V power	Supply+10Vpower(negative terminal: GND)	Max. output current: 50mA
	GND	+10V common terminal	Grounding of analog signal and+10V power source	Terminal COM and GND are

	COM	+24Vcommon	Digital signal input, output	Isolated inside
		terminal	common terminal	

3.6.3 Analog Input/Output Terminal Wiring

(1) Analog voltage signal input through VI terminal as follow wiring:

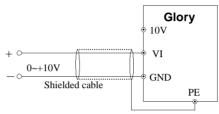


Fig. 3-7 VI terminal wiring

(2) Analog signal input through CI terminal, jumper selection for input voltage (0~10V) or input current (4~20mA) as follow wiring

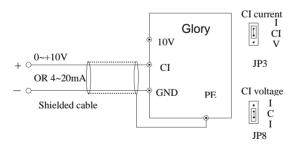


Fig. 3-8 CI terminal wiring

(3) Analog output terminal AO1 wiring

Analog output terminal can be connected with external analog meter indicating various physical quantity, jumper selection for output voltage (0~10V) or output current (4~20mA) as follow wiring.


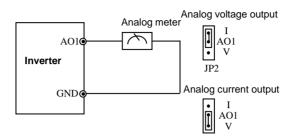


Fig. 3-9 Analog output terminal wiring

(4) Digital output terminal DO wiring

When DO connect to relay, the replay have to connect with diode. Otherwise terminal 24Vpower source may damage. The current should be less than 50mA

Note: The connection of Diode pole should be correct, otherwise terminal 24V power source will damage.

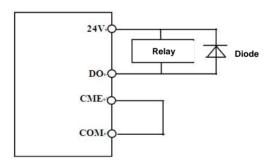

Notes:

- (1) Filter capacitor or common-mode inductor can be installed between VI and GND terminal or CI and GND terminal when using analog input mode.
- (2) Please use shielded cable and do well grounding, keep the wire as short as possible in order to prevent external interference when using analog input/o output mode.

3.6.4 Communication Terminal Wiring

The inverter supplies standard RS 485 communication port

It can constitute one master one slave control system or a one master multi slaves system. The upper computer(PC/PLC)can real time monitor the inverter in the control system and achieve complicated control function such as remote control and spermatic, etc

- (1) Remote control panel can be connected with inverter viaRS485port by plugging in the remote control panel into RS485 port without any parameter setting. The local control panel of inverter and remote control panel can work at the same time.
- (2) Inverter RS 485 port and upper computer wiring as follow:

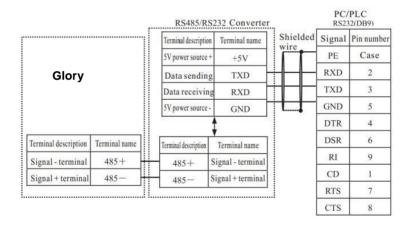


Fig. 3-10 RS485-(RS485/232)-RS232 communication wiring

(3) Multi inverters can communicate via RS485, controlled by PC/PLC as a Master shown as Fig.3-12. It also can be controlled by one of inverters as a Master shown as Fig.3-13

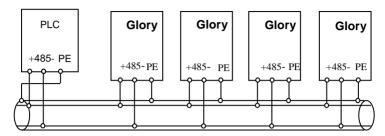


Fig. 3-12 PLC communication with multi inverters

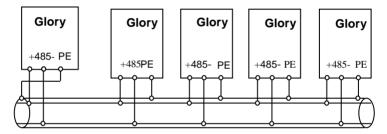


Fig. 3-13 Multi inverters communication

The more inverters connected, the more the communication interference may accure. Please make wiring as above and do well grounding for inverters and motors, or adopt the following measures to prevent interference as even above wiring can't work.

- (1) Separately power supply to PC/PLC or isolated the power of PC/PLC.
- (2) Use EMIFIL to the wire or reduce carrier frequency properly

3.7 EMC Installation Instruction

Inverter outputs PWM wave, it will produce electromagnetic noise. To reduce the interference, EMC installation will be introduced in this section from noise suppression, wire connection, grounding, leakage current and filter of power supply

3.7.1 Noise Suppression

(1) Noise Type

Noise is unavoidable during inverter operation. Its influence over peripheral equipment is related to the noise type, transmission means, as well as the design, install action, wiring and grounding of the driving system




(2) Noise Suppression Methods

Path	Noise suppression methods
2	If a closed loop is formed between the peripheral equipment and the inverter
	wiring,the grounding leakage of the inverter will misoperate the equipment.
	Solution: Remove the grounding of the peripheral equipment.
	When peripheral equipment share the same power source with the inverter, the
	noise transmitted through the power line may misoperate the peripheral
3	equipment.
	Solution: Mount a noise filter at inverter input side or isolated the peripheral
	equipment with an isolated transformer or power filter.
	Electronic equipment such as computers, measuring meters, sensors and radio
	equipment, when in the same cabinet with inverter, with their wiring close to the
	inverter, may misoperate due to radio interference.
	Solution: (1) The susceptible equipment and its signal lines should be kept away
45	from the inverter. Use shielded cable for the signal line. Ground the shielding
6	coat. Protect the signal cable with a metal pipe and keep it off the inverter
	input/output cable. When crossing of the signal line and the inverter
	input/output cables is inevitable, make sure it is orthogonal. (2) Mount radio noise
	filter or linear noise filter (choke coil) to the input/output side of the inverter to
	suppress the radio noise.

Table2-5 Noise suppression method

3.7.2 Wiring Connection and Grounding

(1) Please do not to wire motor cable (from inverter to motor) in parallel with power cable and keep at least 30cm from each other.

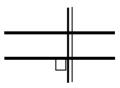

Power cable/Motor cable

Fig. 3-16 orthogonal wiring

(2) Please try to arrange the motor cable through Control signal cable

metal pipe or in metal wiring groove.

- (3) Please use shielded cables control signal cable, and connect the shielding coat to PE terminal of inverter with proximal grounding to inverter.
- (4) PE grounding cable should be directly connected to the earth plate.
- (5) The control signal cable shouldn't be in parallel with strong electricity cable(power cable/motor cable). They should not be bent together and should be kept away as least 20cm from each other. If cable crossing is inevitable, please make sure it is same as Fig. 3-1 6
- (6) Please ground the control signal cable separately with power cable/motor cable.
- (7) Please don't connect other devices to inverter power input terminals(R/S/T).


Chapter 4 Running of Inverter

4.1 Running of Inverter

4.1.1 Running Command Channels

There are three channels for inverter receiving commands like START,STOP, JOG and others.

Control panel

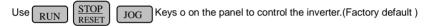

Control terminal

Use one of terminals among X1~X7 and COM to constitute a 2-wire control mode.

Serial port

Use upper computer (PC/PLC) or Master inverter to control Slave inverter to start or stop via serial port.

The command channels can be selected by setting Function Code P0.03, or by multifunctional input terminal (function code P3.00-P3.09).

Note: These three channels are all switchable. Please make debugging before switch so as to avoid equipment damage and personal injury.

4.1.2 Frequency setting channel

There are 8 kinds of frequency setting channels as follow:

0: by control panel key, no memory after power off

1: by control panel wkey, with memory after power off

2: analog setting via VI terminal

3: analog setting via CI terminal

4: analog setting via WI terminal

- 5: Pulse terminal setting (PULSE)
- 6: combination setting
- 7: Simple PLC function
- 8: PID setting
- 9: serial port setting (remote control)

4.1.3 Inverter Running States

When inverter power on, there are two states which are Standby and running state.

Standby state: When power switch on, inverter will be in standby state before receiving control command. Or receiving Stop command during inverter running, inverter will stop and standby.

Running state: After running control command is received, the inverter enters running state

The Running Modes of Inverter

There are five running modes according to priority which are JOG running, close loop running, PLC running, multi-stage speed running and normal running as shown in Fig.4-1.

0: JOG running

In stopping state, after receiving JOG running command, the inverter will run according to JOG frequency, for example, by pressing control panel REV key to give JOG command(refer to function codeP2.00~P3.02).

1: Close loop running

By setting close loop running control parameter enabled (P0.01=8), the inverter will enter close loop running, that is PI regulation (refer to function code P6). To make close loop running invalid, please set multifunctional input terminal (function22) and switch to lower priority running mode.

2: PLC running

By setting PLC function parameter enabled (P0.01 =7), the inverter will enter PLC running mode and run according to preset running mode (refer to function code PB).

3: Multi-stage speed running

By setting non-zero combination of multifunctional input terminal (function12,13,14, 15) and selecting multi-frequency 1-15, the inverter will enter multi-stage speed running mode(refer to function code PB.00~PB.15).

4: Normal running

Open loop running mode of inverter.

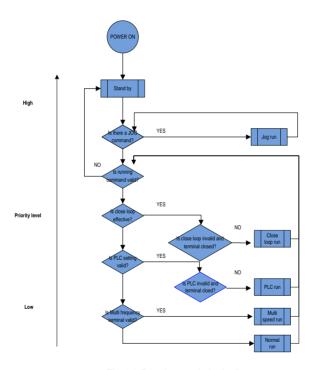


Fig.4-1 Running mode logic diagram

The above 5 kinds of running modes can be running in multiple frequency setting channel except JOG running. PLC running, multi-stage speed running and normal running can carry out swing frequency running

4.2 Operation and Using of the Control Panel

4.2.1 Control Panel Layout

User can control inverters' start, frequency adjust, stop, braking, setup the running parameters and control peripheral equipment through control panel and control terminal

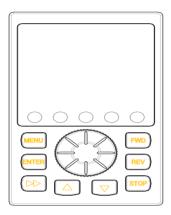


Fig. 4-2 Control panel diagram

4.2.2 Control Panel Function

There are 8 keys and 1 analog potentiometer on the inverter's panel.

The function are shown as follow:

Key	Name	Function
FWD	Forward running key	Press this key to forward run.
REV	Multi function key	The default function is Reverse. User can define the key by P7.00

STOP	Stop/Reset	When inverter running at keypad commend mode, pressing the key, inverter will stop. When inverter is fault, pressing the key, inverter will reset.		
MENU	Function/Data key	Enter or exit programming		
	Up key	Increase of data or code		
	Down key	Decrease of data or code		
>>	Shift/ Monitor key	In the programming state, press this key to change the data's revising bit. In other state, it will switch monitoring parameter		
ENTER	Save/switch key	In the programming state, press this key to enter the next menu or save the function code data.		
	Digital potentiometer	Left rotation= key; Right rotation= Key Press= ENTER		

4.2.3 LED Display and Indictor Description

There are a 5 digits LED display,3 unit indicators and 2 state indicators. These 3 unit indicators have 6 kinds of combinations corresponding to 6 kinds of unit indicating as Fig.4-3

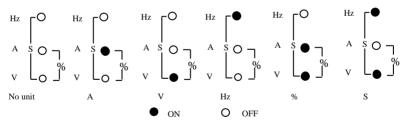


Fig. 4-3 Indicator state and unit indicating

Table 4-2 State indicator description

	Item	Function Description						
Displa	LED digital	Display	inverter's	running	state	parameters	and	setting

y functio	State	RUN	Forward indicator, motor run forward COCAL/REMOT: Lighting off, Keypad control
n	indicat or	LOCAL	 LOCAL/REMOT: Constant lighting, terminal control LOCAL/REMOT: Flashing, Serial port control.

4.2.4 Control Panel Display State

The control panel display state includes parameter displaying in stopping state, function code parameter displaying in programming state, fault displaying in alarm state, and parameter displaying in running state.

Parameter displaying in stopping state

When inverter is in stopping state, panel displays stopping state monitoring parameter which usually is setting frequency, shown as Fig.4-4 B.

Press key to display the other monitoring parameter (The inverter default displays the monitoring parameters which setting by Pd.48).



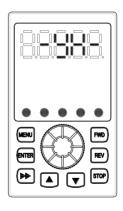




Fig.A Initializing after power on

Fig.B Display and flashing in stopping state

Fig.C Display without flashing in running state

Fig.4-4 Parameter display in initialization, stopping and running state.

B. Parameter displaying in running state

The inverter enters running state after receiving valid running command, and the panel

displays running state monitoring parameter. The default displaying is output frequency (b-00 monitoring parameter) shown as Fig.4-4 C.

Press y can display the monitoring parameter in running state (defined by function code P7.02 and 7.03).

C. Fault displaying in alarm state

The Inverter enters fault alarm display state after fault signal detected. The displayed fault code will be flashing.

Press key to check fault related parameter. When checking fault related parameter, press MENU key for programming, refer to PA group. After finding the fault reason,.

Press STOP key, Terminal or Communication command to reset.

If the fault still exists, it will keep displaying the fault code

Note:

To some serious fault such as IGBT protection, over current, over voltage, etc. Don't reset the inverter before clearing the fault for sure, otherwise there is a danger of damage.

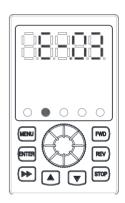


Fig. 4-5 Fault alarm display state

D. Function code programming state

In the state of stopping, running, and fault alarm, press MENU key to enter programming state (If password is required, enter password before programming. Please refer to Pd.00 description and Fig.4-9). The programming state includes three level display menus shown as Fig.4-6 which in order are function code group —> function code number function code parameter. Press MENU key to enter each menus. When in function code

parameter display menu, press MENU key to save parameter, press MENU key to go back to previous menu without parameter saving.

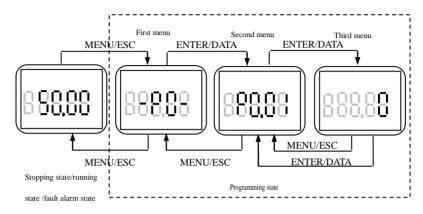


Fig. 4-6 Control panel programming state

4.2.5 Control Panel Operation

Through the operating panel of inverter for various operations, for example as follows:

A. Switching display of state monitoring parameter

Press key to display monitoring parameter. It display the value of this monitoring parameter shown as Fig.4-7. Display parameter is setting by P7.02, P7.03

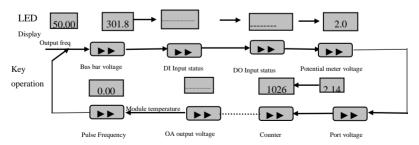


Fig. 4-7 Operation to display monitoring parameter

B. Function code parameter setting

For example, to set parameter code P2.09 from 5.00Hz to 8.50Hz.

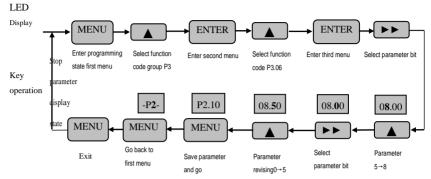


Fig. 4-8 Example of function code parameter setting

Note: In third level menu, if the parameter displayed is not in flashing, it means that this function code is unable to be revised. Probably the reasons are:

- (1) This function code parameter is unmodifiable, such as actual detected state parameter, record running parameter, etc.
- (2) This function code parameter can not be revised in running state. It just can be revised in stopping state.
- (3) The parameter is under protection. When function code Pd.04 is 1, all function code parameter can not be revised. This is parameter protection to avoid fault operation. Set Pd.04 unit's place as 0 to make modification available.

C. JOG running operation

Following is an example. Suppose it is in panel control mode and in stopping state, JOG running frequency is 5Hz.

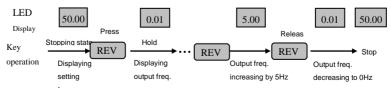


Fig.4-9 JOG running operation

D, Password authentication operation

Suppose Pd.00 password parameter has been set as "2345". The authentication operation is shown as Fig. 4-10. The bold figure represents the flashing bit.

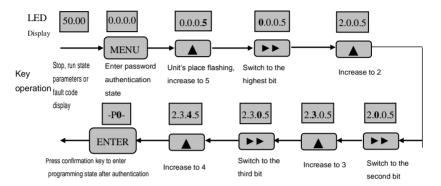


Fig. 4-10 Example of password authentication operation

E. Inquiring fault related parameter:

Note: When check the fault parameter, user can check function code PA.14-PA.40, the group of fault record

F、Frequency setting operation by control panel ▲、▼keys

Suppose it is in stopping state and P0.01=1, the operation is as follow.

- (1) Frequency integral adjustment.
- (2) As press key and hold it, LED begins to increase from unit's digit to ten's digit, and then to hundred's digit. If release key and then press key again, LED will increase from unit's digit again.
- (3) As press wey and hold it, LED begins to decrease from unit's digit to ten's digit ,

and then to hundred's digit. If release key and then press key again, LED will decrease from unit's digit again.

4.3 Inverter power switch on

4.3.1 Inspection Before Power on

Please perform cable connection according to the requirements in manual..

4.3.2 Initial Power on Operation

After inspecting cable connection and power source for sure, switch on inverter input AC power switch. The inverter's LED on control panel will display dynamic start menu. When it displays set frequency, it means initialization has been completed.

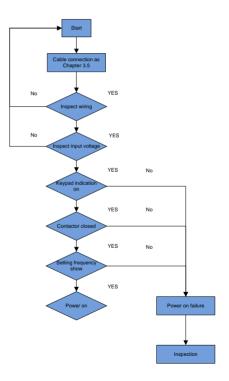


Fig. 4-12 Inverter first power

Chapter 5 Function Code Table

5.1 The symbols in the function code table are described as follows

"o": The parameter can be modified when the AC drive is in either stop or running state.

"x": The parameter can not be modified when the AC drive is in the running state.

"* ": The parameter is factory parameter and can not be modified.

5.2 Standard Function Parameters

	Group P0: Standard Function Parameter							
Function	Parameter Name	Setting Range	Minimum	Default	Proper			
Code			Unit		ty			
P0.00	Control mode	V/F control Sensorless vector control(SVC) Sensor vector control	1	0	×			
P0.01	Main frequency source 1 selection	O: Digital setting 1(P0.02, UP/DOWN can modify,non-retentive at power failure) 1: Digital setting 2(P0.02, UP/DOWN can modify,retentive at power failure) 2: VI analog setting (VI-GND) 3: Clanalog setting (CI-GND) 4: WI analog setting (Reserved) 5: Pulse setting 6: Multi-reference 7: Simple PLC 8: PID 9: 485 communication	1	0	×			
P0.02	Preset frequency	P0.07lower limit frequency ~ P0.06 upper limit frequency	0.01HZ	50.00HZ	0			

		T			
P0.03	Command source selection	0: Operation panel control (LED off) 1: Terminal control (LED on) 2: Communication control (LED blinking)	1	0	O
P0.04	Rotation direction	0:Same direction 1: Reverse direction	1	0	0
P0.05	Maximum frequency	50.00Hz∼320.00Hz	0.01Hz	50.00Hz	×
P0.06	Frequency upper limit	Frequency lower limit to maximum frequency (P0.05)	0.01Hz	50.00Hz	0
P0.07	Frequency lower	0.00Hz to frequency upper limit(P0.06)	0.01Hz	0.00Hz	0
P0.08	Source of frequency upper limit	0: Set by P0.06 1:VI 2:CI 3:WI Reserved 4:PULSE setting 5: Communication setting	1	0	×
P0.09	Frequency upper limit offset	0.00Hz to maximum frequency (P0.05)	0.01Hz	0.00Hz	0
P0.10	Carrier frequency	0.5KHZ~16.0KHZ	0.1KHZ	Model dependent	0
P0.11	Carrier frequency adjustment with temperature	0: No 1: Yes	1	0	0
P0.12	Acceleration time 1	0.1~6000.0s	0.1s	Model dependent	0
P0.13	Deceleration time 1	0.1~6000.0s	0.1s	Model dependent	0
P0.14	Acceleration/ Deceleration time unit	0: 1s 1: 0.1s 2: 0.01s	1	1	×
P0.15	Acceleration/ Deceleration time base frequency	0: Maximum frequency (P0.05) 1: set frequency 2: 100HZ	1	0	×
P0.16	Auxiliary frequency	The same as P0.01(Main	1	0	×

	source 2 selection	frequency source 1 selection)			
P0.17	Range of auxiliary frequency 2 for 1 and 2 operation	O: Relative to maximum frequency 1: Relative to main frequency 1	1	0	0
P0.18	Range of auxiliary frequency 2 for 1 and 2 operation	0%-150%		100%	0
P0.19	Frequency source selection	Unit's digit: (Frequency spurce selection) 0: Main frequency source 1 1: 1 and 2 operation (operation relationship determined by ten's digit) 2: Switchover between 1 and 2 3: Switchover between 1 and "1 and 2 operation" 4: Switchover between 2 and "1 and 2 operation" Ten's digit (1 and 2 operation relationship) 0: 1+2 1: 1 - 2 2: Maximum 3: Minimum	01	00	0
P0.20	Frequency offset of auxiliary frequency source for 1 and 2 operation	0.00Hz to maximum frequency (P0.05)	0.01HZ	0.00HZ	0
P0.21	Frequency reference resolution	1: 0.1Hz 2: 0.01Hz	1	2	×
P0.22	Retentive of digital setting frequency upon power failure	0: Not retentive 1: Retentive	1	0	0
P0.23	Base frequency for UP/DOWN modification during running	Running frequency Set frequency	0	0	×
P0.24	Binding command	Unit's digit (binding operation panel command to frequency	0001	0000	0

P1.01

Startup frequency

			ı — —			
	source to frequency	source)				
	source	0: No binding				
		1: Frequency source by digital				
		setting				
		2: VI setting (VI-GND)				
		3: CI setting (CI-GND)				
		4: WI setting (Reserved)				
		5: PULSE setting				
		6: Multi-reference				
		7: Simple PLC				
		8: PID setting				
		9: 485 communication				
		setting				
		Ten's digit: Binding terminal				
		command to frequency soure				
		Hundred's digit: Binding				
		communication command to				
		frequency source				
		Thousand's digit:Binding				
		running command to				
		frequency source				
P0.25	O/D to an a distribution	1: G type		Mode	I	*
P0.25	G/P type display	2: P type	1	depend	ent	-
		0: Motor parameter group 1				
	Motor parameter	1: Motor parameter group 2				
P0.26	group selection	2: Motor parameter group 3	1	0		×
	9	Motor parameter group 4				
	Serial	2stor parameter group 4				
P0.27	communication	0:MODBUS protocol	1	0		×
	protocol					
		Group P1: Start/Stop Paramet	ter			
Function			Minimu			
	Parameter Name	Setting Range		Default	Pro	perty
Code			m Unit			
		0: Direct start				
		1: Rotational speed tracking		_		0
P1.00	Start mode	restart	1	0		O
		2: Pre-excited start				

0.00~10.00Hz

0.00Hz

0.01Hz

P1.02	Startup frequency	0.0∼100.0s	0.1s	0.0s	×
P1.03	Startup DC braking current/ Pre-excited current	0%~100%	1%	0%	×
P1.04	Startup DC braking time/ Pre-excited time	0.0~100.0s	0.1s	0.0s	×
P1.05	Stop mode	Decelerate to stop Coast to stop	1	0	0
P1.06	Initial frequency of stop DC braking	0.00Hz to maximum frequency	0.00Hz	0.00Hz	0
P1.07	Waiting time of stop DC braking	0.0∼100.0s	0.1s	0.0s	0
P1.08	Stop DC braking time	0.0∼100.0s	0.1s	0.0s	0
P1.09	Stop DC braking current	0%~100%	1%	0%	0
P1.10	Brake use ratio	0%~100%	1%	100%	0
P1.11	Rotational speed tracking mode	From frequency at stop From zero speed From maximum frequency	1	0	×
P1.12	Rotational speed tracking speed	1~100	1	20	0
P1.13	Acceleration/ Deceleration mode	C: Linear acceleration/ deceleration S-curve acceleration/ deceleration	1	0	×
P1.14	Time proportion of S-curve start segment	0.0%~ (100.0%~P1.15)	0.1%	30.0%	×
P1.15	Time proportion of S-curve end segment	0.0%~ (100.0%~P1.14)	0.1%	30.0%	×

Group P2: Auxiliary Functions							
Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Propert y		
P2.00	JOG running frequency	0.10 Hz to maximum frequency	0.01Hz	5.00Hz	0		
P2.01	JOG acceleration time	0.1∼6500.0s	0.1s	Model dependent	0		
P2.02	JOG deceleration time	0.1~6500.0s	0.1s	Model dependent	0		
P2.03	Acceleration time	0.1∼6500.0s	0.1	Model dependent	0		
P2.04	Deceleration time 2	0.1~6500.0s	0.1	Model dependent	0		
P2.05	Acceleration time	0.1∼6500.0s	0.1	Model dependent	0		
P2.06	Deceleration time 3	0.1~6500.0s	0.1	Model dependent	0		
P2.07	Acceleration time	0.1~6500.0s	0.1	Model dependent	0		
P2.08	Deceleration time 4	0.1~6500.0s	0.1	Model dependent	0		
P2.09	Jump frequency	0.0Hz to maximum frequency	0.01Hz	0.00Hz	0		
P2.10	Jump frequency	0.0Hz to maximum frequency	0.01Hz	0.00Hz	0		
P2.11	Jump frequency amplitude	0.0Hz to maximum frequency	0.01Hz	0.00Hz	0		
P2.12	Forward/Revers e rotation dead-zone time	0.0S~3000.0s	0.1s	0.0s	0		
P2.13	Reverse control	0: Enabled 1: Disabled	0	0	0		
P2.14	Running mode when set frequency lower than frequency	O: Run at frequency lower limit 1: Stop 2: Run at zero speed	0	0	0		

	lower limit				
P2.15	Drop control	0.00HZ~10.00HZ	0.01HZ	0.00HZ	0
P2.16	Accumulative power-on time threshold	0h∼65000h	1h	0h	0
P2.17	Accumulative running time threshold	0h∼65000h	1h	0h	Ō
P2.18	Startup protection	0: NO 1: YES	1	0	0
P2.19	Frequency detection value (FDT1)	0.00Hz to maximum frequency	0.01Hz	50.00Hz	0
P2.20	Frequency detection hysteresis (FDT1)	0.0%~100.0%(FDT1 level)	0.1%	5.0%	0
P2.21	Detection range of frequency reached	0.0%~100.0% (maximum frequency)	0.1%	0.0%	0
P2.22	Jump frequency during acceleration /deceleration	0: Disabled 1: Enabled	1	0	0
P2.23	Frequency switchover point between acceleration time 1 and acceleration time 2	0.00Hz to maximum frequency	0.01Hz	0.00HZ	0
P2.24	Frequency switchover point between deceleration time 1 and deceleration time 2	0.00Hz to maximum frequency	0.01Hz	0.00HZ	0

P2.25	Terminal JOG preferred	0: Disabled 1: Enabled	1	0	0
P2.26	Frequency detection value (FDT2)	0.00Hz to maximum frequency	0.01Hz	50.00Hz	0
P2.27	Frequency detection hysteresis (FDT2)	0.0%~100.0%(FDT2 level	0.1%	5.0%	0
P2.28	Any frequency reaching detection value 1	0.00Hz to maximum frequency	0.01HZ	50.00Hz	0
P2.29	Any frequency reaching detection amplitude 1	0.0%~100.0% (maximum frequency)	0.1%	0.0%	0
P2.30	Any frequency reaching detection value 2	0.00Hz to maximum frequency	0.01HZ	50.00Hz	0
P2.31	Any frequency reaching detection amplitude 2	0.0%~100.0% (maximum frequency)	0.1%	0.0%	0
P2.32	Zero current detection level	0.0 %~300.0 %(100.0% rated motor current)	0.1%	5.0%	0
P2.33	Zero current detection delay time	0.01S~600.00S	0.01S	0.10\$	0
P2.34	Output overcurrent threshold	0.1 %~300.0 % (100.0% rated motor current)	0.1%	200.0%	0
P2.35	Output overcurrent detection delay time	0.01S~600.00S	0.01S	0.00\$	0

			I		
P2.36	Any current reaching 1	0.0 %~300.0 %(100.0% rated motor current)	0.1%	100.0 %	0
P2.37	Any current reaching 1 amplitude	0.0 %~300.0 %(100.0% rated motor current)	0.1%	0.0 %	0
P2.38	Any current reaching 2	0.0 %~300.0 %(100.0% rated motor current)	0.1%	100.0 %	0
P2.39	Any current reaching 2 amplitude	0.0 %~300.0 %(100.0% rated motor current)	0.1%	0.0 %	0
P2.40	Timing function	0: Disabled 1: Enabled	1	0	0
P2.41	Timing duration selection	0: P2.42 setting 1: VI 2: CI 3: WI (Reserved)	1	0	0
P2.42	Timing duration	0.0Min∼6500.0Min	0.1Min	0.0Min	0
P2.43	VI input voltage lower limit	0.00V~P2.44	0.01V	3.10V	0
P2.44	VI input voltage upper limit	P2.44~10.00V	0.01V	6.80V	0
P2.45	Module temperature threshold	0~100°C	1	75°C	0
P2.46	Cooling fan	Fan working during running Fan working continuously	1	0	0
P2.47	Wakeup frequency	Dormant frequency (P2.49) \sim maximum frequency	0.01HZ	0.00HZ	0
P2.48	Wakeup delay time	0.0S~6500.0S	0.1S	0.0\$	0
P2.49	Dormant frequency	0.00Hz to wakeup frequency P2.47	0.01HZ	0.00HZ	0
P2.50	Dormant delay time	0.0S~6500.0S	0.1S	0.0\$	0
P2.51	Current running time reached	0.0∼6500.0Min	0.1Min	0.0Min	0

O: No function	Group P3 : Input Terminals								
1:Forward RUN (FWD) 2: Reverse RUN (REV) 3: Three-line control 4: Forward JOG (FJOG) 5: Reverse JOG (RJOG) 6: Terminal UP 7: Terminal DOWN 8: Coast to stop (FRS) 9: Fault reset 10: RUN pause 11: Normally open(NO) input of external fault 12: Mulit-reference terminal 1		Parameter Name	Setting Range		Default	Property			
17: lerminal 2 for acceleration /deceleration time selection 18: Frequency source switchover 19: UP/DOWN setting clear (terminal, operation panel) 20: Command source switchover 1 21: Acceleration/Deceleration			1:Forward RUN (FWD) 2: Reverse RUN (REV) 3: Three-line control 4: Forward JOG (FJOG) 5: Reverse JOG (RJOG) 6: Terminal UP 7: Terminal DOWN 8: Coast to stop (FRS) 9: Fault reset 10: RUN pause 11: Normally open(NO) input of external fault 12: Mulit-reference terminal 1 13: Mulit-reference terminal 2 14: Mulit-reference terminal 4 16: Terminal 1 for acceleration /deceleration /deceleration time selection 17: Terminal 2 for acceleration /deceleration time selection 18: Frequency source switchover 19: UP/DOWN setting clear (terminal, operation panel) 20: Command source switchover 1 21:		1	×			

	1		1	
		22: PID pause		
		23: PLC status reset		
		24: Swing pause		
		25: Counter input		
		26: Counter reset		
		27: Length count input		
		28: Length reset		
		29: Torque control prohibited		
		30: PULSE input (enabled		
		only for X5)		
		31: Reserved		
		32: Immediate DC braking		
		33: Normally		
		closed(NC)input of external		
		fault		
		34: Frequency modification		
		forbidden		
		35: Reverse PID action		
		direction		
		36: External STOP terminal		
		1		
		37: Command source		
		switchover terminal 2		
		38: PID integral pause		
		39: Switchover between		
		main frequency source X		
		and preset frequency		
		40: Switchover between		
		main frequency source Y		
		and preset frequency		
		41: Motor selection terminal		
		1		
		42: Reserved		
		43: PID parameter		
		switchover		
		44: User-defined fault 1		
		45: User-defined fault 2		
		46: Speed control/Torque		
		control switchover		
L	l			

		47: Emergency stop 48: External STOP terminal 2 49: Deceleration DC braking 50: Clear the current running time 51: Switchover between two-line mode and three-line mode 52: Reverse forbidden 53-59: Reserved			
P3.01	X2 function selection	Same as above	1	4	×
P3.02	X3 function selection	Same as above	1	9	×
P3.03	X4 function selection	Same as above	1	12	×
P3.04	X5 function selection	Same as above	1	13	×
P3.05	X6 function selection	Same as above	1	0	×
P3.06	X7 function selection	Same as above	1	0	×
P3.07	X8 function selection	Reserved	1	0	×
P3.08	X9 function selection	Reserved	1	0	×
P3.09	X10 function selection	Reserved	1	0	×
P3.10	Al1 function selection (DI)	0~59	1	1	×
P3.11	Al2 function selection (DI)	0~59	1	1	×
P3.12	Al3 function selection (DI)	0~59	1	1	×
P3.13	Terminal filter time	0.000S~1.000S	1	0.010S	×
P3.14	Terminal command mode	0: Two-line mode 1 1: Two-line mode 2	0	0	0

		2: Three –line mode 1 3: Three –line mode 2			
P3.15	Terminal UP/DOWN rate	0.001HZ/S ~ 65.535HZ/S	0. 001Hz/s	1.00HZ/ S	0
P3.16	VI minimum input	0.00V ~ P3.15	1	0.00V	0
P3.17	Corresponding setting of VI minimum input	-100.0% ~ +100.0%	1	0.0%	0
P3.18	VI maximum input	P3.13 ~ +10.00V	0.01V	10.00V	0
P3.19	Corresponding setting of VI maximum input	-100.0% ~ +100.0%	0.01Hz	100.0%	0
P3.20	VI filter time	0.00S ~ 10.00S	0.01S	0.10\$	0
P3.21	CI minimum input	0.00V ~ P3.20	0.01V	0.00V	0
P3.22	Corresponding setting ofCl minimum input	-100.0% ~ +100.0%	0.1%	0.0%	0
P3.23	CI maximum input	P3.18 ~ +10.00V	0.01V	10.00V	0
P3.24	Corresponding setting of CI maximum input	-100.0% ~ +100.0%	0.01Hz	100.0%	0
P3.25	CI filter time	0.00S ~ 10.00S	0.01S	0.10\$	0
P3.26	WI minimum input	0.00V ~ P3.25	0.01V	0.00V	0
P3.27	Corresponding setting of WI minimum input	-100.0% ~ +100.0%	0.1%	0.0%	0
P3.28	WI maximum input	P3.23 ~ +10.00V	0.01V	10.00V	0
P3.29	Corresponding setting of WI maximum input	-100.0% ~ +100.0%	0.01Hz	100.0%	0
P3.30	WI filter time	0.00S ~ 10.00S	0.01S	0.10\$	0
P3.31	Pulse minimum input	0.00KHZ ~ P3.30	0.01V	0.00KH Z	0
P3.32	Corresponding setting of pulse	-100.0% ~ +100.0%	0.1%	0.0%	0

	minimum input				
	Pulse maximum			50.00K	
P3.33	input	P3.28 ∼100.00KHZ	0.01V	HZ	0
	Corresponding				
P3.34	setting of pulse	-100.0% ~ +100.0%	0.1%	100.0%	0
	maximum input				
P3.35	Pulse filter time	0.00S ~ 10.00S	0.01S	0.10\$	0
P3.36	VI curve selection	Unit's digit: VI curve selection 1: Curve1 (2 points, see P3.16~P3.19) 2: Curve 2 (2 points, see P3.21~P3.24) 3: Curve 3 (2 points, see P3.26~P3.29) 4: Curve 4 (4 points, see PF.20~PF.27) 5: Curve 5 (4 points, see PF.28~PF.35) Ten's digit: CI curve selection, same as VI Hundred's digit: WI curve selection, same as VI	111	321	o
P3.37	Setting for AI less than minimum input	Unit's digit: setting for VI less than minimum input 0: Minimum value 1: 0.0% Ten's digit: setting for CI less than minimum input Hundred's digit: setting for WI less than minimum input	111	000	0
P3.38	X1 delay time	0.0S∼ 3600.0S	0.1S	0.0\$	×
P3.39	X2 delay time	0.0S∼ 3600.0S	0.1S	0.0\$	×
P3.40	X3 delay time	0.0S∼ 3600.0S	0.1S	0.08	×
P3.41	X valid mode selection 1	0: High level valid 1: Low level valid Unit's digit: X1 Ten's digit: X2	11111	00000	×

		Hundred's digit: X3 Thousand's digit: X4			
		Ten thousand's digit: X5			
P3.42	X valid mode selection 2	O: High level valid 1: Low level valid Unit's digit: X6 Ten's digit: X7 Hundred's digit: X8 Thousand's digit: X9	11111	00000	x
		Ten thousand's digit: X10			
P3.43	AI as valid status selection of DI	O: High level valid 1: Low level valid Unit's digit: VI Ten's digit: CI Hundred's digit: WI	111	111	×

	Group P4: Output Terminals							
Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Property			
P4.00	FM terminal output mode	0: Pulse output (FMP) 1: Switch signal output (FMR)	1	0	0			
P4.01	FM function(open-co llector output terminal)	O: No output 1: AC drive running 2: Fault output (stop) 3: Frequency-level detection	1	0	0			
P4.02	Relay function T/A-T/B-T/C	FDT1 output 4: Frequency reached 5: Zero-speed running(no	1	2	0			
P4.03	Extension card relay function (P/A-P/B-P/C)	output at stop) 6: Motor overload pre-warning 7: AC drive overload pre-warning 8: Set count value reached 9: Designated count value reached	1	0	0			

	1	1.2	1	1	I
		10: Length reached			
		11: PLC cycle complete			
	Y1 function	12: Accumulative running time			
P4.04	selection	reached	1	1	0
	(Reserved)	13: Frequency limited			
	(Iteserveu)	14: Torque limited			
		15: Ready for RUN			
		16: VI > CI			
		17: Frequency upper limit			
		reached			
		18: Frequency lower limit			
		reached			
		19: Under voltage state output			
		20: Communication setting			
		21: Positioning complete			
		22: Positioning approach			
		23: Zero-speed running 2			
		(having output at stop)			
		24: Accumulative power-on			
		time reached			
		25: Frequency level detection			
		FDT2 output			
		26: Frequency 1 reached			
		27: Frequency 2 reached			
	Y2 function	28: Current 1 reached			
P4.05	selection	29: Current 2 reached	1	4	0
	(Reserved)	30: Timing reached			
	(Iteserveu)	31: VI input limit exceeded			
		32: Load becoming 0			
		33: Reverse running			
		34: Zero current state			
		35: Module temperature			
		reached			
		36: Software current limit			
		exceeded			
		37: Frequency lower limit			
		reached (having output at			
		stop)			
		38: Alarm output)			
		39: Motor overheat warning	1		
		40: Current running time			
		reached			
		41: Fault output (there is no	L		

		output if it is the coast to stop fault and under voltage occurs)			
P4.06	FMP function selection	O: Running frequency I: Set frequency C: Output current C: Output torque Utput power	1	0	
P4.07	AO1 function selection	5: Output voltage 6: Pulse input (100.0% at 100.0KHZ) 7: VI 8: CI 9: WI	1	0	0
P4.08	AO2 function selection	10: Length 11: Count value 12: Communication setting 13: Motor rotational speed 14: Output current (100.0% at 1000.0A) 15: Output voltage (100.0% at 1000.0V) 16: Output torque (actual value)	1	1	
P4.09	Maximum FMP output frequency	0.01KHZ ~ 100.00KHZ	0.01KHZ	50.00KH Z	0
P4.10	AO1 offset coefficient	-100.0% ~ +100.0%	0.001	0.0%	0
P4.11	AO1 gain	-10.00 ~ +10.00	0.01	1.00	0
P4.12	AO2 offset coefficient	-100.0% ~ +100.0%	0.001	0.0%	0
P4.13	AO2 gain	-10.00 ~ +10.00	0.01	1.00	0
P4.14	FMR output delay time	0.0S ∼ 3600.0S	0.1s	0.0s	0
P4.15	Relay 1 output delay time	0.0S ~ 3600.0S	0.1s	0.0s	0

P4.16	Relay 2 output delay time	0.0S ~ 3600.0S	0.1s	0.0s	0
P4.17	Y1 output delay time	0.0S ~ 3600.0S	0.1s	0.0s	0
P4.18	Y2 output delay time	0.0S ~ 3600.0S	0.1s	0.0s	0
P4.19	DO valid mode selection	0: Positive logic 1: Negative logic Unit's digit: FMR Ten's digit: RELAY1 Hundred's digit: RELAY2 Thousand's digit: Y1 Ten thousand's digit: Y2	11111	00000	0

Group P5: V/F Control Parameters

Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Property
P5.00	V/F curve setting	0: Linear V/F 1: Multi-point V/F 2: SquareV/F 3:1.2-power V/F 4:1.4-power V/F 6:1.6-power V/F 8:1.8-power V/F 9: Reserved 10: V/F complete separation 11: V/F half separation	1	0	×
P5.01	Torque boost	0.0%(fixed torque boost) 0.1% \sim 30.0%		Model depende nt	Ö
P5.02	Cut-off frequency of torque boost	0.00HZ to maximum output frequency	0.01HZ	50.00HZ	×
P5.03	Multi-point V/F frequency 1 (F1)	0.00HZ ~ P6.05	0.01HZ	0.00HZ	×
P5.04	Multi-point V/F voltage 1 (V1)	0.0% ~ 100.0%	0.1%	0.0%	×
P5.05	Multi-point V/F frequency 2 (F2)	P6.03 ~ P6.07	0.01HZ	0.00HZ	×
P5.06	Multi-point V/F	0.0% ~ 100.0%	0.1%	0.0%	×

	voltage 2(V2)				
P5.07	Multi-point V/F frequency 3 (F3)	P6.05 to rated motor frequency	0.01HZ	0.00HZ	×
P5.08	Multi-point V/F voltage 3 (V3)	0.0% ~ 100.0%	0.1%	0.0%	×
P5.09	V/F slip compensation gain	0.0% ~ 200.0%	0.1%	0.0%	0
P5.10	V/F over-excitation gain	0 ~ 200	1	64	0
P5.11	V/F oscillation suppression gain	0 ~ 100	1	Model depende nt	0
P5.13	Voltage source for V/F separation	0: Digital setting 1: VI 2: CI 3: WI 4: Pulse setting 5: Multi-reference 6: Simple PLC 7: PID 8: Communication setting (100.0% corresponds to the rated motor voltage)	1	0	0
P5.14	Voltage digital setting for V/F separation	0V to rated motor voltage	1	0V	0
P5.15	Voltage rise time of V/F separation	0.0S ~ 1000.0S	0.1S	0.0\$	0

Group P6: PID Function							
Function Code		ameter ame	Setting Range	Minimum Unit	Default	Property	
P6.00	PID	setting	0: P6.01 setting	1	0	0	

	ı	T	ı	ı	1
		2: CI			
		3: WI			
		4: Pulse setting			
		5: Communication setting			
		6: Multi-reference			
	PID digital	0.00/ 400.00/			
P6.01	setting	0.0% ~100.0%	1	50	0
		0: VI			
		1: CI			
		2: WI			
		3: VI-CI			
P6.02	PID feedback	4: Pulse setting	1	0	0
1 0.02	source	5: Communication setting			, ,
		6: VI+CI			
		7: MAX(VI + CI)			
	DIDti	8: MIN(VI , CI)			
P6.03	PID action	0: Forward action	1	0	0
	direction	1: Reverse action			
P6.04	PID setting	0 ~ 65535	1	1000	0
1 0.04	feedback range				, ,
Do 05	Proportional gain		0.1	00.0	
P6.05	KP1	0.0 ~ 100.0	0.1	20.0	0
P6.06	Integral time TI1	0.01S ~ 10.00S	0.01S	2.00\$	0
D0 07	Differential time	0.0000 40.0000	0.0040	0.0000	
P6.07	TD1	0.000S ~ 10.000S	0.001S	0.000\$	0
	Cut-off frequency				
P6.08	of PID reverse	0.00 to maximum frequency	0.01	2.00HZ	0
. 0.00	rotation	cioc to maximum requestoy	0.01	2.001.2	
	PID deviation				
P6.09		0.0% ~ 100.0%	0.1%	0.0%	0
	limit		-		
P6.10	PID differential	0.00% ~ 100.00 %	0.01%	0.10%	0
	limit	3.33,3 100.00 /0	0.0170	0.1076	, ,
D0 44	PID setting	0.00 050.000			
P6.11	change time	0.00 ~ 650.00S	0.01S	0.00\$	0
	PID feedback			1	
P6.12	filter time	0.00 ~ 60.00S	0.01S	0.00\$	0
DC 12		0.00 ~ 60.000	0.016	0.000	
P6.13	PID output filter	0.00 ∼ 60.00S	0.01S	0.00S	0

	time				
P6.14	Reserved				0
P6.15	Proportional gain KP2	0.0 ~ 100.0	0.1	20.0	O
P6.16	Integral time TI2	0.01S ~ 10.00S	0.01	2.00\$	0
P6.17	Differential time	0.000S ~ 10.000S	0.001S	0.000\$	0
P6.18	PID parameter switchover condition	No switchover Switchover via Xi Automatic switchover based on deviation Automatic switchover based on running frequency	0.01	0	0
P6.19	PID parameter switchover deviation 1	0.0% ~ P6.20	0.1%	20.0%	0
P6.20	PID parameter switchover deviation 2	P6.19 ~ 100.0 %	0.1%	80.0%	0
P6.21	PID initial value	0. 0% ~100.0 %	1	0. 0%	0
P6.22	PID initial value holding time	0.00 ~ 650.00\$	0.01S	0.00\$	0
P6.23	Maximum deviation between two PID outputs in forward direction	0.00% ~ 100.00%	0.01%	1.00%	0
P6.24	Maximum deviation between two PID outputs in reverse direction	0.00% ~ 100.00%	0.01%	1.00%	0
P6.25	PID integral property	Unit's digit: Integral separated 0: Invalid 1: Valid Ten's digit: whether to stop	00~11	00	0

		integral operation when the output reaches the limit 0: Continue integral operation 1: Stop integral operation			
P6.26	Detection value of PID feedback loss	0.0%: Not judging feedback loss 0.1% \sim 100.0%	0.01Hz	0.0%	O
P6.27	Detection time of PID feedback loss	0. 0S ~20.0S	0.18	1.08	0
P6.28	PID operation at stop	O: No PID operation at stop 1: PID operation at stop	1	0	0

Group P7: Operation Panel and Display

Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Property
P7.00	REV key function selection	O: RVE key disabled 1: Switchover between operation panel control and remote command control(terminal or communication) 2: Switchover between forward rotation and reverse rotation 3: Forward JOG 4: Reverse JOG	1	2	0
P7.01	STOP key function	STOP key enabled only in operation panel control STOP key enabled in any operation mode	1	1	0

		0000∼FFFF			
		Bit00: Running frequency			
		1(Hz)			
		Bit01: Set frequency (Hz)			
		Bit02: Bus voltage(V)			
		Bit03: Output voltage(V)			
		Bit04: Output current(A)			
	LED display	Bit05: Output power(KW)			
P7.02	running	Bit06: Output torque (%)	1	001F	0
	parameters 1	Bit07:DI input status			
	parameters	Bit08:DO output status			
		Bit09:A/1 voltage (V)			
		Bit10:A/2 voltage (V)			
		Bit11:A/3 voltage (V)			
		Bit12: Count value			
		Bit13: Length value			
		Bit14: Load speed display			
		Bit15:PID setting			
		0000∼FFFF			
		Bit00:PID feedback			
		Bit01:PLC stage			
		Bit02:Pulse setting frequency			
		(kHZ)			
		Bit03: Running frequency 2			
		(HZ)			
		Bit04: Remaining running time			
		Bit05:A/1 voltage before			
	LED display	correction (V)			
P7.03	running	Bit06:A/2 voltage before	0.1	0000	0
	parameters 2	correction (V)			
	parameters 2	Bit07:A/3 voltage before			
		correction (V)			
		Bit08: Linear speed			
		Bit09: Current power-on time			
		(Hour)			
		Bit10: Current running time			
		(Min)			
		l '			
		Bit11: Pulse setting frequency			
		(kHZ)	l	l	

		Bit12: Communication setting value			
		Bit13: Encoder feedback speed			
		Bit14: Main frequency X			
		display (HZ)			
		Bit15: Auxiliary frequency Y			
		display (HZ)			
		0000∼FFFF			
		Bit00: Set frequency (HZ)			
		Bit01: Bus voltage(V)			
		Bit02:DI input status			
		Bit03:DO output status			
		Bit04:A/1 voltage (V)			
	LED disaless stee	Bit05:A/2 voltage (V)			
P7.04	LED display stop	Bit06:A/3 voltage (V)	1	0033	0
	parameters	Bit07: Count value			
		Bit08: Length value			
		Bit09:PLC stage			
		Bit10: Load speed			
		Bit11:PID setting			
		Bit12:Pulse setting frequency			
		(kHZ)			
	Load speed				
P7.05	display	0.0001~6.5000	0.0001	1.0000	0
	coefficient				
	Heatsink				
P7.06	temperature of	0.0°C~100.0°C	1	000	*
	inverter module				
P7.07	Product number	0.00~10.00	0.01	-	*
D7.00	Accumulative	OLL, OFFORh	4	000	*
P7.08	running time	0H∼65535h	1	000	*
	Software version				
P7.09	1	0.00~10.00	0.01	9000	*
P7.10	Software version	0.00~10.00	0.01	0.55	*
	2				
P7.11	Number of	Unit's digit: U0-14 number of	0.1	10.0	0
F1.II	decimal places	decimal places	-		

	for load speed	0:0 decimal place			
	display	1:1 decimal place			
		2:2 decimal place			
		3:3 decimal place			
		Ten's digit: U0-19/U0-29			
		number of decimal places			
		1:1 decimal place			
		2:2 decimal place			
D7.40	Accumulative	0 055051		000	*
P7.12	power-on time	0 ~ 65535h	1	000	-
	Accumulative				
P7.13	power	0 ∼ 65535kw·h	0.1	0	*
	consumption				

Group P8: Motor Parameters

Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Propert y
P8.00	Motor type selection	Common asynchronous motor Variable frequency asynchronous motor	1	0	×
P8.01	Rated motor power	0.1KW~1000.0KW	0.1kW	Model dependent	×
P8.02	Rated motor voltage	1V~2000V	1V	Model dependent	×
P8.03	Rated motor current	0.01A~655.35A(AC power≤55KW) 0.1A~6553.5A(AC power≥55KW)	0.01A	Model dependent	×
P8.04	Rated motor frequency	0.01Hz to maximum frequency	0.01Hz	Model dependent	×
P8.05	Rated motor rotational speed	1rpm~65535rpm	1rpm	Model dependent	×
P8.06	Stator resistance (asynchronous motor)	0.001Ω~65.535Ω(AC power≤55KW) 0.0001Ω~6.5535Ω(AC power≥55KW)	0.001Ω	Tuning parameter	×
P8.07	Rotor resistance	0.001Ω~65.535Ω(AC	0.001Ω	Tuning	×

	(asynchronous motor)	power≤55KW) 0.0001Ω∼6.5535Ω(AC power≥55KW)		parameter	
P8.08	Leakage inductive reactance (asynchronous motor)	0.01mH~655.35mH(AC power≤55KW) 0.001mH~65.535mH(AC power≥55KW)	0.01mH	Tuning parameter	×
P8.09	Mutual inductive reactance (asynchronous motor)	0.01mH~6553.5mH(AC power≤55KW) 0.01mH~655.35mH(AC power≥55KW)	0.1mH	Tuning parameter	×
P8.10	No-load current (asynchronous motor)	0.01A∼P8.03(AC power≤55KW) 0.01A∼P8.03(AC power≥55KW)	0.01	Tuning parameter	×
P8.27	Encoder pulses per revolution	1~65535	1	1024	×
P8.28	Encoder type	O: ABZ incremental encoder 1: UVW incremental encoder 2: Resolver 3: SIN/COS encoder 4: Wire-saving UVW encoder	1	0	×
P8.29	Reserved	-			
P8.30	A,B phase sequence of ABZ incremental encoder	0: Forward 1: Reverse	1	0	×
P8.31	Encoder installation angle	0.0~359.9°	0.1°	1	×
P8.32	U,V,W phase sequence of UVW encoder	0: Forward 1: Reverse	1	0	×
P8.33	UVW encoder angle offset	0.0~359.9°	0.1°	0.0°	×
P8.34	Number of pole pairs of resolver	1~65535	1	1	×
P8.37	Auto-tuning selection	O: No auto-tuning 1: Asynchronous motor static auto-tuning 2: Asynchronous motor with-load auto-tuning	1	0	×

	Group P9: Vector Control Parameters					
Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Property	
P9.00	Speed/Torque control mode	0: Speed control 1: Torque control	1	0	×	
P9.01	Speed loop proportional gain 1	1~100	1	30	0	
P9.02	Speed loop integral time1	0.01s~10.00s	0.01s	0.50\$	0	
P9.03	Switchover frequency 1	0.00∼P9.06	0.01Hz	5.00HZ	0	
P9.04	Speed loop proportional gain 2	1~100	1	20	0	
P9.05	Speed loop integral time 2	0.01s∼10.00s	0.01s	1.00s	0	
P9.06	Switchover frequency 2	P9.02∼to maximum output frequency	0.01Hz	10.00Hz	0	
P9.07	Vector control slip gain	50%~200%	0.01	100%	0	
P9.08	Time constant of speed loop filter	0.000s~0.100s	0.001s	28	0	
P9.09	Vector control over-excitation gain	0~200	1	64	Ō	
P9.10	Torque upper limit source in speed control mode	0: P9.11 setting 1: VI 2: CI 3: WI(Reserved) 4: Pulse setting 5: Communication setting 6: MIN(VI, CI) 7: MAX(VI, CI)	1	0	0	
P9.11	Digital setting of torque upper limit in speed control mode	0.0%~200.0%	0.001	150.0%	0	

P9.12	Torque upper limit source in speed control(stop) mode	0: P9.13 setting 1: VI 2: CI 3: WI(Reserved) 4: Pulse setting 5: Communication setting 6: MIN(VI, CI) 7: MAX(VI, CI)	1	0	0
P9.13	Digital setting of torque upper limit in speed control(stop) mode	0.0%~200.0%	0.001	150.0%	0
P9.14	Excitation adjustment proportional gain	0~60000	1	2000	0
P9.15	Excitation adjustment integral gain	0~60000	1	1300	0
P9.16	Torque adjustment proportional gain	0~60000	1	2000	0
P9.17	Torque adjustment integral gain	0~60000	1	1300	0
P9.18	Speed loop integral property	Unit's digit: integral separation 0: Disabled 1: Enabled	1	0	0
P9.24	Driving torque upper limit source	0: Digital setting1(P9.26) 1: VI 2: CI 3: WI (Reserved) 4: Pulse setting 5: Communication setting 6: MIN(VI, CI) 7: MAX(VI, CI)	1	0	×
P9.25	Reserved	-	-	-	*
P9.26	Digital setting of torque upper	-200.0%~200.0%	0.1%	150.0%	0

P9.27	limit in torque control mode Torque filter	_	_	_	*
P9.28	Maximum forward frequency in torque control mode	0.00Hz~maximum frequency	0.01Hz	50.00Hz	0
P9.29	Maximum reverse frequency in torque control mode	0.00Hz∼maximum frequency	0.01Hz	50.00Hz	0
P9.30	Acceleration time of torque control	0.00s~65000s	0.01s	0.00s	0
P9.31	Deceleration time of torque control	0.00s~65000s	0.01s	0.00s	0

Group PA: Fault and Protection					
Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Property
PA.00	Motor overload protection selection	0: Disabled 1: Enabled		1	0
PA.01	Motor overload protection gain	0.20~10.00		1.00	0
PA.02	Motor overload protection coefficient	50%~100%		80%	0
PA.03	Over voltage stall gain	0~100		0	0
PA.04	Over voltage stall protective current	120%~150%		130%	0
PA.05	Over current stall	0~100		20	0

	gain				
PA.06	Over current stall protective current	100%~200%		150%	0
PA.07	Short-circuit to ground upon power-on	0: Disabled 1: Enabled		1	0
PA.09	Fault auto reset times	0~20		0	0
PA.10	DO action during fault auto reset	0: Not act 1: Act		0	0
PA.11	Time interval of fault auto reset	0.1s∼100.0s		1.0s	0
PA.12	Input phase loss protection/contac tor energizing	Unit's digit: Input phase loss protection Ten's digit: Contactor energizing protection 0: Disabled 1: Enabled		11	0
PA.13	Output phase loss protection selection	0: Disabled 1: Enabled		1	0
PA.14	1st fault type	0: No fault	-	-	*
PA.15	2nd fault type	1: Over current during	-	-	*
PA.16	3rd (latest) fault type	acceleration (E-01) 2: Over current during deceleration (E-02) 3: Over current at constant speed (E-03) 4: Over voltage during acceleration (E-04) 5: Over voltage during deceleration (E-05) 6: Over voltage at constant speed (E-06) 7: Contactor fault (E-07) 8: AC drive overheat (E-08) 9: AC drive overload (E-09) 10: Motor overload (E-10)	-	-	•

	11: Under voltage (E-11)
	12: Power output phase loss
	(E-12)
	13: External equipment fault
	(E-13)
	14: Current detection fault
	(E-14)
	15: Communication fault
	(E-15)
	16: System interference
	(E-16)
	17: EEPROM read-write fault
	(E-17)
	18: Motor auto-tuning fault
	(E-18)
	19: Power input phase loss
	(E-19)
	20: Short circuit to ground
	(E-20)
	21: Encoder/PG card fault
	(E-21)
	22: Buffer resistance overload
	fault (E-22)
	23: Accumulative running time
	reached (E-23)
	24: Accumulative power-on
	time reached (E-24
	25: Motor switchover fault
	during running (E-25)
	26: With-wave current limit
	fault (E-26)
	27: Motor overheat (E-27)
	28: Too large speed deviation
	(E-28)
	29: Motor over-load (E-29)
	30: Load becoming 0 (E-30)
	31: PID feedback lost during
	running (E-31)
	32: User defined fault 1 (E-32)
L	

		33: User defined fault 2 (E-33)			
PA.17	Frequency upon 3 rd fault	-	-	-	*
PA.18	Current upon 3 rd fault	-	-	-	*
PA.19	Bus voltage upon 3 rd fault	-	-	-	*
PA.20	Input terminal status upon 3 rd fault	-	-	-	*
PA.21	Output terminal status upon 3 rd fault	-	-	-	*
PA.22	AC drive status upon 3 rd fault	-	-	-	*
PA.23	Power-on time upon 3 rd fault	-	-	-	*
PA.24	Running time upon 3 rd fault	-	-	-	*
PA.25	Frequency upon 2 nd fault	-	-	-	*
PA.26	Current upon 2 nd fault	-	-	-	*
PA.27	Bus voltage upon 2 nd fault	-	-	-	*
PA.28	Input terminal status upon 2 nd fault	-	-	-	*
PA.29	Output terminal status upon 2nd fault	-	-	-	*
PA.30	AC drive status upon 2 nd fault	-	-	-	*
PA.31	Power-on time upon 2 nd fault	-	-	-	*
PA.32	Running time upon 2 nd fault	-	-	-	*
PA.33	Frequency upon 1st fault	-	-	-	*

	ı		1	ı	
PA.34	Current upon 1st fault	-	-	-	*
PA.35	Bus voltage	-	-	-	*
	upon 1 st fault				
PA.36	Input terminal status upon 1st				
FA.30	fault	-	-	-	
	Output terminal				
PA.37	status upon 1st	-	-	-	*
	fault				
DA 00	AC drive status				*
PA.38	upon 1 st fault	-	-	-	î
PA.39	Power-on time	_			*
PA.39	upon 1 st fault	-	-	-	
PA.40	Running time	-	-		*
FA.40	upon 1 st fault	-	-	-	
PA.43	Fault protection action selection1	Unit's digit: Motor overload (E-11) 0: Coast to stop 1: Stop according to the stop mode 2: Continue to run Ten's digit: Power output phase loss (E-12) Hundred's digit: External equipment fault(E-15) Thousand's digit: Communication fault (E-16) Ten thousand's digit: EEPROM read-write fault (E-17)	11111	00000	0
PA.44	Fault protection action selection 2	Unit's digit: Power input phase loss (E-19) 0: Coast to stop Ten's digit: Encoder fault (E-21) 0: Coast to stop 1: Stop according to the stop mode	11111	00000	0

		Hundred's digit: Accumulative			
		running time reached			
		Thousand's digit:			
		Accumulative power-on time			
		reached(E-24)			
		Ten thousand's digit: Motor			
		•			
		overheat (E-27)			
		Unit's digit: Too large speed			
		deviation (E-28)			
		Ten's digit: Motor over-speed			
	Fault protection	(E-29)			
PA.45	action selection	Hundred's digit: Load	11111	00000	0
	3	becoming 0 (E-31)			
	Ü	Thousand's digit: PID			
		feedback lost during running			
		(E-34)			
		Ten thousand's digit: Reserved			
		Unit's digit: User-defined fault			
		1 (E-32)			
		0: Coast to stop			
	Fault protection	1: Stop according to the stop			
PA.46	action selection	mode	11111	00000	0
	4	2: Continue to run			
		Ten's digit: User-defined fault			
		2 (E-33)			
		Hundred's digit: Reserved			
		0: Current running frequency			
	Frequency	1: Set frequency			
	selection for	2: Frequency upper limit			
PA.50	continuing to run	Frequency lower limit	1	0	0
	•	, ,			
	upon fault	4: Backup frequency upon			
-		abnormality			
PA.51	Backup	0.0%~100.0% (100.0% to			
	frequency upon	maximum frequency)	0.001	100.0%	0
	abnormality				
	Type of motor	0: No temperature sensor			
PA.52	temperature	1: PT100	1	0	0
	sensor	2: PT1000			

PA.53	Motor overheat protection threshold	0°C~200°C	1℃	110°C	0
PA.54	Motor overheat warning threshold	0°C~200°C	1°C	90°C	0
PA.55	Action selection at instantaneous power failure	 Invalid Decelerate Deceleration to stop 	1	0	0
PA.56	Action pause judging voltage at instantaneous power failure	80.0%~100.0%	0.01Hz	90.0%	0
PA.57	Voltage rally judging time at instantaneous power failure	0.00s~100.00s	0.01s	0.50s	0
PA.58	Action judging voltage at instantaneous power failure	60.0%~100.0% (Standard bus voltage)	0.10%	80.0%	0
PA.59	Protection upon load becoming 0	0: Disabled 1: Enabled	1	0	0
PA.60	Detection level of load becoming 0	0.0~100.0%	0.001	10.0%	0
PA.61	Detection time of load becoming 0	0.0~60.0s	0.1s	1.0%	0
PA.63	Over-speed detection value	0.0%~50.0% (Maximum frequency)	0.1%	20.0%	0
PA.64	Over-speed detection time	0.0s:Not detected 0.1~60.0s	0.001	1.0s	0
PA.65	Detection value of too large speed deviation	0.0%~50.0% (Maximum frequency)	0.1%	20.0%	0
PA.66	Detection time of too large speed deviation	0.0s: Not detected 0.1~60.0s	0.001	5.0s	0

	Group PB: Multi-Reference and Simple PLC Function					
Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Property	
Pb.00	Multi-reference 0	-100.0% ~ 100.0%(100.0% to maximum frequency P0.05)	0	0.0%	0	
Pb.01	Multi-reference 1	-100.0%~100.0%	0	0.0%	0	
Pb.02	Multi-reference 2	-100.0%~100.0%	0	0.0%	0	
Pb.03	Multi-reference 3	-100.0%~100.0%	0	0.0%	0	
Pb.04	Multi-reference 4	-100.0%~100.0%	0	0.0%	0	
Pb.05	Multi-reference 5	-100.0%~100.0%	0	0.0%	0	
Pb.06	Multi-reference 6	-100.0%~100.0%	0	0.0%	0	
Pb.07	Multi-reference 7	-100.0%~100.0%	0	0.0%	0	
Pb.08	Multi-reference 8	-100.0%~100.0%	0	0.0%	0	
Pb.09	Multi-reference 9	-100.0%~100.0%	0	0.0%	0	
Pb.10	Multi-reference	-100.0%~100.0%	0	0.0%	0	
Pb.11	Multi-reference	-100.0%~100.0%	0	0.0%	0	
Pb.12	Multi-reference	-100.0%~100.0%	0	0.0%	0	
Pb.13	Multi-reference	-100.0%~100.0%	0	0.0%	0	
Pb.14	Multi-reference	-100.0%~100.0%	0	0.0%	0	
Pb.15	Multi-reference	-100.0%~100.0%	0	0.0%	0	
Pb.16	Simple PLC running mode	O: Stop after AC drive runs one cycle 1: Keep final values after AC drive runs one cycle 2: Repeat after AC drive runs one cycle	0	0	0	
Pb.17	Simple PLC retentive selection	Unit's digit: Retentive upon power failure 0: NO 1: YES	0	00	o	

Ten's digit: Retentive upon stop 0: NO 1: YES
0: NO 1: YES Running time of simple PLC
1: YES
Pb.18 Running time of simple PLC reference 0 0.0s(h)~6553.5s(h) 0 0.0s(h) ○ Deceleration Deceleration 0 0 ○ Pb.19 time of simple pLC reference 0 0 ○ ○ Running time of simple PLC reference 0 0.0s(h)~6553.5s(h) 0 0.0s(h) ○ Pb.20 simple PLC reference 1 0.0s(h)~6553.5s(h) 0 0.0s(h) ○
Pb.18 simple PLC reference 0 0.0s(h)~6553.5s(h) 0 0.0s(h) ○ Deceleration Deceleration 0 0 ○ Pb.19 time of simple plc reference 0 0 ○ ○ Running time of plc simple plc reference 1 0.0s(h)~6553.5s(h) 0 0.0s(h) ○ Pb.20 simple plc reference 1 0.0s(h)~6553.5s(h) 0 0.0s(h) ○
reference 0 Deceleration Pb.19 time of simple 0~3 0 0 0 PLC reference 0 Running time of simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) 0 reference 1 Deceleration
Pb.19 Deceleration time of simple PLC reference 0 0
Pb.19 time of simple PLC reference 0 0
PLC reference 0 Running time of Pb.20 simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) reference 1 Deceleration
Running time of
Pb.20 simple PLC reference 1 0.0s(h)~6553.5s(h) 0 0.0s(h) o Deceleration 0 0.0s(h) 0 0.0s(h) 0 0.0s(h) 0 0.0s(h) 0
reference 1 Deceleration
reference 1 Deceleration
Deceleration
PLC reference 1
Running time of
Pb.22 simple PLC 0.0s(h) ~6553.5s(h) 0 0.0s(h) ○
reference 2
Deceleration
Pb.23 time of simple $0\sim3$ 0 0
PLC reference 2
Running time of
Pb.24 simple PLC 0.0s(h)∼6553.5s(h) 0 0.0s(h) ∘
reference 3
Deceleration
Pb.25 time of simple 0~3 0 0 ○
PLC reference 3
Running time of
Pb.26 simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) o
reference 4
Deceleration
Pb.27 time of simple $0\sim3$ 0 0
PLC reference 4
Running time of
Pb.28 simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) o
reference 5
Pb.29 Deceleration 0~3 0 0 ○

PLC reference 5 Running time of simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) 0 0.0s(h) 0 0.0s(h) 0 0.0s(h) 0 0 0 0 0 0 0 0 0		time of simple				
Pb.30 simple PLC reference 6 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0 Pb.31 time of simple pLC reference 6 0 0 0 0 Pb.32 Simple PLC simple PLC reference 7 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0 Pb.33 time of simple pLC reference 7 0 0 0 0 Pb.34 simple PLC simple PLC reference 8 0 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0 Pb.35 time of simple pLC reference 8 0 0 0 0 0 Pb.36 simple PLC reference 9 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0		PLC reference 5				
Pb.31 time of simple Deceleration		Running time of				
Pb.31 Deceleration time of simple PLC reference 6 0	Pb.30	simple PLC	0.0s(h)∼6553.5s(h)	0	0.0s(h)	0
Pb.31 time of simple PLC reference 6 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		reference 6				
PLC reference 6 Running time of simple PLC reference 7 Deceleration Pb.33 time of simple PLC reference 7 PLC reference 8 Deceleration Pb.34 simple PLC reference 8 Deceleration Pb.35 time of simple PLC reference 8 P.S.4 Simple PLC reference 8 P.S.5 P.S.		Deceleration				
Running time of simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) 0	Pb.31	time of simple	0~3	0	0	0
Pb.32 simple PLC reference 7 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0 Deceleration Pb.33 time of simple of simple PLC reference7 0 0 0 Running time of simple PLC reference 8 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0 Pb.34 simple PLC reference 8 0 0 0 0 Pb.35 time of simple PLC reference 8 0 0 0 0 Pb.36 simple PLC reference 9 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0 Pb.37 time of simple PLC reference 9 0 0 0 0 Pb.38 simple PLC reference 9 0 0 0 0 Pb.38 simple PLC reference 10 0.0s(h) ~6553.5s(h) 0 0 0 Pb.39 time of simple reference 10 0 0 0 0 Running time of simple reference 10 0 0 0 0 0 Pb.40 simple PLC reference 10 0 0 0 0 0		PLC reference 6				
reference 7 Deceleration Pb.33 time of simple PLC reference7 Running time of Simple PLC reference 8 Deceleration Pb.34 simple PLC reference 8 Running time of simple PLC reference 8 Running time of Simple PLC reference 9 Deceleration Pb.36 simple PLC reference 9 Deceleration Pb.37 time of simple PLC reference 9 Running time of PLC reference 10 Deceleration Pb.39 time of simple PLC creference10 Running time of PLC reference10 Running time of PLC reference11 Deceleration Pb.41 time of simple 0~3 0 0 0 0 0		Running time of				
Pb.33 Deceleration time of simple PLC reference? 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	Pb.32	simple PLC	0.0s(h)∼6553.5s(h)	0	0.0s(h)	0
Pb.33 time of simple PLC reference7 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		reference 7				
PLC reference7 Running time of simple PLC reference 8 0.0s(h)~6553.5s(h) 0 0.0s(h) 0 Pb.34 Simple PLC reference 8 0 0 0 0 0 Pb.35 Itime of simple PLC reference 8 0 0 0 0 0 0 Pb.36 Running time of simple PLC reference 9 0.0s(h)~6553.5s(h) 0 0.0s(h) 0 0 Pb.37 time of simple PLC reference 9 0 0 0 0 0 0 0 Pb.38 simple PLC simple PLC reference 10 0.0s(h)~6553.5s(h) 0 0.0s(h) 0 0 0 0 Pb.39 time of simple PLC reference 10 0 0 0 0 </td <td></td> <td>Deceleration</td> <td></td> <td></td> <td></td> <td></td>		Deceleration				
Pb.34 Running time of simple PLC reference 8 0.0s(h)~6553.5s(h) 0 0.0s(h) 0 0.0s(h) 0 0.0s(h) 0 0.0s(h) 0	Pb.33	time of simple	0~3	0	0	0
Pb.34 simple PLC reference 8 0.0s(h) ~6553.5s(h) 0 0.0s(h) ○ Deceleration time of simple PLC reference 8 0 0 0 ○		PLC reference7				
Pb.35 Deceleration Time of simple O~3 O O O O O O O O O		Running time of				
Deceleration time of simple 0~3 0 0 0 0	Pb.34	simple PLC	0.0s(h)∼6553.5s(h)	0	0.0s(h)	0
Pb.35 time of simple PLC reference 8 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		reference 8				
PLC reference 8 Running time of simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) 0 Pb.36 simple PLC preference 9 0 0 0.0s(h) 0 Pb.37 time of simple plus plus plus plus plus plus plus plus		Deceleration				
Running time of simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) 0	Pb.35	time of simple	0~3	0	0	0
Pb.36 simple PLC reference 9 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0 Deceleration time of simple PLC reference 9 0 0 0 0 0 Running time of simple PLC reference 10 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0 Pb.39 time of simple PLC reference 10 0 0 0 0 Running time of simple PLC reference 10 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0 Pb.40 simple PLC reference 11 0.0s(h) ~6553.5s(h) 0 0.0s(h) 0 Pb.41 time of simple 0~3 0 0 0 0		PLC reference 8				
reference 9 Deceleration time of simple 0~3 0 0 o PLC reference 9 Running time of 0 0.0s(h) ~ 6553.5s(h) 0 0.0s(h) ~ o Pb.38 simple PLC 0.0s(h) ~ 6553.5s(h) 0 0.0s(h) ~ o Pb.39 time of simple 0~3 0 0 o PLC reference10 Running time of simple PLC 0.0s(h) ~ 6553.5s(h) 0 0.0s(h) ~ o Pb.40 simple PLC 0.0s(h) ~ 6553.5s(h) 0 0.0s(h) ~ o Pb.41 time of simple 0~3 0 0 o		Running time of				
Pb.37 Deceleration time of simple PLC reference 9 0	Pb.36	simple PLC	0.0s(h)∼6553.5s(h)	0	0.0s(h)	0
Pb.37 time of simple PLC reference 9 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		reference 9				
PLC reference 9 Running time of simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) o		Deceleration				
Running time of simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) 0	Pb.37	time of simple	0~3	0	0	0
Pb.38 simple PLC reference 10 0.0s(h)~6553.5s(h) 0 0.0s(h) 0 Deceleration time of simple PLC reference 10 0 0 0 0 Running time of simple PLC reference 11 0.0s(h)~6553.5s(h) 0 0.0s(h) 0 Pb.41 time of simple 0~3 0 0 0 0		PLC reference 9				
reference 10 Deceleration Pb.39 time of simple 0~3 0 0 0 PLC reference10 Running time of simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) 0 reference 11 Deceleration Pb.41 time of simple 0~3 0 0 0		Running time of				
Deceleration time of simple 0~3 0 0 0	Pb.38	simple PLC	0.0s(h)∼6553.5s(h)	0	0.0s(h)	0
Pb.39 time of simple PLC reference10 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0		reference 10				
PLC reference10 Running time of simple PLC 0.0s(h)∼6553.5s(h) 0 0.0s(h) ○ reference 11 Deceleration Pb.41 time of simple 0∼3 0 0 ○ ○		Deceleration				
PLC reference10 Running time of simple PLC 0.0s(h)∼6553.5s(h) 0 0.0s(h) ○ reference 11 Deceleration Pb.41 time of simple 0∼3 0 0 ○ ○	Pb.39	time of simple	0~3	0	0	0
Running time of simple PLC 0.0s(h)~6553.5s(h) 0 0.0s(h) 0		•				
Pb.40 simple PLC reference 11 0.0s(h) ~6553.5s(h) 0 0.0s(h) ○ Pb.41 time of simple 0 ~3 0 0 ○						
reference 11 Deceleration Pb.41 time of simple 0~3 0 0 o	Pb.40		0.0s(h)∼6553.5s(h)	0	0.0s(h)	0
Pb.41 Deceleration time of simple $0\sim3$ 0 0		·	, , , , , , , , , , , , , , , , , , , ,		(,	-
Pb.41 time of simple 0∼3 0 0						
	Pb.41	time of simple	0~3	0	0	0
		-				

	11				
Pb.42	Running time of simple PLC reference 12	0.0s(h)~6553.5s(h)	0	0.0s(h)	0
Pb.43	Deceleration time of simple PLC reference 12	0~3	0	0	Ō
Pb.44	Running time of simple PLC reference 13	0.0s(h)~6553.5s(h)	0	0.0s(h)	Ō
Pb.45	Deceleration time of simple PLC reference 13	0~3	0	0	O
Pb.46	Running time of simple PLC reference 14	0.0s(h)∼6553.5s(h)	0	0.0s(h)	0
Pb.47	Deceleration time of simple PLC reference 14	0~3	0	0	0
Pb.48	Running time of simple PLC reference 15	0.0s(h)~6553.5s(h)	0	0.0s(h)	0
Pb.49	Deceleration time of simple PLC reference 15	0~3	0	0	Ō
Pb.50	Time unit of simple PLC running	0: s(second) 1: H (hour)	0	0	Ō
Pb.51	Multi-reference 0 source	0: Set by PB.00 1: VI 2: CI 3: WI 4:Pulse setting 5: PID 6: Set by preset frequency,	0	0	0

		modified via terminal						
		UP/DOWN						
	O	Group PC: Communication Par	ameters					
Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Property			
Code	Ivaille	MODBUS baud rate:	Offic					
		0: 300BPS						
		1: 600BPS						
		2: 1200BPS						
		3: 2400BPS						
PC.00	Baud rate	4: 4800BPS	1	5	0			
		5: 9600BPS						
		6: 19200BPS						
		7: 38400BPS						
		8: 57600BPS						
		9: 115200BPS						
		0: No check (8-N-2)						
	Modbus data format	1: Even parity check (8-E-1)	1					
PC.01		2: Odd parity check (8-O-1)		0	0			
		3: No check (8-N-1)			ĺ			
		(Valid for MODBUS)						
	Local address	0: Broadcast address						
		1~247						
PC.02		(Valid for MODBUS)	1	1	0			
		Profibus-DP、CANlink)						
PC.03	Response delay	0~20ms(Valid for MODBUS)	1ms	2	0			
PC.04	Communication	0.0: Invalid	0.1s	0.0	_			
PC.04	timeout	0.1: ∼60.0s	0.18	0.0	0			
		MODBUS:						
DO 05	Modbus protocol	0: Non-standard Modbus	1	0	_			
PC.05	data format	protocol	11	0	0			
		1: Standard Modbus protocol						
	d	Group Pd: Function Code Mana	agement					
Function	Parameter		Minimum					
Code	Name	Setting Range	Unit	Default	Property			
Pd.00	User password	0~65535	1	0	0			
	Restore default	0: No operation						
Pd.01	setting	01: Restore factory setting,	1	0	×			

		except motor parameters 02: Clear records			
Pd.02	AC drive parameter display selection	Unit's digit: Group b display selection 0: Not display 1: Display Ten's digit: Group E display selection 0: Not display 1: Display	1	001	×
Pd.03	Individualized parameter display selection	Display basic group; Switchover to user-defined parameter display by press M Switchover to user-modified parameter display by press M	1	0	0
Pd.04	Parameter modification property	0: Modifiable 1: Not modifiable	1	0	0

Group PE: Swing Frequency, Fixed Length and Count

Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Property
PE.00	Swing frequency setting mode	Relative to the central frequency Relative to the maximum frquency	1	0	0
PE.01	Swing frequency amplitude	0.0%~100.0%	0.1%	0.0%	0
PE.02	Jump frequency amplitude	0.0%~50.0%	0.1%	0.0%	0
PE.03	Swing frequency cycle	0.1s∼3000.0s	0.1s	10.0s	0
PE.04	Triangular wave rising time coefficient	0.1s~100.0%	0.1%	50.0%	0
PE.05	Set length	0m∼65535m	1m	1000m	0
PE.06	Actual length	0m∼65535m	1m	0m	0
PE.07	Number of pulse per meter	0.1~6553.5	0.1	100.0	0
PE.08	Set count value	1∼65535	1	1000	0

PE.09 Designated count value 1∼65535	1	1000	0
--------------------------------------	---	------	---

Group PF: AIAO Correction and AI Curve Setting

Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Property
PF.00	VI measured voltage 1	0.500V~4.000V	0.001V	2.000V	0
PF.01	VI display voltage1	0.500V~4.000V	0.001V	2.000V	0
PF.02	VI measured voltage 2	6.000V∼9.999V	0.001V	8.000V	0
PF.03	VI display voltage 2	6.000V~9.999V	0.001V	8.000V	0
PF.04	CI measured voltage 1	0.500V~4.000V	0.001V	2.000V	0
PF.05	CI display voltage 1	0.500V~4.000V	0.001V	2.000V	0
PF.06	CI measured voltage 2	6.000V~9.999V	0.001V	8.000V	0
PF.07	CI display voltage 压 2	6.000V~9.999V	0.001V	8.000V	0
PF.08	WI measured voltage 1	-9.999V∼10.000V	0.001V	2.000V	0
PF.09	WI display	-9.999V∼10.000V	0.001V	2.000V	0
PF.10	WI measured voltage 2	-9.999V~10.000V	0.001V	8.000V	O

	AA/I P. 1				
PF.11	WI display	-9.999V∼10.000V	0.001V	8.000V	0
	voltage 2				
	AO1 target	0.5001/ 4.0001/			
PF.12	voltage 1	0.500V~4.000V	0.001V	2.000V	0
	AO1 measured				
PF.13	voltage 1	0.500V~4.000V	0.001V	2.000V	0
DE44	AO1 target	0.0001/ 0.0001/	0.0041/	0.0001/	
PF.14	voltage 2	6.000V~9.999V	0.001V	8.000V	0
	AO1 measured				
PF.15	voltage 2	6.000V~9.999V	0.001V	8.000V	0
PE 10	AO2 target	0.5007. 4.0007.	0.00414	0.0001/	
PF.16	voltage 1	0.500V~4.000V	0.001V	2.000V	0
PF.17	AO2 measured	0.5001/ 4.0001/			
	voltage 1	0.500V~4.000V	0.001V	2.000V	0
PF.18	AO2 target	6,000\/~.0,000\/	0.0041/	9.000\/	
	voltage 2	6.000V~9.999V	0.001V	8.000V	0
AO2 measured		6.000V∼9.999V	0.0041/	0.0001/	_
PF.19	voltage 2	6.000 V ~ 9.999 V	0.001V 8.000V		0
PF.20	Al curve 4	-10.00V∼PF.22	0.01V	0.00V	_
PF.20	minimum input	-10.00V~FF.22	0.010	0.000	0
	Corresponding				
PF.21	setting of AI curve 4 minimum	-100.0%~+100.0%	0.001	0.0%	0
	input				
	Al curve 4				
PF.22	inflexion 1 input	PF.20∼PF.22	0.01V	3.00V	0
	Corresponding				
PF.23	setting of Al	-100.0%~+100.0%	0.001	30.0%	0
	curve 4 inflexion 1 input				
	put		l .		

PF.24	Al curve 4 inflexion 2 input	PF.22~PF.26	0.01V	6.00V	0
PF.25	Corresponding setting of AI curve 4 inflexion 2 input	-100.0%~+100.0%	0.001	60.0%	0
PF.26	Al curve 4 maximum input	PF.26~+10.00V	0.01V	10.00V	0
PF.27	Corresponding setting of AI curve 4 maximum input	-100.0%~+100.0%	0.001	100.0%	0
PF.28	Al curve 5	-10.00V∼PF.10	0.01V	-10.00V	0
PF.29	Corresponding setting of AI curve 5 minimum input	-100.0%~+100.0%	0.001	-100.0%	0
PF.30	Al curve 5 inflexion 1 input	PF.28~PF.32	0.01V	-3.00V	0
PF.31	Corresponding setting of AI curve 5 inflexion 1 input	-100.0%~+100.0%	0.001	-30.0%	0
PF.32	Al curve 5 inflexion 2 input	PF.30∼PF.34	0.01V	3.00V	0
PF.33	Corresponding setting of AI curve 5 inflexion 2 input	-100.0%~+100.0%	0.001	30.0%	0
PF.34	Al curve 5 maximum input	PF.32~+10.00V	0.01V	10.00V	0
PF.35	Corresponding	-100.0%~+100.0%	0.001	100.0%	0

	setting of AI				
	curve 5				
	maximum input				
	Jump point of VI				
PF.36	input	-100.0%~\dagge\00.0%	0.001	0%	0
F1.30	corresponding	-100.076 -100.076	0.001	0 78	Ü
	setting				
	Jump amplitude				
PF.37	of VI input	0.0%~100.0%	0.001	0.5%	0
11.07	corresponding	0.070	0.001	0.070	Ü
	setting				
	Jump point of CI				
PF.38	input	-100.0%~100.0%	0.001	0%	0
	corresponding				
	setting				
	Jump amplitude				
PF.39	of CI input	0.0%~100.0%	0.001	0.5%	0
	corresponding		0.001		
	setting				
	Jump point of WI				
PF.40	input	-100.0%~100.0%	0.001	0%	0
	corresponding		0.001		
	setting				
	Jump amplitude				
PF.41	of WI input	0.0%~100.0%	0.001	0.5%	0
	corresponding				
	setting				

Group E0 : User-defined Parameters					
Function Parameter Setting Range Minimum Default Unit				Property	
E0.00	User-defined function code 0	P0.01∼PE.xx	-	P0.01	0
E0.01	User-defined function code 1	P0.01~PE.xx	-	P0.02	0
					0
E0.06	User-defined function code 6	P0.01~PE.xx	-	P0.18	0
E0.07~ E0.31	User-defined function code 7~31	P0.01∼PE.xx	-	P0.02	0

Group b: Standard Monitoring Parameters						
Function Code	Parameter Name	Setting Range	Minimum Unit	Default	Property	
b0.00	Running frequency (HZ)	0.00Hz∼P0.02Hz	0.01Hz	7000H		
b0.01	Setting frequency (HZ)	0.00Hz∼P0.02Hz	0.01Hz	7001H		
b0.02	Bus voltage (V)	0.0V~1000.0V	0.1V	7002H		
b0.03	Output voltage (V)	0V~380V	1V	7003H		
b0.04	Output current (A)	0.01A∼655.35A	0.01A	7004H		
b0.05	Output power (KW)	0.0kw~1000.0kw	0.1KW	7005H		
b0.06	Output torque (%)	0.0%~200.0%	0.1%	7006H		
b0.07	DI input status	H.0000~H.FFFF	1	7007H		
b0.08	DO output status	H.0000~H.FFFF	1	7008H		

b0.09	VI voltage (V)	0.00V~10.00V	0.01V	7009H	
b0.10	CI voltage (V) /current (mA)	0.00V~10.00V	0.01V/0.01mA	700AH	
b0.11	WI voltage (V)	0.00V~10.00V	0.01V	700SH	
b0.12	Count value	0~65535	1	700CH	
b0.13	Length value	0~65535	1	700DH	
b0.14	Load speed display	0.00Hz~P0.05Hz	1	700EH	
b0.15	PID setting	0~65535	1	700FH	
b0.16	PID feedback	0.00~300.00kHz	1	7010H	
b0.17	PLC stage	0~65535	1	7011H	
b0.18	Pulse input frequency	0.0Hz∼P0.05Hz	0.01kHz	7012H	
b0.19	Feedback speed (HZ)	0.00V~10.00V	0.01Hz	7013H	
b0.20	Remaining running time	0.0~6553.5	0.1Min	7014H	
b0.21	V1 voltage before correction	0.00V~10.00V	0.001V	7015H	
b0.22	C1 voltage /current before correction	0.00V~10.00V	0.001V/0.01m A	7016H	
b0.23	WI voltage before correction	0.00V~10.00V	0.001V	7017H	
b0.24	Linear speed	0 m/Min ~65535 m/Min	1m/Min	7018H	
b0.25	Accumulative power-on time	0.0~6553.5	1Min	7019H	
b0.26	Accumulative running time	0.0~6553.5	0.1Min	701AH	
b0.27	Pulse input frequency	0.0~300.0kHz	1Hz	701BH	
b0.28	Communication	0.00~100.00	0.01%	701CH	

	setting value				
b0.29	Encoder feedback speed	0.00Hz∼P0.02Hz	0.01Hz	701DH	
b0.30	Main frequency X	0.00Hz∼P0.02Hz	0.01Hz	701EH	
b0.31	Auxiliary frequency Y	0V~380V	0.01Hz	701FH	
b0.32	Viewing any register address value	0V~380V	1	7020H	
b0.34	Motor temperature	0.0~6553.5	1℃	7022H	
b0.35	Target torque (%)	0.0~6553.5	0.1%	7023H	
b0.36	Resolver position	0.0~300.0kHz	1	7024H	
b0.37	Power factor angle	0.00~100.00	0.1°	7025H	
b0.38	ABZ position	0.00Hz~P0.02Hz	1	7026H	
b0.39	Target voltage upon V/F separation	0.00Hz∼P0.02Hz	1V	7027H	
b0.40	Output voltage upon V/F separation	0V~380V	1V	7028H	
b0.41	DI state visual display	-	1	7029H	
b0.42	DO state visual display	-	1	702AH	
b0.43	DI function state visual display 1	-	1	702BH	
b0.44	DI function state visual display 2	-	1	702CH	

Chapter 6 Description of Function Codes

6.1 Basic Parameters (Group P0)

P0.00 Control Mode	Setting Range: 0~2	0
--------------------	--------------------	---

- **0: V/F Control:** It is applicable to applications with low load requirements or applications where one AC drive operates multiple motors, such as fan and pump.
- 1: Sensorless flux vector control (SFVC): It indicates open-loop vector control, and is applicable to high-performance control applications such as machine tool, centrifuge, wire drawing machine and injection molding machine. One AC drive can operate only one motor.
- 2: Closed-loop vector control(CLVC): It is applicable to high-accuracy speed control or torque control applications such as high-speed paper making machine, crane and elevator. One AC drive can operate only one motor. An encoder must be installed at the motor side, and a PG card matching the encoder must be installed at the AC drive side.

P0.01	Main frequency source 1 selection	Setting Range: 0~9	0
-------	-----------------------------------	--------------------	---

- **0:** Digital setting (non-retentive at power failure): You can change the set frequency by pressing ▲ and ▼ on the operation panel. When the AC drive is powered on again after power failure, the set frequency reverts to the value of P0.02.
- 1: Digital setting (retentive at power failure): You can change the set frequency by pressing keys A and Y on the operation panel (or using the UP/DOWN functions of input terminals). When the AC drive is powered on again after power failure, the set frequency is the value memorized at the moment of the last power failure.
- 2: VI analog setting(VI-GND). 0-10 V voltage input
- **3:** Cl analog setting (Cl-GND). 0–10 V voltage input or 4–20 mA current input, determined by jumper J8
- 4: WI analog setting (Reserved). 0-10 V voltage input
- 5: Pulse setting(PLUSE). The frequency is set by X5 (high-speed pulse). The corresponding

relationship of frequency and pulse setting is confirmed by P3.31 to P3.34.

- **6: Multi-reference.** In multi-reference mode, combinations of different DI terminal states correspond to different set frequencies. The GLORY supports a maximum of 16 speeds implemented by 16 state combinations of four DI terminals (allocated with functions 12 to 15) in Group Pb. The multiple references indicate percentages of the value of P0.05 (Maximum frequency). If a DI terminal is used for the multi-reference function; you need to perform related setting in group P3.
- 7: Simple PLC setting. When the simple programmable logic controller (PLC) mode is used as the frequency source, the running frequency of the AC drive can be switched over among the 16 frequency references. You can set the holding time and acceleration/deceleration time of the 16 frequency references. For details, refer to the descriptions of Group Pb.
- 8: PID setting. When applying PID as the frequency source, you need to set parameters of PID function in group P6.
- **9: 485 communication.**The frequency is set by means of communication. The data is given by the host computer through the communication address 0x1000. The data format is -100.00% to 100.00%. 100.00% corresponds to the value of P0.05 (Maximum frequency).

P0.02 Preset frequency	Setting Range: lower limit to upper limit frequency	50.00Hz
------------------------	---	---------

If the frequency source is digital setting (P0.01=0, 1), the value of P0.02 is the initial frequency of the AC drive.

	P0.03	Command source selection	Setting Range: 0、1、2	0
--	-------	--------------------------	----------------------	---

- **0: Operation panel control.** Using operation keyboard FWD、STOP/RESET、JOG to startup/stop.
- **1: Terminal control.** Using external control terminals FWD,REV,X1~X6 to startup/stop.
- 2: Communication control. Using RS485 communication protocol to control startup/stop.

	P0.04	Rotation direction	Setting Range: 00∼11	0
--	-------	--------------------	----------------------	---

0: Same direction.

1: Reverse direction.

NOTE: The motor will resume running in the original direction after parameter initialization. Do not use this function in applications where changing the rotating direction of the motor is prohibited after system commissioning is complete.

P0.05	Maximum fraguancy	Setting Range:	50.00Hz
P0.05	Maximum frequency	50.00Hz∼500.0Hz	50.00HZ

When the frequency source is AI, pulse setting (X5), or multi-reference, 100% of the input corresponds to the value of this parameter.

P0.06	Frequency upper limit	Setting Range: P0.07Hz~P0.05Hz	50.00Hz
P0.07	Frequency lower limit	Setting Range: 0Hz∼P0.06Hz	AC drive dependent
P0.08	Source of frequency upper limit	Setting Range: 0∼5	0

It is used to set the source of the frequency upper limit,including 0: set by P0.02; 1: V1; 2: C1; 3: W1; 4: X5 Pulse setting; 5: Communication setting. If the frequency upper limit is set by means of analog input,pulse setting or communication, the setting is similar to that of the main frequency source X.For details, see the description of P0.01.

P0.09	Frequency upper limit	Setting Range: 0Hz~P0.05	0. 00Hz
F 0.03	offset	Setting Nange: 0112 17 0.03	0. 00112

If the source of the frequency upper limit is analog input or pulse setting, the final frequency upper limit is obtained by adding the offset in this parameter to the frequency upper limit set in P0.08.

P0.10	Carrier frequency	Cotting Dance 4 01/2 44 01/	AC drive
P0.10	Carrier frequency	Setting Range: 1.0K~14.0K	dependent

It is used to adjust the carrier frequency of the AC drive, helping to reduce the motor noise, avoiding the resonance of the mechanical system, and reducing the leakage current to the earth and interference generated by the AC drive.

Adjusting the carrier frequency will exert influences on the aspects listed in the following table.

Carrier frequency	lower	higher
Electromagnetic noise	1	↓
Leakage current	↓	1
External radiation	↓	1
interference		

NOTE:

- 1. In order to obtain a better control characteristic, carrier frequency and the maximum operation frequency of AC drive ratio less than 36 is not recommended.
- 2. The current display value will has deviation when the carrier frequency value is too low.

	Carrier frequency		
P0.11	adjustment with	Setting Range: 0~1	0
	temperature		

0: Not adjust. 1: Adjust

It is used to set whether the carrier frequency is adjusted based on the temperature. The AC drive automatically reduces the carrier frequency when detecting that the heatsink temperature is high. The AC drive resumes the carrier frequency to the set value when the heatsink temperature becomes normal. This function reduces the overheat alarms.

P0.12	Acceleration time 1	Setting Range: 0.1~6000.0	20.0
P0.13	Deceleration time 1	Setting Range: 0.1~6000.0	20.0

Acceleration time indicates the time required by the AC drive to accelerate from 0 Hz to "Acceleration/Deceleration base frequency" (P0.05), that is, t1 in Figure 6-1.

Deceleration time indicates the time required by the AC drive to decelerate from

"Acceleration/Deceleration base frequency" (P0.05) to 0 Hz, that is, t2 in Figure 6-1.

The GLORY provides totally four groups of acceleration/deceleration time for selection. You can perform switchover by using a DI terminal.

• Group 1: P0.12~ P0.13

• Group 2: P2.03~ P2.04

• Group 3: P2.05~ P2.06

• Group 4: 2.07~ P2.08

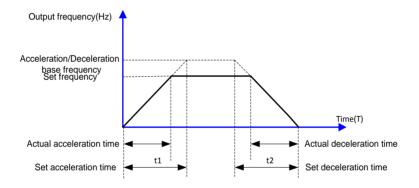


Figure 6-1 Acceleration/Deceleration time

P0.14	Acceleration/ Deceleration	Setting Range: 0~2	0
	time unit		

0: 1s: 1: 0.1s 2: 0.01s

To satisfy requirements of different applications, the GLORY provides three acceleration/deceleration time units, 1s, 0.1s and 0.01s

NOTE: Modifying this parameter will make the displayed decimal places change and corresponding acceleration/deceleration time also change.

P0.15	Acceleration/ Deceleration	Setting Range: 0~2	0
. 0.10	time base frequency	Cotting Rango: C 1	·

0: Maximum frequency (P0.05); 1: Set frequency; 2: 100.00Hz

P0.16	Auxiliary frequency source 2	Setting Range: 0∼9	0
1 0.10	selection	octaing range. v	•

The same as P0.01(Main frequency source 1 selection)

P0.17	Range of auxiliary frequency	Sotting Dange Oc. 1	0
PU.17	2 for 1 and 2 operation	Setting Range: 0~1	U

0: Relative to maximum frequency; 1: Relative to main frequency 1

P0.18	Range of auxiliary frequency	Setting Range:	0
	2 for 1 and 2 operation	0%~150%	

The parameter used for confirming the range of auxiliary frequency

Note: You can set the auxiliary frequency to be relative to either maximum frequency or main frequency 1. If relative to main frequency 1, the setting range of the auxiliary frequency 2 varies according to the main frequency1

P0.19	Frequency source selection	Setting Range: 11~00	00
-------	----------------------------	----------------------	----

Unit's digit: (Frequency source selection)

- 0: Main frequency source 1
- 1: 1 and 2 operation (operation relationship determined by ten's digit)
- 2: Switchover between 1 and 2,
- 3: Switchover between 1 and "1 and 2 operation"
- 4: Switchover between 2 and "1 and 2 operation"

Ten's digit (1 and 2 operation relationship)

0: 1+2

- 1. 1-2
- 2. Maximum
- 3. Minimum

	Frequency offset of auxiliary	Setting Range	
P0.20	frequency source for 1 and 2	0.00Hz~Maximum	0.00
	operation	frequency	

This parameter is valid only when the frequency source is set to "1 and 2 operation". The final frequency is obtained by adding the frequency offset set in this parameter to the 1 and 2 operation results.

P0.21		Setting Range:	2
FU.21	Frequency reference resolution	1~2	2

1: 0.1Hz; 2: 0.01Hz;

It is used to set the resolution of all frequency-related parameters.

P0.22	Retentive of digital setting	Setting Range:	0
FU.22	frequency upon power failure	0~1	0

This parameter is valid only when the frequency source is digital setting

- **0:** "Not retentive": If P0-22 is set to 0, the digital setting frequency value resumes to the value of P0-02 (Preset frequency) after the AC drive stops. The modification by using keys ▲ and ▼ or the terminal UP/DOWN function is cleared.
- 1: "Retentive": If P0-22 is set to 1, the digital setting frequency value is the set frequency at the moment when the AC drive stops. The modification by using keys ▲ and ▼ or the terminal UP/DOWN function remains effective.

P0.23	,	Base frequency for UP/DOWN	Setting Range:	0
PU.2	3	modification during running	0~1	0

0: Running frequency; 1: Set frequency.

This parameter is valid only when the frequency source is digital setting.

It is used to set the base frequency to be modified by using keys and or the terminal UP/DOWN function. If the running frequency and set frequency are different, there will be a large difference between the AC drive's performance during the acceleration/deceleration process.

P0.24	Binding command source	Setting Range: 0000~9999	0000
1 0.24	to frequency source	Cetting Range: 0000 3333	0000

Unit's digit: Binding operation panel command to frequency source.

Ten's digit: Binding terminal command to frequency source.

Hundred's digit: Binding communication command to frequency source.

Thousand's digit: Binding automatic running command to frequency source

It is used to bind the four running command sources with the nine frequency sources, facilitating to implement synchronous switchover.

For details on the frequency sources, see the description of P0.01 (Main frequency source 1 selection). Different running command sources can be bound to the same frequency source.

If a command source has a bound frequency source, the frequency source set in P0-02, P0.16 and P0.19 no longer takes effect when the command source is effective.

P0.25	G/P type display	/P type display Setting Range: 0~1	Model
F 0.25	O/F type display		dependent

This parameter is used to display the delivered model and cannot be modified.

- 1: Applicable to constant torque load with rated parameters specified
- 2: Applicable to variable torque load (fan and pump) with rated parameters specified

P0.26	Motor parameter group selection	Setting Range: 0~3	0

The GLORY can drive four motors at different time. You can set the motor nameplate parameters respectively, independent motor auto-tuning, different control modes, and parameters related to running performance respectively for the four motors.

Motor parameter group 1 corresponds to groups P8 and P9. Motor parameter groups 2, 3 and 4 correspond to groups E3, E4 and E5 respectively.

You can select the current motor parameter group by using P0.26 or perform switchover between the motor parameter groups by means of a X terminal. If motor parameters selected by means of P0.26 conflict with those selected by means of X terminal, the selection by X is preferred.

P0.27	Serial communication	Setting Range: 0~0	0
	protocol	3	

GLORY supports 0: MODBUS.

6.2 Start/Stop Control (Group P1)

P1.00	Start mode	Setting Range: 0~2	0
-------	------------	--------------------	---

0: Direct start

- If the DC braking time is set to 0, the AC drive starts to run at the startup frequency.
- If the DC braking time is not 0, the AC drive performs DC braking first and then starts to run at the startup frequency. It is applicable to small-inertia load application where the motor is likely to rotate at startup.

1: Rotational speed tracking restart

The AC drive judges the rotational speed and direction of the motor first and then starts at the tracked frequency. Such smooth start has no impact on the rotating motor. It is applicable to the restart upon instantaneous power failure of large-inertia load. To ensure the performance of rotational speed tracking restart, set the motor parameters in group P1.11~ P1.12 correctly.

2: Pre-excited start

It is valid only for asynchronous motor and used for building the magnetic field before the motor runs. For pre-excited current and pre-excited time, see parameters of P1.03 and P1.04.

- If the pre-excited time is 0, the AC drive cancels pre-excitation and starts to run at startup frequency.
- If the pre-excited time is not 0, the AC drive pre-excites first before startup, improving the dynamic response of the motor.

P1.01	Startup frequency	Setting Range: 0.00~10.00Hz	0.00
P1.02	Startup frequency holding time	Setting Range: 0.0∼100.0s	0.0

To ensure the motor torque at AC drive startup, set a proper startup frequency. In addition, to build excitation when the motor starts up, the startup frequency must be held for a certain period.

NOTE:

The startup frequency (P1.01) is not restricted by the frequency lower limit. If the set target frequency is lower than the startup frequency, the AC drive will not start and stays in the standby state.

During switchover between forward rotation and reverse rotation, the startup frequency holding time is disabled. The holding time is not included in the acceleration time but in the running time of simple PLC.

P1.03	Startup DC braking current/ Pre-excited current	Setting Range: 0%~100%	0
P1.04	Startup DC braking time/ Pre-excited time	Setting Range: 0.0s∼100.0s	0.0

Startup DC braking is generally used during restart of the AC drive after the rotating motor stops. Pre-excitation is used to make the AC drive build magnetic field for the asynchronous motor before startup to improve the responsiveness.

Startup DC braking is valid only for direct start (P1.00 = 0). In this case, the AC drive performs DC braking at the set startup DC braking current. After the startup DC braking time, the AC drive starts to run. If the startup DC braking time is 0, the AC drive starts directly without DC braking. The larger the startup DC braking current is, the larger the braking force is.

If the startup mode is pre-excited start (P1.00= 1), the AC drive builds magnetic field based on the set pre-excited current. After the pre-excited time, the AC drive starts to run. If the pre-excited time is 0, the AC drive starts directly without pre-excitation.

NOTE:

The startup DC braking current or pre-excited current is a percentage relative to the base value.

P1.05 Stop mode Setting Range: 0~1 0

0: Decelerate to stop

After the stop command is enabled, the AC drive decreases the output frequency according to the deceleration time and stops when the frequency decreases to zero.

1: Coast to stop

After the stop command is enabled, the AC drive immediately stops the output. The motor will coast to stop based on the mechanical inertia.

P1.06	Initial frequency of stop DC braking	Setting Range: 0.00Hz∼Maximum frequency	0.00
P1.07	Waiting time of stop DC braking	Setting Range: 0.0s∼100.0s	0.0
P1.08	Stop DC braking time	Setting Range: 0.0s~100.0s	0
P1.09	Stop DC braking current	Setting Range: 0%~100%	0.0

P1.06: During the process of decelerating to stop, the AC drive starts DC braking when the running frequency is lower than the value set in P1.06.

P1.07: When the running frequency decreases to the initial frequency of stop DC braking, the AC drive stops output for a certain period and then starts DC braking. This prevents faults such as overcurrent caused due to DC braking at high speed.

P1.08: This parameter specifies the holding time of DC braking. If it is set to 0, DC braking is cancelled.

P1.09: This parameter specifies the output current at DC braking and is a percentage relative to the base value.

The stop DC braking process is shown in the following figure 6-2.

P1.10	Brake use ratio	Setting Range: 0%~100%	100
-------	-----------------	------------------------	-----

It is valid only for the AC drive with internal braking unit and used to adjust the duty ratio of the braking unit. The larger the value of this parameter is, the better the braking result will be. However, too larger value causes great fluctuation of the AC drive bus voltage during the braking process.

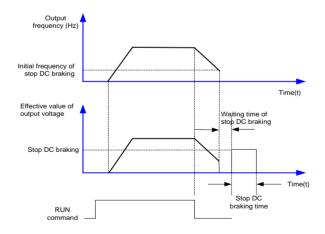


Figure 6-2 Stop DC braking process

P1.11 Rotational speed tracking mode	Setting Range: 0~2	0
--------------------------------------	--------------------	---


- 0: From frequency at stop It is the commonly selected mode.
- 1: From zero frequency- It is applicable to restart after a long time of power failure.
- 2: From the maximum frequency It is applicable to the power-generating load.

P1.12	Rotational speed	Setting Range: 1~100	20
F1.12	tracking speed	Setting Kange: 179 100	20

In the rotational speed tracking restart mode, select the rotational speed tracking speed. The larger the value is, the faster the tracking is. However, too large value may cause unreliable tracking.

P1.13	Acceleration/	Sotting Bongs 0 4	0
P1.13	Deceleration mode	Setting Range: 0、1	U

- **0: Linear acceleration/deceleration.** The output frequency increases or decreases in linear mode, showing in figure 6-3.
- 1: S-curve acceleration/deceleration. The output frequency increases or decreases along the S curve, showing in figure 6-4.

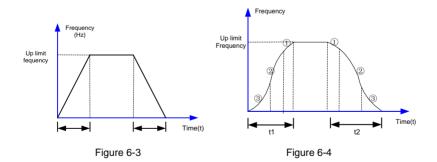

P1.14	Time proportion of S-curve start segment	Setting Range: 10.0%~50.0% (acceleration/deceleration time), P0.14+P0.15<90%	30.0%
P1.15	Time proportion of	Setting Range: 10.0%~80.0%	30.0%

S-curve end segment	(acceleration/deceleration	
	time),P0.14+P0.15<90%	

These two parameters respectively define the time proportions of the start segment and the end segment of S-curve acceleration/deceleration. They must satisfy the requirement: P1 14+P1 15≤ 90 0%

In Figure 6-4, ③is the time defined in P1.14, within which the slope of the output frequency change increases gradually. ①is the time defined in P1.15, within which the slope of the output frequency change gradually decreases to 0. Within the time between ①and ③ the slope of the output frequency change remains unchanged, that is, linear acceleration/deceleration.

NOTE:

S-curve acceleration/deceleration suitable for startup/stop of elevator, conveyor, etc.

6.3 Auxiliary Functions (Group P2)

P2.00	JOG running frequency	Setting Range: 0.10~50.00Hz	5.00Hz
P2.01	JOG acceleration time	Setting Range: 0.1∼60.0S	20.08
P2.02	JOG deceleration time	Setting Range: 0.1~60.0S	20.08

JOG acceleration time means the running time of AC drive from 0Hz to upper limit frequency.

JOG deceleration time means the running time of AC drive from upper limit frequency to 0Hz.

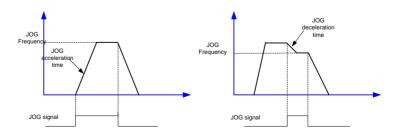


Figure 6-5 JOG operation

P2.03	Acceleration time 2	Setting Range: 0.1~6000.0	20.0
P2.04	Deceleration time 2	Setting Range: 0.1~6000.0	20.0
P2.05	Acceleration time 3	Setting Range: 0.1~6000.0	20.0
P2.06	Deceleration time 3	Setting Range: 0.1~6000.0	20.0
P2.07	Acceleration time 4	Setting Range: 0.1~6000.0	20.0
P2.08	Deceleration time 4	Setting Range: 0.1~6000.0	20.0

The GLORY provides a total of four groups of acceleration/deceleration time, and you can switch over between the four groups of acceleration/deceleration time through different state combinations of terminals. For more details, see the descriptions of P3.00~P3.09.

P2.09	Jump frequency 1	Setting Range: 0.00-500.00Hz	0.00Hz
P2.10	Jump frequency 2	Setting Range: 0.00-500.00Hz	0.00Hz
P2.11	Jump frequency amplitude	Setting Range: 0.00-30.00Hz	0.00Hz

If the set frequency is within the frequency jump range, the actual running frequency is the jump frequency close to the set frequency. Setting the jump frequency helps to avoid the mechanical resonance point of the load.

The GLORY supports two jump frequencies. If both are set to 0, the frequency jump function is disabled. The principle of the jump frequencies and jump amplitude is shown in the following figure 6-6.

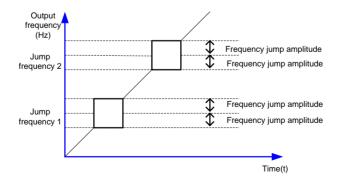


Figure 6-6 Principle of the jump frequencies and jump amplitude

P2.12	Forward/Reverse	Setting Range: 0.0~120.0s	0.0s
	rotation dead-zone time		

It is used to set the time when the output is 0 Hz at transition of the AC drive forward rotation and reverse rotation, as t1 shown in the following figure 6-7. t1.

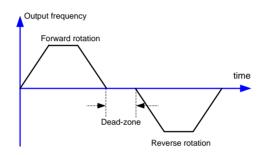


Figure 6-7 Forward/Reverse rotation dead-zone time

P2.13 Reverse control	Setting Range: 0~1	0
-----------------------	--------------------	---

It is used to set whether the AC drive allows reverse rotation. In the applications where reverse rotation is prohibited, set this parameter to 1.

P2.14	Running mode when set	Setting Range: 0~2	0
	frequency lower limit	3 . 3.	

0: Run at frequency lower limit; 1: Stop; 2: Run at zero speed

It is used to set the AC drive running mode when the set frequency is lower than the frequency lower limit. The GLORY provides three running modes to satisfy requirements of various applications

P2.15	Drop control	Setting Range: 0.00Hz~10.00Hz	0
-------	--------------	-------------------------------	---

This function is used for balancing the workload allocation when multiple motors are used to drive the same load. The output frequency of the AC drives decreases as the load increases.

You can reduce the workload of the motor under load by decreasing the output frequency for this motor, implementing workload balancing between multiple motors.

P2.16	Accumulative power-on	Setting Range:	0
F2.10	time threshold	0h∼65000h	U

If the accumulative power-on time (P7.12) reaches the value set in this parameter, the corresponding DO terminal becomes ON.

P2.17	Accumulative running	Setting Range:	0
P2.17	time threshold	0h∼65000h	0

It is used to set the accumulative running time threshold of the AC drive. If the accumulative running time (P7.08) reaches the value set in this parameter, the corresponding DO terminal becomes ON.

P2.18	Startup protection	Setting Range: 0~1	0
-------	--------------------	--------------------	---

0: NO: 1: YES

This parameter is used to set whether to enable the safety protection. If it is set to 1, the AC drive does not respond to the run command valid upon AC drive power-on (for example, an input terminal is ON before power-on). The AC drive responds only after the run command is cancelled and becomes valid again.

In addition, the AC drive does not respond to the run command valid upon fault reset of the AC drive. The run protection can be disabled only after the run command is cancelled.

In this way, the motor can be protected from responding to run commands upon power-on or fault reset in unexpected conditions.


P2.19	Frequency detection value (FDT1)	Setting Range: 0.00Hz~ Maximum frequency	50.00Hz
P2.20	Frequency detection	Setting Range:	0.5%

hysteresis (FDT1)	0.0%~100.0%	
-------------------	-------------	--

If the running frequency is higher than the value of P2.19, the corresponding DO terminal becomes ON. If the running frequency is lower than value of P2.19, the DO terminal goes OFF.

These two parameters are respectively used to set the detection value of output frequency and hysteresis value upon cancellation of the output. The value of P2.20 is a percentage of the hysteresis frequency to the frequency detection value (P2.19).

The FDT function is shown in the following figure 6-8.

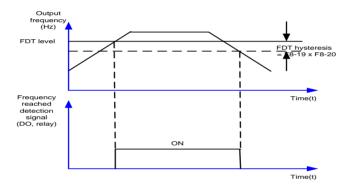

P2.21	Detection range of	Setting Range: 0.00∼	0.0%
FZ.Z1	frequency reached	100%(maximum frequency)	0.0 /6

If the AC drive running frequency is within the certain range of the set frequency, the corresponding DO terminal becomes ON.

This parameter is used to set the range within which the output frequency is detected to reach the set frequency. The value of this parameter is a percentage relative to the maximum frequency. The detection range of frequency reached is shown in the following figure 6-9.

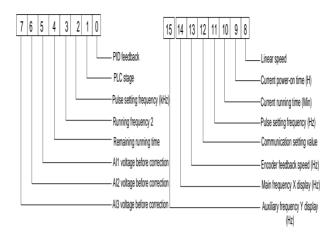


Figure 6-9 Detection range of frequency reached

P2.22	Jump frequency during acceleration	Setting Range:	0
F Z.ZZ	/deceleration	0~1	U

0: Disabled; 1: Enabled

It is used to set whether the jump frequencies are valid during acceleration/deceleration.

When the jump frequencies are valid during acceleration/deceleration, and the running frequency is within the frequency jump range, the actual running frequency will jump over the set frequency jump amplitude (rise directly from the lowest jump frequency to the highest jump frequency). The following figure 6-10 shows the diagram when the jump frequencies are valid during acceleration/deceleration.

GLORY provides two group parameters of any frequency reaching detection, setting frequency value and frequency reaching detection range respectively, shown in the figure 6-11.

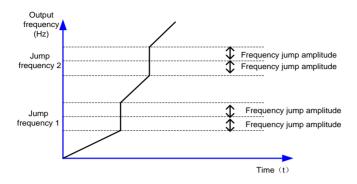


Figure 6-10 Diagram when the jump frequencies are valid during acceleration/deceleration

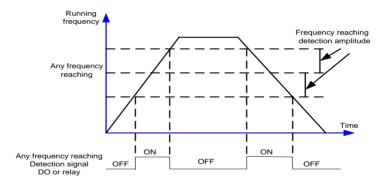


Figure 6-11 Diagram of any frequency reaching detection

P2.23	Frequency switchover point between acceleration time 1 and acceleration time 2	Setting Range: 0.00Hz~ maximum frequency	0.00Hz
P2.24	Frequency switchover point between deceleration time 1 and deceleration time 2	Setting Range: 0.00Hz~ maximum frequency	0.00Hz

This function is valid when motor 1 is selected and acceleration/deceleration time switchover is not performed by means of DI terminal. It is used to select different groups of acceleration/deceleration time based on the running frequency range rather than DI terminal during the running process of the AC drive.

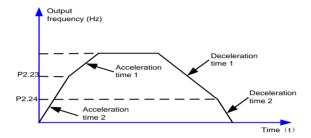


Figure 6-12 Acceleration/deceleration time switchover

During acceleration, if the running frequency is smaller than the value of P2.23, acceleration time 2 is selected. If the running frequency is larger than the value of P2.23, acceleration time 1 is selected.

During deceleration, if the running frequency is larger than the value of P2.24, deceleration time 1 is selected. If the running frequency is smaller than the value of P2.24, deceleration time 2 is selected.

P2.25	Terminal JOG preferred	Setting Range: 0.∼1	0
-------	------------------------	---------------------	---

0: Disabled: 1: Enabled

If terminal JOG is preferred, the AC drive switches to terminal JOG running state when there is a terminal JOG command during the running process of the AC drive.

P2.26	Frequency detection value (FDT2)	Setting Range: 0.00Hz~ maximum frequency	50.00Hz
P2.27	Frequency detection hysteresis (FDT2)	0.0%~100.0%	0.5%

The frequency detection function is the same as FDT1 function. For details, refer to the

descriptions of P2.20 and P2.21.

P2.28	Any frequency reaching detection value 1	Setting Range: 0.00Hz~	0.00Hz
P2.29	Any frequency reaching detection amplitude 1	Setting Range: 0.0%~100.0%	0.0%
P2.30	Any frequency reaching detection value 2	Setting Range: 0.00Hz~ maximum frequency	50.00Hz
P2.31	Any frequency reaching detection amplitude 2	Setting Range: 0.0%~100.0%	0.0%

If the output frequency of the AC drive is within the positive and negative amplitudes of the any frequency reaching detection value, the corresponding DO becomes ON.

P2.32	Zero current detection level	Setting Range: 0.0%~300.0%	5.0%
P2.33	Zero current detection delay time	Setting Range: 0.01s∼600.00s	0.10s

If the output current of the AC drive is equal to or less than the zero current detection level and the duration exceeds the zero current detection delay time, the corresponding DO becomes ON. The zero current detection is shown in the following figure 6-13.

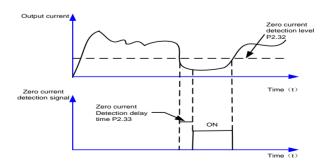


Figure 6-13 Zero current detection

P2.34	Output overcurrent threshold	Setting Range: 0.0%~300.0%	5.0%
P2.35	Output overcurrent detection delay time	Setting Range: 0.01s∼600.00s	0.10s
	detection delay time	0.015/~600.00S	

If P2.34 is 0.0%, no detection; 0.1%~300%(rated motor current)

If the output current of the AC drive is equal to or higher than the overcurrent threshold and the duration exceeds the detection delay time, the corresponding DO becomes ON. The output overcurrent detection function is shown in the following figure 6-14.

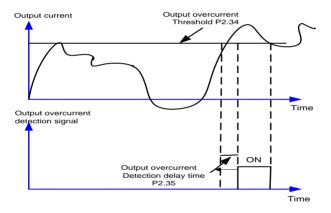


Figure 6-14 Output over current detection

P2.36	Any current reaching 1	Setting Range: 0.0%~300.0% (rated motor current)	100.0%
P2.37	Any current reaching 1 amplitude	Setting Range: 0.0%~300.0% (rated motor current)	0.0%
P2.38	Any current reaching 2	Setting Range:	100.0%

		0.0%~300.0%	
		(rated motor current)	
	Any current reaching 2 amplitude	Setting Range:	
P2.39		0.0%~300.0%	0.0%
		(rated motor current)	

If the output current of the AC drive is within the positive and negative amplitudes of any current reaching detection value, the corresponding DO becomes ON.

The GLORY provides two groups of any current reaching detection parameters, including current detection value and detection amplitudes, as shown in the following figure6-15.

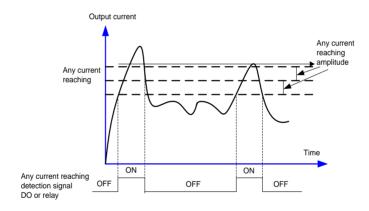


Figure 6-15 Any current reaching detection

P2.40	Timing function	Setting Range: 0~1	0
P2.41	Timing duration selection	Setting Range: 0~3	2.0%
P2.42	Timing duration	Setting Range: 0.0Min∼6500.0Min	0Min

These parameters are used to implement the AC drive timing function.

If P2.40 is set to 1, the AC drive starts to time at startup. When the set timing duration is

reached, the AC drive stops automatically and meanwhile the corresponding DO becomes ON

The AC drive starts timing from 0 each time it starts up and the remaining timing duration can be queried by b0.25.

The timing duration is set in P2.41 and P2.42, in unit of minute. P2.41 Timing duration selection:

0: P2.41 setting; 1: VI; 2: CI; 3: WI;

P2.43	VI input voltage lower limit	Setting Range: 0.00V~P2.44	3.1V
P2.44	VI input voltage upper limit	Setting Range: P2.43~10.00V	6.8V

These two parameters are used to set the limits of the input voltage to provide protection on the AC drive. When the Al1 input is larger than the value of P2.43 or smaller than the value of P2.44, the corresponding DO becomes ON, indicating that Al1 input exceeds the limit.

P2.45	Module temperature	Satting Banga 000 4000	75℃
P2.45	threshold	Setting Range: 0°C~100°C	75.0

When the heatsink temperature of the AC drive reaches the value of this parameter, the corresponding DO becomes ON, indicating that the module temperature reaches the threshold.

P2.46 Cooling fan control	Setting Range: 0~1	0
---------------------------	--------------------	---

It is used to set the working mode of the cooling fan. If this parameter is set to 0, the fan works when the AC drive is in running state. When the AC drive stops, the cooling fan works if the heatsink temperature is higher than 40°C, and stops working if the heatsink temperature is lower than 40°C.

If this parameter is set to 1, the cooling fan keeps working after power-on.

		Setting Range:	
P2.47	Wakeup frequency	Dormant frequency	0.00Hz
		(P2.49) ∼P0.05	
P2.48		Setting Range:	0.00
P2.48	Wakeup delay time	0.0s∼6500.0s	0.0s
	Dormant frequency	Setting Range:	
P2.49		0.00Hz∼Wakeup	0
		frequency (P2.47)	
D2 50	Dormant delay time	Setting Range:	0.00
P2.50		0.0s∼6500.0s	0.0s

These parameters are used to implement the dormant and wakeup functions in the water supply application.

When the AC drive is in running state, the AC drive enters the dormant state and stops automatically after the dormant delay time (P2.50) if the set frequency is lower than or equal to the dormant frequency (P2.49).

When the AC drive is in dormant state and the current running command is effective, the AC drives starts up after the wakeup delay time (P2.48) if the set frequency is higher than or equal to the wakeup frequency (P2.47).

Generally, set the wakeup frequency equal to or higher than the dormant frequency. If the wakeup frequency and dormant frequency are set to 0, the dormant and wakeup functions are disabled.

When the dormant function is enabled, if the frequency source is PID, whether PID operation is performed in the dormant state is determined by P6.28. In this case, select PID operation enabled in the stop state (P6.28 = 1).

P2.51	Current running time	Setting Range:	0.0s
P2.51	reached	0.0s∼6500.0s	0.03

If the current running time reaches the value set in this parameter, the corresponding DO becomes ON, indicating that the current running time is reached.

6.4 Input Terminals (Group P3)

P3.00	X1 function selection	Setting range: 0~50	1
P3.01	X2 function selection	Setting range: 0~50	2
P3.02	X3 function selection	Setting range: 0~50	9
P3.03	X4 function selection	Setting range: 0~50	12
P3.04	X5 function selection	Setting range: 0~50	13
P3.05	X6 function selection	Setting range: 0∼50	0
P3.06	X7 function selection	Setting range: 0~50	0
P3.07	X8 function selection	Setting range: 0~50	0
P3.08	X9 function selection	Setting range: 0~50	0
P3.09	X10 function selection	Setting range: 0~50	0

Terminal X1~X10 provide rich functions, user can select it as required by set P3.00 to P3.09.For details, see following table 6-1,and X1 to terminal FWD,X2 to terminal REV.

Table 6-1 Functions of XI terminals

Value	Function	Value	Function
0	No function	1	Forward RUN (FWD)
2	Reverse RUN (REV)	3	Three-line control
4	Forward JOG (FJOG)	5	Reverse JOG (RJOG)
6	Terminal UP	7	Terminal DOWN
8	Coast to stop (FRS)	9	Fault reset
10	RUN pause	11	Normally open(NO) input of external
12	Mulit-reference terminal 1	13	Mulit-reference terminal 2
14	Mulit-reference terminal 3	15	Mulit-reference terminal 4
16	Terminal 1 for acceleration /deceleration time selection	17	Terminal 2 for acceleration /deceleration time selection

18	Frequency source switchover	19	UP/DOWN setting clear (terminal, operation panel)
20	Command source switchover	21	Acceleration/Deceleration prohibited
22	PID pause	23	PLC status reset
24	Swing pause	25	Counter input DI5
26	Counter reset	27	Length count input
28	Length reset	29	Reserved
30	Reserved	31	Reserved
32	Immediate DC braking	33	Normally closed(NC)input of external fault
34	Frequency modification forbidden	35	Reverse PID action direction
36	External STOP terminal 1	37	Command source switchover terminal 2
38	PID integral pause	39	Switchover between main frequency source X and preset frequency
40	Switchover between main frequency source Y and preset	41	Reserved
42	Reserved	43	PID parameter switchover
44	User-defined fault 1	45	User-defined fault 2
46	Reserved	47	Reserved
48	External STOP terminal 2	49	Deceleration DC braking
50	Clear the current running time		

Description of the functions shown in table 6-1:

1~2: Forward/Reverse terminals

The terminal is used to control forward or reverse RUN of the AC drive.

3: Three-line control

The terminal determines three-line control of the AC drive. For details, see the description of

P3.14

4~5: Forward/Reverse JOG

FJOG indicates forward JOG running, while RJOG indicates reverse JOG running. The JOG frequency, acceleration time and deceleration time are described respectively in P2.00, P2.01 and P2.02

6~7: Terminal UP/ Terminal DOWN

If the frequency is determined by external terminals, the terminals with the two functions are used as increment and decrement commands for frequency modification. When the frequency source is digital setting, they are used to adjust the frequency. The change rate of terminal UP/DOWN per second is set by P3.15.

8: Coast to stop

The AC drive blocks its output, the motor coasts to rest and is not controlled by the AC drive. It is the same as coast to stop described in P1.05.

9: Fault reset (RESET)

The terminal is used for fault reset function, the same as the function of RESET key on the operation panel. Remote fault reset is implemented by this function.

10: RUN pause

The AC drive decelerates to stop, but the running parameters are all memorized, such as PLC, swing frequency and PID parameters. After this function is disabled, the AC drive resumes its status before stop.

11: Normally open (NO) input of external fault

If this terminal becomes ON, the AC drive reports E-13 and performs the fault protection action. The fault signal has two input mode: normally open and normally close.

As you see in figure 6-17, X4 is normally open input, and KM is external fault relay.

12~15: Multi-reference terminal

The four multi-reference terminals have 16 state combinations, corresponding to 16

reference values, as listed in the following table.

K4	K3	K2	K1	Reference Setting	Corresponding Parameter
OFF	OFF	OFF	OFF	Reference 0	Pb.00
OFF	OFF	OFF	ON	Reference 1	Pb.01
OFF	OFF	ON	OFF	Reference 2	Pb.02
OFF	OFF	ON	ON	Reference 3	Pb.03
OFF	ON	OFF	OFF	Reference 4	Pb.04
OFF	ON	OFF	ON	Reference 5	Pb.05
OFF	ON	ON	OFF	Reference 6	Pb.06
OFF	ON	ON	ON	Reference 7	Pb.07
ON	OFF	OFF	OFF	Reference 8	Pb.08
ON	OFF	OFF	ON	Reference 9	Pb.09
ON	OFF	ON	OFF	Reference 10	Pb.10
ON	OFF	ON	ON	Reference 11	Pb.11
ON	ON	OFF	OFF	Reference 12	Pb.12
ON	ON	OFF	ON	Reference 13	Pb.13
ON	ON	ON	OFF	Reference 14	Pb.14
ON	ON	ON	ON	Reference 15	Pb.15

If the frequency source is multi-reference, the value 100% of Pb.00 to Pb.15 corresponds to the value of P0.05 (Maximum frequency).

Besides the multi-speed function, the multi-reference can be also used as the PID setting source or the voltage source for V/F separation, satisfying the requirement on switchover of different setting values.

Figure 6-16 multi-reference wiring diagrams

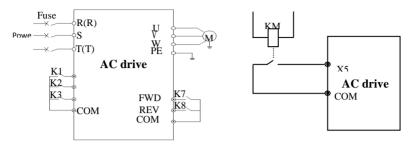


Figure 6-17 External fault input

16~17: Acceleration/Deceleration time selection

Two terminals for acceleration/deceleration time selection have four state combinations, as listed in the following table.

Terminal 2	Terminal 1	Acceleration/Deceleration time selection
OFF	OFF	Acceleration time 1/ Deceleration time 1
OFF	ON	Acceleration time 2/ Deceleration time 2
ON	OFF	Acceleration time 3/ Deceleration time 3
ON	ON	Acceleration time 4/ Deceleration time 4

Table 6-2 Acceleration/Deceleration time selection

18: Frequency source switchover

The terminal is used to perform switchover between two frequency sources according to the setting in P0.19.

19: UP and DOWN setting clear (terminal, operation panel)

If the frequency source is digital setting, the terminal is used to clear the modification by using the UP/DOWN function or the UP/DOWN key on the operation panel, returning the set frequency to the value of P0.02.

20: Command source switchover terminal

If the command source is set to terminal control (P0.03=1), this terminal is used to perform switchover between terminal control and operation panel control.

If the command source is set to communication control (P0.03=2), this terminal is used to perform switchover between communication control and operation panel control.

21: Acceleration/Deceleration prohibited

It enables the AC drive to maintain the current frequency output without being affected by external signals (except the STOP command).

22: PID pause

PID is invalid temporarily. The AC drive maintains the current frequency output without supporting PID adjustment of frequency source.

23: PLC status reset

The terminal is used to restore the original status of PLC control for the AC drive when PLC control is started again after a pause.

24: Swing pause

The AC drive outputs the central frequency, and the swing frequency function pauses.

25: Counter input

This terminal is used to count pulses.

26: Counter reset

This terminal is used to clear the counter status.

27: Length count input

This terminal is used to count the length, for details, see PE.05 and PE.06 description.

28: Length reset

This terminal is used to clear the length (PE.06).

32: Immediate DC braking

After this terminal becomes ON, the AC drive directly switches over to the DC braking state.

33: Normally closed (NC) input of external fault

34: Frequency modification forbidden

After this terminal becomes ON, the AC drive does not respond to any frequency modification.

35: Reverse PID action direction

After this terminal becomes ON, the PID action direction is reversed to the direction set in P6.03

36: External STOP terminal 1

In operation panel mode, this terminal can be used to stop the AC drive, equivalent to the function of the STOP key on the operation panel.

37: Command source switchover terminal 2

It is used to perform switchover between terminal control and communication control. If the command source is terminal control, the system will switch over to communication control after this terminal becomes ON.

38: PID integral pause

After this terminal becomes ON, the integral adjustment function pauses. However, the proportional and differentiation adjustment functions are still valid.

39: Switchover between main frequency source X and preset frequency

After this terminal becomes ON, the frequency source X is replaced by the preset frequency set in P0.02.

40: Switchover between auxiliary frequency source Y and preset frequency

After this terminal is enabled, the frequency source Y is replaced by the preset frequency set in P0.02.

43: PID parameter switchover

If the PID parameters switchover performed by means of DI terminal (P6.18 = 1), the PID parameters are P6.05 to P6.07when the terminal becomes OFF; the PID parameters are P6.15 to P6.17 when this terminal becomes ON.

44~45: User-defined fault 1,2

If these two terminals become ON, the AC drive reports E-32 and E-33 respectively, and performs fault protection actions based on the setting in PA.46.

47: Emergency stop

When this terminal becomes ON, the AC drive stops within the shortest time. During the stop process, the current remains at the set current upper limit. This function is used to satisfy the requirement of stopping the AC drive in emergency state.

48: External STOP terminal 2

In any control mode (operation panel, terminal or communication), it can be used to make the AC drive decelerate to stop. In this case, the deceleration time is deceleration time 4.

49: Deceleration DC braking

When this terminal becomes ON, the AC drive decelerates to the initial frequency of stop DC braking and then switches over to DC braking state.

50: Clear the current running time

When this terminal becomes ON, the AC drive's current running time is cleared. This function must be supported by P2.40 and P2.41.

P3.10	VI function selection(DI)	Setting Range: 0~50	0
P3.11	CI function selection(DI)	Setting Range: 0~50	0
P3.12	WI function selection(DI)	Setting Range: 0~50	0

The functions of these parameters are to use AI as DI. When AI is used as DI, the AI state is high level if the AI input voltage is 7 V or higher and is low level if the AI input voltage is 3V or lower. The AI state is hysteresis if the AI input voltage is between 3 V and 7 V. A1-10 is used to determine whether high level valid or low level valid when AI is used as DI. See the

following figure 6-18.

The setting of Als (used as DI) function is the same as that of Xs. For details, see the descriptions of group P3.

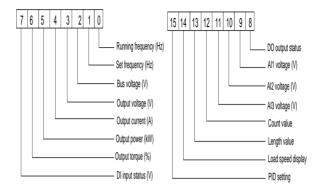


Figure 6-18 Relationship of Al input voltage and corresponding DI status

P3.13	X filter time	Setting Range:	0.010s
1 3.13	X inter time	0.000s~1.000s	0.0103


It is used to set the software filter time of X terminal status. If DI terminals are liable to interference and may cause malfunction, increase the value of this parameter to enhance the anti-interference capability. However, increase of X filter time will reduce the response of X terminals.

P3.14	Terminal command mode	Setting Range: 0~3	0
-------	-----------------------	--------------------	---

This parameter is used to set the mode in which the AC drive is controlled by external terminals in four modes.

0: Two-line mode 1

K2	K1	RUN Command
0	0	Stop
0	1	Forward RUN
1	0	Reverse RUN
1	1	Stop

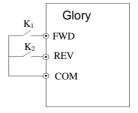

1: Two-line mode 2

K2	K1	RUN Command
0	0	Stop
1	0	Stop
0	1	Forward RUN
1	1	Reverse RUN

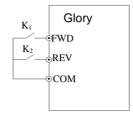



Figure 6-20 Two-line



SB1: Stop button

SB2: Forward button


SB3: Reverse button

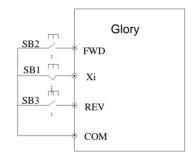

3: Three-line mode 2

SB1: Stop button

SB2: Run button

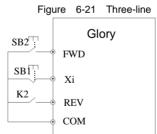

K2	Running direction
0	Forward
1	Reverse

Figure 6-22 Three-line mode 2

NOTE: When alarm to stop, if running command model chose terminals valid and FWD/REV is in valid status, reset the fault, the AC drive will start at once.

P3.15 Terminal UP/DOWN rate	Setting Range: 0.001Hz~65.535	1.000Hz	
-----------------------------	----------------------------------	---------	--

It is used to adjust the rate of change of frequency when the frequency is adjusted by means of terminal UP/DOWN.

P3.16 VI curve 1 minimum input Corresponding setting of VI setting Range: curve 1 minimum input P3.17 Setting Range: -100.0%~+100.0% Setting Range: -100.0%~+100.0% Setting Range: -100.0%~+100.0% P3.16~+10.00v	%
0.00v~P3.18 P3.17	%
P3.17 curve 1 minimum input -100.0%~+100.0% P3.18 VI curve 1 maximum input Setting Range: P3.16~+10.00v	
curve 1 minimum input -100.0%~+100.0% P3.18 VI curve 1 maximum input P3.16~+10.00v 10.0	
P3.18 VI curve 1 maximum input P3.16~+10.00v	0v
P3.16~+10.00v	
Corresponding setting of VI Setting Range:	00/
curve 1 maximum input -100.0%~+100.0%	U 70
P3.20 VI filter time Setting Range:	ne.
0.00s~10.00s	0.10s
P3.21 CI curve 1 minimum input Setting Range: 0.00	0.00V
0.00v~P3.23	
P3.22 Corresponding setting of CI Setting Range:	0/
curve 1 minimum input -100.0%~+100.0%	/0
P3.23 CI curve 1 maximum input Setting Range: 10.0	ωv
P3.21~+10.00v	10.00v
Corresponding setting of CI Setting Range:	n %
curve 1 maximum input -100.0%~+100.0%	J 70
P3.25 CI filter time Setting Range: 0.10	Ne
0.00s~10.00s	,3
P3.26 WI curve 1 minimum input Setting Range: 0.00	nv.
0.00v~P3.28	,,
P3.27 Corresponding setting of WI Setting Range: 0.0	%

	curve 1 minimum input	-100.0%~+100.0%	
P3.28	WI curve 1 maximum input	Setting Range:	10.00v
P3.20	wi curve i maximum input	P3.26~+10.00v	10.000
P3.29	Corresponding setting of WI	Setting Range:	100.0%
P3.29	curve 1 maximum input	-100.0%~+100.0%	100.0%
P3.30	WI filter time	Setting Range:	0.10s
P3.30	wi inter time	0.00s~10.00s	0.108
P3.31	Dulas minimum innut	Setting Range:	0.00kHz
P3.31	Pulse minimum input	0.00kHz~P3.33	
P3.32	Corresponding setting of	Setting Range:	2.00/
P3.32	pulse minimum input	-100.0%~+100.0%	0.0%
P3.33	Pulse maximum input	Setting Range:	0.00kHz
F3.33	Puise maximum input	P3.31~100.00kHz	0.00KH2
P3.34	Corresponding setting of	Setting Range:	0.0%
	pulse maximum input	-100.0%~+100.0%	0.0%
P3.35	Pulse filter time	Setting Range:	0.10s
F3.33	ruise iiiter tiille	0.00s~10.00s	0.108

These parameters are used to define the relationship between the analog input voltage and the corresponding setting.

When the analog input voltage exceeds the maximum value (P3.18), the maximum value is used. When the analog input voltage is less than the minimum value (P8.16), the value set in P3.36 (Setting for AI less than minimum input) is used.

When the analog input is current input, 1 mA current corresponds to 0.5 V voltage.

P3.20 (VI1 filter time) is used to set the software filter time of VI1. If the analog input is liable to interference, increase the value of this parameter to stabilize the detected analog input.

However, increase of the VI filter time will slow the response of analog detection. Set this parameter properly based on actual conditions.

In different applications, 100% of analog input corresponds to different nominal values. For details, refer to the description of different applications.

Two typical setting examples are shown in the following figure

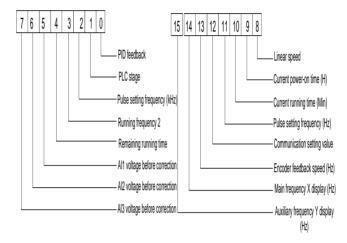


Figure 6-23 Corresponding relationship between analog input and set values

P3.36 VI curve selection	Setting Range: 333~000	321
--------------------------	------------------------	-----

The unit's digit, ten's digit and hundred's digit of this parameter are respectively used to select the corresponding curve of VI、CI and WI. Any of the five curves can be selected for VI、CI and WI.

Curve 1, curve 2 and curve 3 are all 2-point curves, set in group P3. Curve 1 corresponding to P3.16 to P3.20, Curve 2 corresponding to P3.21 to P3.25, Curve 3 corresponding to P3.26 to P3.30.

P3.37	Setting for VI less	Setting Range: 333~000	321
F 3.37	than minimum input	Setting Kange: 555 - 1000	321

This parameter is used to determine the corresponding setting when the analog input voltage is less than the minimum value. The unit's digit, ten's digit and hundred's digit of this parameter respectively correspond to the setting for VI、CI and WI.

If the value of a certain digit is 0, when analog input voltage is less than the minimum input, the corresponding setting of the minimum input (P3.16 \, P3.22 \, P3.26) is used.

If the value of a certain digit is 1, when analog input voltage is less than the minimum input, the corresponding value of this analog input is 0.0%.

P3.38 X1 delay time	Setting Range:	0.0s	
	0.0s∼3600.0s	0.08	
D2 20	P3.39 X2 delay time	Setting Range:	0.0s
P3.39		0.0s∼3600.0s	
D2 40	P3.40 X3 delay time	Setting Range:	
P3.40		0.0s∼3600.0s	0.0s

These parameters are used to set the delay time of the AC drive when the status of X terminals changes.

Currently, only X1, X2 and X3 support the delay time function.

P3.41	X valid mode	Setting Range:	00000
	Selection 1	00000~11111	00000
D0 40	X valid mode	Setting Range:	00000
P3.42	Selection 2	00000~11111	00000
P3.43	Al as valid status selection of X	Setting Range: 000~111	000

0: High level valid, 1: Low level valid.

These parameters are used to set the valid mode of X terminals.

The X terminal is valid when being connected with COM, and invalid when being disconnected from COM.

The X terminal is invalid when being connected with COM, and invalid when being disconnected from COM.

P3.41 control terminal description: Unit's digit: X1, Ten's digit: X2, Hundred's digit: X3, Thousand's digit: X4, Ten thousand's digit: X5.

P3.42 control terminal description: Unit's digit: X6, Ten's digit: X7, Hundred's digit: X8, Thousand's digit: X9, Ten thousand's digit: X10

P3.43 control terminal description: Al1, Al2, Al3.

6.5 Output Terminals (Group P4)

P4.00	FM terminal output mode	Setting Range: 0~1	0
-------	-------------------------	--------------------	---

0: Pulse output (FMP); 1: Switch signal output (FMR)

The FM terminal is programmable multiplexing terminal. It can be used for high-speed pulse output (FMP), with maximum frequency of 100 kHz. Refer to P4.06 for relevant functions of FMP. It can also be used as open collector switch signal output (FMR) .

P4.01	FMR function (open-collector output terminal)	Setting Range: 0∼41	0
P4.02	Relay function (T/A-T/B-T/C)	Setting Range: 0~41	2
P4.03	Extension card relay function (P/A-P/B-P/C)	Setting Range: 0~41	0
P4.04	DO1 function selection (open-collector output terminal)	Setting Range: 0∼41	1
P4.05	Extension card DO2 function	Setting Range: 0~41	4

These five parameters are used to select the functions of the five digital output terminals. T/A-T/B-T/C and P/A-P/B-P/C are respectively the relays on the control board and the extension card.

The functions of the output terminals are described in the following table.

Table 6-3 Functions of output terminals

Value	Function	Value	Function
0	No output	1	AC drive running
2	Fault output (stop)	3	Frequency-level detection FDT1
4	Frequency reached	5	Zero-speed running(no output at stop)

6	Motor overload pre-warning	7	AC drive overload pre-warning
8	Set count value reached	9	Designated count reached
10	Length reached	11	PLC cycle complete
12	Current running time reached	13	Frequency limited
14	Reserved	15	Ready for RUN
16	VI larger than AI	17	Frequency upper limit reached
18	Frequency lower limit reached (no output at stop)	19	Under-voltage state output
20	Communication setting	21	Reserved
22	Accumulative running time reached	23	Zero-speed running 2 (having output at stop)
24	Accumulative power-on time	25	Frequency level detection FDT2 output
26	Frequency 1 reached	27	Frequency 2 reached
28	Current 1 reached	29	Current 2 reached
30	Timing reached	31	VI input limit exceeded
32	Load becoming 0	33	Reverse running
34	Zero current state	35	Module temperature reached
36	Software current limit exceeded	37	Frequency lower limit reached (having output at stop
38	Fault output	39	Motor overheat warning
40	Current running time reached	41	Fault output (no output at undervoltage)

Function description:

0: No output

The terminal has no function.

1: AC drive running

When the AC drive is running and has output frequency (can be zero), the terminal becomes

ON.

2: Fault output (stop))

When the AC drive stops due to a fault, the terminal becomes ON.

- 3: Frequency-level detection FDT1 output: Refer to the descriptions of P2.19 and P2.20.
- 4: Frequency reached: Refer to the descriptions of P2.21.
- 5: Zero-speed running (no output at stop)

If the AC drive runs with the output frequency of 0, the terminal becomes ON. If the AC drive is in the stop state, the terminal becomes OFF.

6: Motor overload pre-warning

The AC drive judges whether the motor load exceeds the overload pre-warning threshold before performing the protection action. If the pre-warning threshold is exceeded, the terminal becomes ON. For motor overload parameters, see the descriptions of PA.00 to PA.02.

7: AC drive overload pre-warning

The terminal becomes ON 10s before the AC drive overload protection action is performed.

- 8: Set count value reached: The terminal becomes ON when the count value reaches the value set in PE.08.
- 9: Designated count value reached: The terminal becomes ON when the designated value reaches the value set in PE.09.
- 10: Length reached: The terminal becomes ON when the detected actual length exceeds the value set in PE.05.
- 11: PLC cycle complete: When simple PLC completes one cycle, the terminal outputs a pulse signal with width of 250 ms.
- 12: Current running time reached: If the current running time of the AC drive exceeds the time set in P2.51, the terminal becomes ON.

13: Frequency limited

If the set frequency exceeds the frequency upper limit or lower limit and the output frequency of the AC drive reaches the upper limit or lower limit, the terminal becomes ON.

15: Ready for RUN

If the AC drive main circuit and control circuit become stable, and the AC drive detects no fault and is ready for RUN, the terminal becomes ON.

16: VI larger than CI

When the input of VI is larger than the input of CI, the terminal becomes ON.

17: Frequency upper limit reached

If the running frequency reaches the upper limit, the terminal becomes ON.

18: Frequency lower limit reached (no output at stop)

If the running frequency reaches the lower limit, the terminal becomes ON. In the stop state, the terminal also becomes ON.

19: Under-voltage state output

If the AC drive is in under-voltage state, the terminal becomes ON.

20: Communication setting

DO output controlled by communication setting, refer to the communication protocol in chapter nine.

22: Accumulative running time reached

If the accumulative running time of the AC drive exceeds the time set in P2.16, the terminal becomes ON.

23: Zero-speed running 2 (having output at stop)

If the output frequency of the AC drive is 0, the terminal becomes ON. In the state of stop, the signal is still ON.

24: Accumulative power-on time reached

If the AC drive accumulative power-on time exceeds the value set in P2.17, the terminal becomes ON.

- 25: Frequency level detection FDT2 output: Refer to the descriptions of P2.26 and P2.27.
- 26: Frequency 1 reached: Refer to the descriptions of P2.28 and P2.29.
- 27: Frequency 2 reached: Refer to the descriptions of P2.30 and P2.31.
- 28: Current 1 reached: Refer to the descriptions of P2.36 and P2.37. 29: Current 2 reached: Refer to the descriptions of P2.38 and P2.39.
- 30: Timing reached

If the timing function (P2.40) is valid, the terminal becomes ON after the current running time of the AC drive reaches the set time(P2.42).

31: VI input limit exceeded

If VI input is larger than the value of P2.44(VI input voltage upper limit) or lower than the value of P2.43 (VI input voltage lower limit), the terminal becomes ON.

32: Load becoming 0:

If the load becomes 0, the terminal becomes ON.

33: Reverse running:

If the AC drive is in the reverse running state, the terminal becomes ON.

- 34: Zero current state: Refer to the descriptions of P2.32 and P2.33.
- 35: Module temperature reached

If the heat-sink temperature of the inverter module (P7.06) reaches the set module temperature threshold (P2.45), the terminal becomes ON.

- 36: Software current limit exceeded: Refer to the descriptions of P2.32 and P2.33
- 37: Frequency lower limit reached (having output at stop)

If the running frequency reaches the lower limit, the terminal becomes ON. In the stop state,

the signal becomes OFF.

38: Fault output: If a fault occurs on the AC drive and the AC drive stop, the terminal becomes ON.

39: Motor overheat warning

If the motor temperature (b0.34) reaches the temperature set in PA.54 (Motor overheat warning threshold), the terminal becomes ON.

40: Current running time reached: If the current running time of AC drive exceeds the value of P2.51, the terminal becomes ON.

41: Fault output

When the AC drive stops due to a fault, the terminal becomes ON.

Mark: No output when under-voltage

P4.06	FMP function selection	Setting Range: 0~16	0
P4.07	AO1 function selection	Setting Range: 0~16	0
P4.08	AO2 function selection	Setting Range: 0~16	1

The output pulse frequency of the FMP terminal ranges from 0.01 kHz to "Maximum FMP output frequency" (P5.09). The value of P5.09 is between 0.01 kHz and 100.00 kHz.

The output range of AO1 and AO2 is 0–10 V or 0–20 mA.

The relationship between pulse and analog output ranges and corresponding functions is listed in the following table.

Value	Function	Range (Corresponding to Pulse or Analog Output Range 0.0%–100.0%)
0	Running frequency	0 to maximum output frequency
1	Set frequency	0 to maximum output frequency
2	Output current	0~2 times of rated motor current
3	Output current	0.0A~1000.0A

4	Output torque (absolute value)	0 to 2 times of rated motor torque
_	Output torque (actual	-2 times of rated motor torque to 2 times of rated
5	value)	motor torque
6	Output voltage	0~1.2 times of rated AC drive voltage
7	Output voltage	0.0V~1000.0V
8	Metarratetional annual	0 to rotational speed corresponding to
8	Motor rotational speed	maximum output frequency
9	Output power	0~2 times of rated power
10	VI input	0~10V
11	CI input	0~10V (or 4~20mA)
12	WI input	0~10V (or 4~20mA)
13	Pulse input	0.01kHz∼100.00kHz
14	Communication setting	0.0%~100.0%
15	Length	0 to maximum set length
16	Count value	0 to maximum count value

P4.09	Maximum FMP output	Setting Range:	50.00kHz
F4.09	frequency	0.01kHz~100.00kHz	30.00KH2

If the FM terminal is used for pulse output, this parameter is used to set the maximum frequency of pulse output.

P4.10	AO1 offset coefficient	Setting Range: -100.0%~100.0%	0.0%
P4.11	AO1 gain	Setting Range: -10.00~+10.00	1.00
P4.12	AO2 offset coefficient	Setting Range: -100.0%~100.0%	0.0%
P4.13	AO2 gain	Setting Range: -10.00~+10.00	1.00

These parameters are used to correct the zero drift of analog output and the output

amplitude deviation. They can also be used to define the desired AO curve.

If "b" represents zero offset, "k" represents gain, "Y" represents actual output, and "X" represents standard output, the actual output is: Y = kX + b.

The zero offset coefficient 100% of AO1 and AO2 corresponds to 10 V (or 20 mA). The standard output refers to the value corresponding to the analog output of 0 to 10 V (or 0 to 20 mA) with no zero offset or gain adjustment.

For example, if the analog output is used as the running frequency, and it is expected that the output is 8 V when the frequency is 0 and 3 V at the maximum frequency, the gain shall be set to -0.50, and the zero offset shall be set to 80%.

P4.14	FM output delay time	Setting Range: 0.0s~3600.0s	0.0s
P4.15	Relay1 output delay time	Setting Range: 0.0s~3600.0s	0.0s
P4.16	Relay2 output delay time	Setting Range: 0.0s∼3600.0s	0.0s
P4.17	DO1 output delay time	Setting Range: 0.0s∼3600.0s	0.0s
P4.18	DO2 output delay time	Setting Range: 0.0s∼3600.0s	0.0s

These parameters are used to set the delay time of output terminals FM, relay 1, relay 2, DO1 and DO2 from status change to actual output.

P4.19	DO valid mode selection	Setting Range: 00000~11111	00000
-------	-------------------------	----------------------------	-------

It is used to set the logic of output terminals FM, relay 1, relay 2, DO1 and DO2.

Unit's digit: FM valid mode; Ten's digit: Relay 1 valid mode; Hundred's digit: Relay 2 valid mode; Thousand's digit: DO1 valid mode; Ten thousand's digit: DO2 valid mode.

- 0: Positive logic, The output terminal is valid when being connected with COM, and invalid when being disconnected from COM.
- 1: Positive logic, The output terminal is invalid when being connected with COM, and valid when being disconnected from COM.

6.6 V/F Control Parameter (Group P5)

P5.00 V/F curve setting	Setting Range: 00∼11	00
-------------------------	----------------------	----

According to the different load requirements, there are five kinds of curve modes can be selected base on P5.00 setting.

- 0: Linear V/F: It is applicable to common constant torque load.
- 1: **Multi-point V/F:** It is applicable to special load such as dehydrator and centrifuge. Any such V/F curve can be obtained by setting parameters of PA.01 to PA.06.
- 2: Square V/F: It is applicable to centrifugal loads such as fan and pump.
- **10:** V/F complete separation: In this mode, the output frequency and output voltage of the AC drive are independent. The output frequency is determined by the frequency source, and the output voltage is determined by "Voltage source for V/F separation" (PA.13).It is applicable to induction heating, inverse power supply and torque motor control.
- 11: V/F half separation: In this mode, V and F are proportional and the proportional relationship can be set in PA.12. The relationship between V and F are also related to the rated motor voltage and rated motor frequency in Group PA.


Assume that the voltage source input is X (0 to 100%), the relationship between V and F is:


V/F = 2 * X * (Rated motor voltage)/(Rated motor frequency)

P5.01	Torque boost	Setting Range: 0.0%~30.0%	Model
F3.01	Torque boost	Setting Kange: 0.0% ~30.0%	dependent

To compensate the low frequency torque characteristics of V/F control, you can boost the output voltage of the AC drive at low frequency by modifying P5.01.

If the torque boost is set to too large, the motor may overheat, and the AC drive may suffer overcurrent.

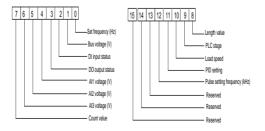

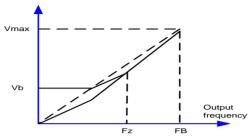

Vmax: Maximum Output voltage

Vb: Voltage of Manual torque boost

Fz: Cut-off frequency of Manual torque boost

FB: Rated running frequency

Figure 6-24 Manual torque boost

	P5.02	Cut-off frequency of	Setting Range: 0.00 Hz to maximum	50
I	P3.02	torque boost	output frequency	50

This parameter defines the cut-off frequency of torque boost, see Fz in figure 6-24, this cut-off frequency suitable for any V/F curve in P5.00.

P5.03	Multi-point V/F frequency 1 (F1)	Setting Range: 0.00Hz ~ P5.05	0.00Hz
P5.04	Multi-point V/F voltage 1 (V1)	Setting Range: 0%∼ 100.0%	0.0%
P5.05	Multi-point V/F frequency 2 (F2)	Setting Range: P5.03 ∼ P5.07	0.00Hz
P5.06	Multi-point V/F voltage 2 (V2)	Setting Range: 0%∼ 100.0%	0.0%
P5.07	Multi-point V/F frequency 3 (F3)	Setting Range: P5.05 to rated motor frequency	0.00Hz
P5.08	Multi-point V/F voltage 3 (V3)	Setting Range: 0%∼ 100.0%	0.0%

These six parameters are used to define the multi-point V/F curve.

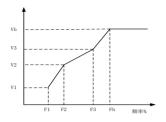


Figure 6-25 Setting of multi-point V/F curve

 $V1 \sim V3$: 1st, 2nd and 3rd voltage percentages of multi-point V/F

 $\label{eq:F1} F1\!\sim\!F3\colon\mbox{ 1st, 2nd and 3rd frequency}$ percentages of multi-point V/F

Fb: Rated motor running frequency

P5.09 V/F slip compensation gair	Setting Range: 0%~200%	0%
----------------------------------	------------------------	----

This parameter is valid only for the asynchronous motor.

It can compensate the rotational speed slip of the asynchronous motor when the load of the motor increases, stabilizing the motor speed in case of load change. If this parameter is set to 100%, it indicates that the compensation when the motor bears rated load is the rated motor slip. The rated motor slip is automatically obtained by the AC drive through calculation based on the rated motor frequency and rated motor rotational speed in P8.05.

Generally, if the motor rotational speed is different from the target speed, slightly adjust this parameter.

Setting Range: 0~200 64	V/F over-excitation gain	P5.10	
-------------------------	--------------------------	-------	--

During deceleration of the AC drive, over-excitation can restrain rise of the bus voltage, preventing the overvoltage fault. The larger the over-excitation is, the better the restraining result is.

Increase the over-excitation gain if the AC drive is liable to overvoltage error during deceleration. However, too large over-excitation gain may lead to an increase in the output current. Set P5.09 to a proper value in actual applications.

Set the over-excitation gain to 0 in the applications where the inertia is small and the bus voltage will not rise during motor deceleration or where there is a braking resistor.

P5.11	V/F oscillation suppression	Setting Range: 0~100	
F3.11	gain	Setting Kange: 0~100	dependent

Set this parameter to a value as small as possible in the prerequisite of efficient oscillation suppression to avoid influence on V/F control. Set this parameter to 0 if the motor has no oscillation. Increase the value properly only when the motor has obvious oscillation. The larger the value is, the better the oscillation suppression result will be.

When the oscillation suppression function is enabled, the rated motor current and no-load current must be correct. Otherwise, the V/F oscillation suppression effect will not be satisfactory.

Ī	P5.13	Voltage source for V/F	Setting Range: 0~8	Model
I	F3.13	separation	Setting Kange: 0~6	dependent

P5.00 setting to 10 or 11: the function is valid when V/F separation.

- 0: Digital setting(PA.13): The output voltage is set directly by PA.13.
- 1. VI
- 2: CI
- 3、WI

The output voltage is set by VI terminals.

4. Pulse setting: The output voltage is set by pulses of the terminal X5.

Pulse setting specification: voltage range 9-30 V, frequency range 0-100 kHz.

5. Multi-reference

If the voltage source is multi-reference, parameters in group PF must be set to determine the corresponding relationship between setting signal and setting voltage. 100.0% of the multi-reference setting in group PF corresponds to the rated motor voltage.

6. Simple PLC

If the voltage source is simple PLC mode, parameters in group PF must be set to determine the setting output voltage.

7. PID: The output voltage is generated based on PID closed loop. For details, see the description of PID in group PE.

8. Communication setting

The output voltage is set by the host computer by means of communication.

The voltage source for V/F separation is set in the same way as the frequency source. For details, see P0.01. 100.0% of the setting in each mode corresponds to the rated motor voltage. If the corresponding value is negative, its absolute value is used.

P5.14	Voltage digital setting	Setting Range:	0
F3.14	for V/F separation	0V to rated motor voltage	U

When P5.13 set to 0, the output voltage is set by P5.14.

P5.15	Voltage rise time of V/F	Setting Range:	0
P5.15	separation	0.0S~1000.0S	U

P5.15 indicates the time required for the output voltage to rise from 0 V to the rated motor voltage.

6.7 PID Function (Group P6)

PID control is a general process control method. By performing proportional, integral and differential operations on the difference between the feedback signal and the target signal, it adjusts the output frequency and constitutes a feedback system to stabilize the controlled counter around the target value.

It is applied to process control such as flow control, pressure control and temperature control. The following figure shows the principle block diagram of PID control.

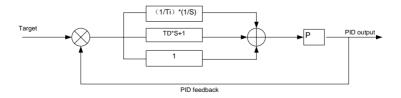


Figure 6-26 Principle block diagram of PID control

P6.00	PID setting source	Setting Range: 0∼5	0
P6.01	P6.01 PID digital setting	Setting Range:	50%
		0.0%~100.0%	

0: P6.01 setting; 1~3: VI、CI、WI; 4: Pulse setting (X5/HDI)

5: Communication setting

P6.00 is used to select the channel of target process PID setting. The PID setting is a relative value and ranges from 0.0% to 100.0%. The PID feedback is also a relative value. The purpose of PID control is to make the PID setting and PID feedback equal.

P6.02	PID feedback source	Setting Range:	0~8	0
-------	---------------------	----------------	-----	---

 $0\sim2$: VI、CI、WI; 3: VI-WI; 4: Pulse setting (X5/HDI); 5: Communication setting; 6: VI+WI; 7: MAX(|VII, |CI |); 7: MIN(|VII, |CI |)

This parameter is used to select the feedback signal channel of process PID. The PID feedback is a relative value and ranges from 0.0% to 100.

P6.03 PID actio	Setting Range: 0.00~60.00s	0.00s
-----------------	----------------------------	-------

0: Forward action.

When the feedback value is smaller than the PID setting, the AC drive's output frequency rises. For example, the winding tension control requires forward PID action.

Reverse action.

When the feedback value is smaller than the PID setting, the AC drive's output frequency reduces. For example, the unwinding tension control requires reverse PID action.

Note that this function is influenced by the DI function 35 "Reverse PID action direction".

P6.04	PID setting feedback range	Setting Range: 0∼65535	1000
-------	----------------------------	------------------------	------

This parameter is a non-dimensional unit. It is used for PID setting display (b0.15) and PID feedback display (b0.16).

Relative value 100% of PID setting feedback corresponds to the value of P6.04. If P6.04 is set to 2000 and PID setting is 100.0%, the PID setting display (b0.15) is 2000.

P6.05	Proportional gain Kp1	Setting Range: 0.0~100.0	20
P6.06	Integral time Ti1	Setting Range: 0.01s∼10.00s	2.00s
P6.07	Differential time Td1	Setting Range: 0.000s∼10.000s	0.000s

P6.05: Proportional gain Kp1

It decides the regulating intensity of the PID regulator. The higher the Kp1 is, the larger the regulating intensity is. The value 100. 0 indicates when the deviation between PID feedback and PID setting is 100.0%, the adjustment amplitude of the PID regulator on the output frequency reference is the maximum frequency.

P6.06: Integral time Ti1

It decides the integral regulating intensity. The shorter the integral time is, the larger the regulating intensity is. When the deviation between PID feedback and PID setting is 100.0%, the integral regulator performs continuous adjustment for the time set in P6.06. Then the adjustment amplitude reaches the maximum frequency.

P6.07: Differential time Td1

It decides the regulating intensity of the PID regulator on the deviation change. The longer the differential time is, the larger the regulating intensity is. Differential time is the time within which the feedback value change reaches 100.0%, and then the adjustment amplitude reaches the maximum frequency.

P6.08	Cut-off frequency of PID	Setting Range:	2.00Hz
-------	--------------------------	----------------	--------

reverse rotation	0.00 to maximum frequency	
------------------	---------------------------	--

In some situations, only when the PID output frequency is a negative value (AC drive reverse rotation), PID setting and PID feedback can be equal. However, too high reverse rotation frequency is prohibited in some applications, and P6.08 is used to determine the reverse rotation frequency upper limit.

P6.09	PID deviation limit	Setting Range:	0.01%
10.09	FID deviation minit	0. 0%~100.0%	0.0176

If the deviation between PID feedback and PID setting is smaller than the value of P6.09, PID control stops. The small deviation between PID feedback and PID setting will make the output frequency stabilize, effective for some closed-loop control applications.

P6.10	PID differential limit	Setting Range: 0. 00%~100.00%	0.10%
-------	------------------------	----------------------------------	-------

It is used to set the PID differential output range. In PID control, the differential operation may easily cause system oscillation. Thus, the PID differential regulation is restricted to a small range.

P6.11 PID setting change time	Setting Range: 0.00s~650.00s	[0.00s]
-------------------------------	---------------------------------	---------

The PID setting change time indicates the time required for PID setting changing from 0.0% to 100.0%. The PID setting changes linearly according to the change time, reducing the impact caused by sudden setting change on the system.

P6.12	PID feedback filter time	Setting Range: 0.00∼60.00s	【0.00s】
P6.13	PID output filter time	Setting Range: 0.00∼60.00s	【0.00s】

P6.12 is used to filter the PID feedback, helping to reduce interference on the feedback but

slowing the response of the process closed-loop system.

P6.13 is used to filter the PID output frequency, helping to weaken sudden change of the AC drive output frequency but slowing the response of the process closed-loop system.

P6.15	Proportional gain Kp2	Setting Range: 0.0~100.0	【20.0】
P6.16	Integral time Ti2	Setting Range: 0.01s~10.00s	【2.00s】
P6.17	Differential time Td2	Setting Range: 0.00~10.000	【0.000s】
P6.18	PID parameter switchover condition	Setting Range: 0∼2	[0]
P6.19	PID parameter switchover deviation 1	Setting Range:	【20.0%】
P6.20	PID parameter switchover deviation 2	Setting Range: PE.18~100.0%	【80.0%】

These parameters are used for switchover between two groups of PID parameters. P6.18 set parameter switchover condition: 0: No switchover; 1: Switchover via X; 2: Automatic switchover based on deviation.

Regulator parameters P6.15 to P6.16 are set in the same way as P6.05 to P6.07.

If you select switchover via a DI terminal, the DI must be allocated with function 37 "PID parameter switchover". If the DI is OFF, group 1 (P6.05 to P6.07) is selected. If the DI is ON, group 2 (P6.15 to P6.17) is selected.

If you select automatic switchover, when the absolute value of the deviation between PID feedback and PID setting is smaller than the value of P6.19, group 1 is selected. When the absolute value of the deviation between PID feedback and PID setting is higher than the value of P6.20, group 2 is selected. When the deviation is between P6.19 and P6.20, the PID parameters are the linear interpolated value of the two groups of parameter values.

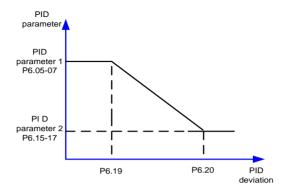


Figure 6-27 PID parameters switchover

P6.21	PID initial value	Setting Range: 0.0%~100.0%	【0.0%】
P6.22	PID initial value holding time	Setting Range: 0.00~650.00s	[0.00s]

When the AC drive starts up, the PID starts closed-loop algorithm only after the PID output is fixed to the PID initial value (P6.21) and lasts the time set in P6.23, see figure 6-28.

P6.23	Maximum deviation between two PID outputs in forward direction	Setting Range:	【1.00%】
P6.24	Maximum deviation between two PID outputs in reverse direction	Setting Range: 0.0%~100.0%	【1.00%】

This function is used to limit the deviation between two PID outputs (2 ms per PID output) to suppress the rapid change of PID output and stabilize the running of the AC drive.

P6.23 and P6.24 respectively correspond to the maximum absolute value of the output deviation in forward direction and in reverse direction.

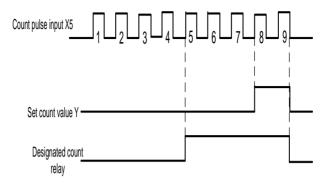


Figure 6-28 PID initial value function

P6.25	PID integral property	Setting Range:	00~11	【00】	
-------	-----------------------	----------------	-------	------	--

Unit's digit (Integral separated) 0: Invalid; 1: Valid

If it is set to valid, , the PID integral operation stops when the X allocated with function 38 "PID integral pause" is ON. In this case, only proportional and differential operations take effect.

If it is set to invalid, integral separated remains invalid no matter whether the X allocated with function 38 "PID integral pause" is ON or not.

Ten's digit: Whether to stop integral operation when the output reaches the limit; 0: Continue integral operation; 1: Stop integral operation.

If "Stop integral operation" is selected, the PID integral operation stops, which may help to reduce the PID overshoot.

P6.26	Detection value of PID feedback loss	Setting Range: 0.1%~100.0%	[0.0%]
P6.27	Detection time of PID feedback loss	Setting Range: 0.0s~20.0s	[1s]

These parameters are used to judge whether PID feedback is lost. Not judging feedback loss when set P6.26 to 0.0%.

If the PID feedback is smaller than the value of P6.26 and the lasting time exceeds the value of P6.27, the AC drive reports Err31 and acts according to the selected fault protection action.

P6.28	PID operation at stop	Setting Range: 0~1	[0]
-------	-----------------------	--------------------	-----

0: No PID operation at stop; 1: PID operation at stop

It is used to select whether to continue PID operation in the state of stop. Generally, the PID operation stops when the AC drive stops.

6.8 Operation Panel and Display (Group P7)

P7.00	REV key function selection	Setting Range: 0~4	3
-------	----------------------------	--------------------	---

- 0: REV key disabled
- 1: Switchover between operation panel control and remote command control. You can perform switchover from the current command source to the operation panel control (local operation).

If the current command source (P0.03) is operation panel control, this key is invalid.

2: Switchover between forward rotation and reverse rotation: You can change the direction of the frequency reference by using the REV key.

It is valid only when the current command source is operation panel control.

- 3: Forward JOG: You can perform forward JOG (FJOG) by using the REV key.
- 4: Reverse JOG: You can perform reverse JOG (FJOG) by using the REV key.

	P7.01	STOP key function	Setting Range: 0~1	0
--	-------	-------------------	--------------------	---

0: STOP key enabled only in operation panel control.

1: STOP key enabled in any operation mode.

P7.02	LED display running parameter	Setting Range: 0x 0000 ~0x FFFF	0x1F
P7.03	LED display running parameter	Setting Range: 0x 0000 ~0x FFFF	0x00

These two parameters are used to set the parameters that can be viewed when the AC drive is in the running state. You can view a maximum of 32 running state parameters that are displayed from the lowest bit of P7.02.

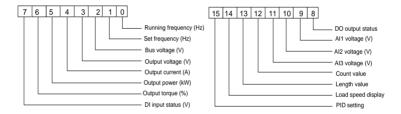


Figure 6-29 P7.02 unit's definition

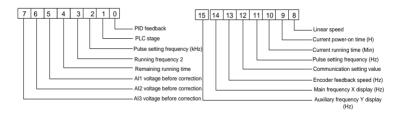


Figure 6-30 P7.03 unit's definition

P7.04	LED display stop parameter	Setting Range:	0x33
F7.04	LED display stop parameter	0x11111 ~0xFFFF	UX33

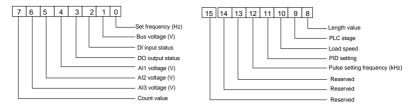


Figure 6-31 P7.04 unit's definition

P7.05 Load speed display coefficient 0.0001~6.5000
--

This parameter is used to adjust the relationship between the output frequency of the AC drive and the load speed. For details, see the description of P7.11. Function Code Parameter Name Setting

P7.06	Heatsink temperature of	Setting Range:	0℃
	inverter module	0.0℃~100℃	0.0

It is used to display the insulated gate bipolar transistor (IGBT) temperature of the inverter module, and the IGBT overheat protection value of the inverter module depends on the model.

P7.07	Temporary software version	Setting Range: YH.9000	YH.9000
P7.08	Accumulative running time	Setting Range: 0h~65535h	0h

It is used to display the accumulative running time of the AC drive. After the accumulative running time reaches the value set in P2.17, the terminal with the digital output function 12 becomes ON.

P7.11	Number of decimal places for load speed display	Setting Range: 0∼3	0h
-------	---	--------------------	----

0: 0 decimal place; 1: 1decimal place; 2: 2 decimal place; 3: 3 decimal place

P7.11 is used to set the number of decimal places for load speed display. The following gives an example to explain how to calculate the load speed:

Assume that P7.05 (Load speed display coefficient) is 2.000 and P7.05 is 2 (2 decimal places). When the running frequency of the AC drive is 40.00 Hz, the load speed is 40.00 x 2.000 = 80.00 (display of 2 decimal places).

If the AC drive is in the stop state, the load speed is the speed corresponding to the set frequency, namely, "set load speed". If the set frequency is $50.00 \, \text{Hz}$, the load speed in the stop state is $50.00 \, \text{x} \, 2.000 = 100.00$ (display of 2 decimal places).

P7.12	Accumulative power-on time	Setting Range:	0h
F7.12	Accumulative power-on time	0h∼65535h	Oli

It is used to display the accumulative power-on time of the AC drive since the delivery.

If the time reaches the set power-on time (P2.16), the terminal with the digital output function 24 becomes ON.

P7.13	Accumulative power	Setting Range:	0
	consumption	0∼65535 kWh	0

It is used to display the accumulative power consumption of the AC drive until now.

6.9 Motor Parameters (Group P8)

P8.00	Motor type selection	Common asynchronous motor Variable frequency asynchronous motor	0
D9 04	P8.01 Rated motor power	Setting Range:	Model
P6.01		0.1KW~1000.0KW	dependent
P8.02	Dated mater valtage	Setting Range: 0∼2000V	Model
P6.02	Rated motor voltage	Setting Range: 0/~2000V	dependent
P8.03	Rated motor current	Setting Range:	Model
P6.03	Rated motor current	0.01A∼655.35 A	dependent
P8.04	Poted meter frequency	Setting Range: 0.01HZ to	Model
F0.U4	Rated motor frequency	maximum frequency	dependent

Do O	O.O.F. Detect mater retational around	Setting Range:	Model	
P8.0	3	Rated motor rotational speed	1-65535 RPM	dependent

Set the parameters according to the motor nameplate no matter whether V/F control or vector control is adopted.

To achieve better V/F or vector control performance, motor auto-tuning is required. The motor auto-tuning accuracy depends on the correct setting of motor nameplate parameters.

P8.06	Stator resistance	Setting Range:	Model
		0.001Ω~65.535Ω	dependent
D9 07	P8.07 Rotor resistance	Setting Range:	Model
P0.07		0.001Ω~65.535Ω	dependent
P8.08 Leakage inductive reactar	Laskans industive resetores	Setting Range:	Model
	Leakage inductive reactance	0.01mH~655.35mH	dependent
D0 00	P8.09 Mutual inductive reactance	Setting Range:	Model
P8.09		0.01mH~655.35mH	dependent
	No lood assument	Setting Range:	Model
P8.10	No-load current	0.01A∼655.35 A	dependent

The parameters in P8.06 to P8.10 are asynchronous motor parameters. These parameters are unavailable on the motor nameplate and are obtained by means of motor auto-tuning. Only P8.06 to P8.08 can be obtained through static motor auto-tuning. Through complete motor auto-tuning, encoder phase sequence and current loop PI can be obtained besides the parameters in P8.06 to P8.10.

Each time "Rated motor power" (P8.01) or "Rated motor voltage" (P8.02) is changed; the AC drive automatically restores values of P8.06 to P8.10 to the parameter setting for the common standard Y series asynchronous motor.

P8.27	Encoder pulses per revolution	Setting Range: 1∼65535	1024
	revolution		

This parameter is used to set the pulses per revolution (PPR) of ABZ or UVW incremental

encoder. In CLVC mode, the motor cannot run properly if this parameter is set incorrectly.

P8.28 Encoder type	Setting Range: 0~4	0
--------------------	--------------------	---

 $0: ABZ\ incremental\ encoder; 1: UVW\ incremental\ encoder; 2: Resolver; 3: SIN/COS\ encoder;$

4: Wire-saving UVW encoder.

The GLORY supports multiple types of encoder. Different PG cards are required for different types of encoder. Select the appropriate PG card for the encoder used. Any of the five encoder types is applicable to synchronous motor. Only ABZ incremental encoder and resolver are applicable to asynchronous motor.

After installation of the PG card is complete, set P8.28 properly based on the actual condition. Otherwise, the AC drive cannot run properly.

P8.30	A/B phase sequence of ABZ	Setting Range: 0∼1	0
1 0.00	incremental encoder	octaing Range. 0	•

0: Forward: 1: Reverse.

This parameter is valid only for ABZ incremental encoder (P8.28 = 0) and is used to set the A/B phase sequence of the ABZ incremental encoder.

P8.34 Number of pole pairs of resolver	Setting Range: 1∼65535	1
--	------------------------	---

If a resolver is applied, set the number of pole pairs properly.

P8.37	Auto-tuning selection	Setting Range: 0~2	0
-------	-----------------------	--------------------	---

0: No auto-tuning

1: Asynchronous motor static auto-tuning

It is applicable to scenarios where complete auto-tuning cannot be performed because the asynchronous motor cannot be disconnected from the load.

Before performing static auto-tuning, properly set the motor type and motor nameplate parameters of P8.00 to P8.05 first. The AC drive will obtain parameters of P8.06 to P8.08 by static auto-tuning.

Set this parameter to 1, and press FWD. Then, the AC drive starts static auto-tuning.

2: Asynchronous motor complete auto-tuning

To perform this type of auto-tuning, ensure that the motor is disconnected from the load. During the process of complete auto-tuning, the AC drive performs static auto-tuning first and then accelerates to 80% of the rated motor frequency within the acceleration time set in P0.12. The AC drive keeps running for a certain period and then decelerates to stop within deceleration time set in P0.13.

Before performing complete auto-tuning, properly set the motor type, motor nameplate parameters of P8.00 to P8.05, "Encoder type" (P8.27) and "Encoder pulses per revolution" (P8.28) first.

The AC drive will obtain motor parameters of P8.06 to P8.10, "A/B phase sequence of ABZ incremental encoder" (P8.30) and vector control current loop PI parameters of P8.14 to P8.17 by complete auto-tuning.

Set this parameter to 2, and press RUN. Then, the AC drive starts complete auto-tuning.

6.10 Torque Control and Vector Control Parameters (Group P9)

P9.00	Speed/Torque control selection	Setting Range: 0~1	0
-------	--------------------------------	--------------------	---

0: Speed control; 1: Torque control

The GLORY provides X terminals with two torque related functions, function 29 (Torque control prohibited) and function 46 (Speed control/Torque control switchover). The two X terminals need to be used together with P9.00 to implement speed control/torque control switchover.

If the X terminal allocated with function 46 (Speed control/Torque control switchover) is OFF, the control mode is determined by P9.00. If the X terminal allocated with function 46 is ON, the control mode is reverse to the value of P9.00.

However, if the DI terminal with function 29 (Torque control prohibited) is ON, the AC drive is fixed to run in the speed control mode.

P9.01	ASR Speed loop proportional gain Kp1	Setting Range:	30
-------	--------------------------------------	----------------	----

		0~100	
P9.02	ASR Speed loop integral time Ti1	Setting Range:	0.50s
F9.02	ASK Speed loop integral time 111	0.01s∼10.00s	0.505
P9.03	Switchover frequency 1	Setting Range:	5.00Hz
F9.03	Switchover frequency i	0.00~P9.05	3.00HZ
P9.04	ASR Speed loop proportional gain Kp2	Setting Range:	20
F9.04		0~100	20
P9.05	ASR Speed loop integral time Ti2	Setting Range:	1.00s
F9.05	ASK Speed loop lillegral tille 112	0.01s~10.00s	1.005
		Setting Range:	
P9.06	Switchover frequency 2	P9.03 to	1000Hz
		maximum	1000HZ
		output frequency	

Speed loop PI parameters vary with running frequencies of the AC drive.

If the running frequency is less than or equal to "Switchover frequency 1" (P9.03), the speed loop PI parameters are P9.01 and P9.02.

If the running frequency is equal to or greater than "Switchover frequency 2" (P9.06), the speed loop PI parameters are P9.04 and P9.05.

If the running frequency is between P9.03 and P9.06, the speed loop PI parameters are obtained from the linear switchover between the two groups of PI parameters, as shown in Figure 6-32.

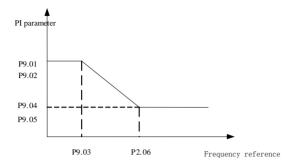


Figure 6-32. Relationship between running frequencies and PI parameters

The speed dynamic response characteristics in vector control can be adjusted by setting the proportional gain and integral time of the speed regulator.

To achieve a faster system response, increase the proportional gain and reduce the integral time. Be aware that this may lead to system oscillation.

The recommended adjustment method is as follows:

If the factory setting cannot meet the requirements, make proper adjustment. Increase the proportional gain first to ensure that the system does not oscillate, and then reduce the integral time to ensure that the system has quick response and small overshoot.

NOTE: Improper PI parameter setting may cause too large speed overshoot, and overvoltage fault may even occur when the overshoot drops.

P9.07	Vector control slip gain	Setting Range: 50%~200%	100%
-------	--------------------------	-------------------------	------

For SFVC, it is used to adjust speed stability accuracy of the motor. When the motor with load runs at a very low speed, increase the value of this parameter; when the motor with load runs at a very large speed, decrease the value of this parameter.

For CLVC, it is used to adjust the output current of the AC drive with same load.

In the vector control mode, the output of the speed loop regulator is torque current reference. This parameter is used to filter the torque references. It need not be adjusted generally and can be increased in the case of large speed fluctuation. In the case of motor oscillation, decrease the value of this parameter properly.

If the value of this parameter is small, the output torque of the AC drive may fluctuate greatly, but the response is quick.

P9.09	Vector control over-excitation gain	Setting Range: 0~200	64
-------	-------------------------------------	----------------------	----

During deceleration of the AC drive, over-excitation control can restrain rise of the bus voltage to avoid the over-voltage fault. The larger the over-excitation gain is, the better the restraining effect is.

Increase the over-excitation gain if the AC drive is liable to overvoltage error during deceleration. Too large over-excitation gain, however, may lead to an increase in output current. Therefore, set this parameter to a proper value in actual applications.

Set the over-excitation gain to 0 in applications of small inertia (the bus voltage will not rise during deceleration) or where there is a braking resistor.

P9.10	Torque upper limit source in speed control mode	Setting Range: 0∼5	0
P9.11	Digital setting of torque upper	Setting Range: 0.0%∼ 200.0%	150.0%

0: P9.11 setting; 1: VI; 2: CI; 3: WI; 4: X5 Pulse setting; 5: Communication setting.

In the speed control mode, the maximum output torque of the AC drive is restricted by P9.10. If the torque upper limit is analog, pulse or communication setting, 100% of the setting corresponds to the value of P9.11, and 100% of the value of P9.11 corresponds to the AC drive rated torque.

For details on the VI, CI and WI setting, see the description of the AI curves in group P3.

For details on the pulse setting, see the description of P3.32 to P3.35.

When the AC drive is in communication with the master, the host computer writes data -100.00% to 100.00% by the communication address 0x1000, where 100.0% corresponds to the value of P9.11.

P9.14	Excitation adjustment proportional gain	Setting Range: 0∼20000	2000
P9.15	Excitation adjustment integral gain	Setting Range: 0∼20000	2000
P9.16	Torque adjustment proportional gain	Setting Range: 0∼20000	2000
P9.17	Torque adjustment integral gain	Setting Range: 0∼20000	2000

These are current loop PI parameters for vector control. These parameters are automatically obtained through "Asynchronous motor complete auto-tuning" or "Synchronous motor no-load auto-tuning", and need not be modified.

The dimension of the current loop integral regulator is integral gain rather than integral time.

Note that too large current loop PI gain may lead to oscillation of the entire control loop. Therefore, when current oscillation or torque fluctuation is great, manually decrease the proportional gain or integral gain here.

P9.24	Torque setting source in torque control	0~5	0
P9.26	Torque digital setting in torque control	0.0%~200.0%	150.0%

For details of these parameters setting, refer to P9.10 $\,$ (P9.24) and P9.11 $\,$ (P9.26) $\,$.

	Forward maximum fraguency in targue	0.00Hz to	
P9.28	Forward maximum frequency in torque	maximum	50.00Hz
	control	frequency	

P9.29	Reverse maximum frequency	0.00Hz to	
	, ,	maximum	50.00Hz
	in torque control	frequency	

Two parameters are used to set the maximum frequency in forward or reverse rotation in torque control mode.

In torque control, if the load torque is smaller than the motor output torque, the motor's rotational speed will rise continuously. To avoid runaway of the mechanical system, the motor maximum rotating speed must be limited in torque control.

You can implement continuous change of the maximum frequency in torque control dynamically by controlling the frequency upper limit.

P9.30	Acceleration time in torque control	0.00s~65000s	0.00s
P9.31	Deceleration time in torque control	0.00s∼65000s	0.00s

In torque control, the difference between the motor output torque and the load torque determines the speed change rate of the motor and load. The motor rotational speed may change quickly and this will result in noise or too large mechanical stress. The setting of acceleration/deceleration time in torque control makes the motor rotational speed change softly.

However, in applications requiring rapid torque response, set the acceleration/deceleration time in torque control to 0.00s.

6.11 Parameter Protection (Group PA)

PA00	Motor overload protection selection	Setting Range: 0~1	1
------	-------------------------------------	--------------------	---

0. Disabled

The motor overload protective function is disabled. The motor is exposed to potential damage due to overheating. A thermal relay is suggested to be installed between the AC drive and the motor.

1: Enabled

The AC drive judges whether the motor is overloaded according to the inverse time-lag curve of the motor overload protection.

PA.01 Motor overload protection gain	0.20~10.00	1.00
--------------------------------------	------------	------

The inverse time-lag curve of the motor overload protection is:

220% x PA.01 x rated motor current (if the load remains at this value for one minute, the AC drive reports motor overload fault), or

150% x PA.01 x rated motor current (if the load remains at this value for 60 minutes, the AC drive reports motor overload fault).

NOTE: Set PA.01 properly based on the actual overload capacity. If the value of PA.01 is set too large, damage to the motor may result because the motor overheats but the AC drive does not report the alarm.

PA.02	Motor overload warning coefficient	Setting Range:	50%~100%	80%
-------	------------------------------------	----------------	----------	-----

This function is used to give a warning signal to the control system via DO before motor overload protection. This parameter is used to determine the percentage, at which pre-warning is performed before motor overload. The larger the value is, the less advanced the pre-warning will be.

When the accumulative output current of the AC drive is greater than the value of the overload inverse time-lag curve multiplied by PA.02, the DO terminal on the AC drive allocated with function 6 (Motor overload pre-warning) becomes ON.

PA.03	Over voltage stall gain	Setting Range: 0~100	0
PA.04	Over voltage stall protective voltage	Setting Range: 120%~150%	130%

When the DC bus voltage exceeds the value of PA.04 (Overvoltage stall protective voltage) during deceleration of the AC drive, the AC drive stops deceleration and keeps the present running frequency. After the bus voltage declines, the AC drive continues to decelerate.

PA.03 (Overvoltage stall gain) is used to adjust the overvoltage suppression capacity of the

AC drive. The larger the value is, the greater the overvoltage suppression capacity will be.

In the prerequisite of no overvoltage occurrence, set PA.03 to a small value.

For small-inertia load, the value should be small. Otherwise, the system dynamic response will be slow. For large-inertia load, the value should be large. Otherwise, the suppression result will be poor and an overvoltage fault may occur.

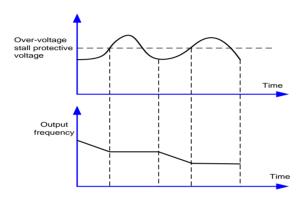


Figure 6-33 over-voltage stall protection function

PA.05	Overcurrent stall gain	Setting Range: 0~100	20
PA.06	Overcurrent stall protective current	Setting Range: 120%~150%	150%

When the output current exceeds the overcurrent stall protective current during acceleration/deceleration of the AC drive, the AC drive stops acceleration/deceleration and keeps the present running frequency. After the output current declines, the AC drive continues to accelerate/decelerate.

PA.05 (Overcurrent stall gain) is used to adjust the overcurrent suppression capacity of the AC drive. The larger the value is, the greater the overcurrent suppression capacity will be. In the prerequisite of no overcurrent occurrence, set PA.05 to a small value.

For small-inertia load, the value should be small. Otherwise, the system dynamic response will be slow. For large-inertia load, the value should be large. Otherwise, the suppression

result will be poor and overcurrent fault may occur.

If the overcurrent stall gain is set to 0, the overcurrent stall function is disabled.

PA.09	Fault auto reset times	Setting Range: 0~20	0
PA.10	DO action during fault auto reset	Setting Range: 0~1	1
PA.11	Time interval of fault auto reset	Setting Range: 0.1s~100.0s	1.0s

It is used to set the times of fault auto resets if this function (PA.09) is used. After the value is exceeded, the AC drive will remain in the fault state.

It is used to decide whether the DO acts during the fault auto reset if the fault auto reset function is selected, you can set by PA.10.

0: Not act

1: Act

PA.11 used to set the waiting time from the alarm of the AC drive to fault auto reset.

PA.12	Input phase loss protection/contactor energizing	Setting Range: 00~11	11
	protection selection		

Unit's digit: Input phase loss protection 0: Disabled; 1: Enabled

Ten's digit: Contactor energizing protection 0: Disabled; 1: Enabled

PA.13	Output phase loss protection selection	Setting Range: 0~1	1
-------	--	--------------------	---

It is used to determine whether to perform output phase loss protection.

0: Disabled; 1: Enabled

PA.14	1st fault type	Setting Range: 0~99	1
-------	----------------	---------------------	---

PA.15	2nd fault type	Setting Range: 0~99	1
PA.16	3rd (latest) fault type	Setting Range: 0~99	1

It is used to record the types of the most recent three faults of the AC drive. 0 indicates no fault. For possible causes and solution of each fault, refer to Chapter 7.

PA.17	Frequency upon 3rd fault	It displays the frequency when the latest fault occurs.	0.00Hz
PA.18	Current upon 3rd fault	It displays the current when the latest fault occurs.	0.00A
PA.19	Bus voltage upon 3rd fault	It displays the bus voltage when the latest fault occurs	0.00v
PA.20	X terminals status upon 3rd fault	Setting Range: 0~1111111111	0
PA.21	Output terminal status upon 3rd fault	Setting Range: 0~11111	0
PA.23	Power-on time upon 3rd fault	Setting Range: 0~65535h	0
PA.24	Running time upon 3rd fault	Setting Range: 0~65535h	0

PA.20 displays the status of all X terminals when the latest fault occurs, the sequence is BIT9 \sim BIT0 refer to X10 \sim X1.

If an X is ON, the setting is 1. If the X is OFF, the setting is 0. The value is the equivalent decimal number converted from the X status..

PA.21 displays the status of all output terminals when the latest fault occurs, the sequence is BIT4-DO2, BIT3-DO1, BIT2-REL2, BIT1-REL1, BIT0-FM.

If an output terminal is ON, the setting is 1. If the output terminal is OFF, the setting is 0. The value is the equivalent decimal number converted from the X statuses.

PA.25~ PA.32 2 nd fault information	Setting Range: same as PA.17 to PA.24	0
--	--	---

PA.25 to PA.32 are the information of 2nd fault, refer to PA.17 to PA.24

PA.33~ PA.40	1 st fault information	Setting Range:	0
1 A.50* 1 A.40	1 Tadit information	same as PA.17 to PA.24	ŭ

PA.33 to PA.40 are the information of 3rd fault, refer to PA.17 to PA.24

PA.43	Fault protection action selection 1	Setting Range: 00000~22222	00000
PA.44	Fault protection action selection 2	Setting Range: 00000~22222	00000
PA.45	Fault protection action selection 3	Setting Range: 00000~22222	00000
PA.46	Fault protection action selection 4	Setting Range: 00000~22222	00000

PA.43. PA.44. PA.35 and PA.36 are used to stop the AC drive when fault occurs, setting range, **0:** Coast to stop; **1:** Stop according to the stop mode; **2:** Continue to run.

PA.43 Fault protection action selection 1

Unit's digit: Motor overload(E-11); Ten's digit: Power input phase loss(E-12); Hundred's digit: External equipment fault (E-15); Thousand's digit: Communication fault (E-16); Ten thousand's digit: EEPROM read-write fault (E-17)

PA.44 Fault protection action selection 2

Unit's digit: Power input phase loss (E-19); Ten's digit: Encoder fault (E-21); Hundred's digit: Accumulative running time reached (E-23); Thousand's digit: \pm Accumulative power-on time reached (E-24); Ten thousand's digit: Motor overheat (E-27)

PA.45 Fault protection action selection 3

Unit's digit: Too large speed deviation (E-28) 1; Ten's digit: Motor over-speed (E-29) 2; Hundred's digit: Load becoming 0; Thousand's digit: PID feedback lost during running(E-34); Ten thousand's digit: Reserved

PA.46 Fault protection action selection 4

Unit's digit: User-defined fault 1 (E-32); Ten's digit: User-defined fault 2(E-33)

PA.50	Frequency selection for	Setting Range: 0~4	0
. 700	continuing to run upon fault	Colling Runger C 4	

0: Current running frequency; 1: Set frequency; 2: Frequency upper limit; 3: Frequency lower limit; 4: Backup frequency upon abnormality

If a fault occurs during the running of the AC drive and the handling of fault is set to "Continue to run", the AC drive displays A-** and continues to run at the frequency set in PA.50.

Note:

(**)content is confirmed by fault, for example if the fault is Power input phase loss (E-12), then the ac drive display A-12.

PA.51	Backup frequency upon abnormality	Setting Range: 60%~100%	100%
-------	--------------------------------------	-------------------------	------

The setting of PA.51 is a percentage relative to the maximum frequency.

PA.52	Type of motor temperature sensor	Setting Range: 0~2	0
PA.53	Motor overheat protection threshold	Setting Range: 0℃~200℃	110℃
PA.54	Motor overheat warning threshold	Setting Range: 0°C∼200°C	90℃

0: No temperature sensor; 1: PT100; 2: PT1000

The signal of the motor temperature sensor needs to be connected to the optional WI extension card. Al3 on the extension card can be used for the temperature signal input. The motor temperature sensor is connected to Al3 and PGND of the extension card. The Al3 terminal of the GLORY supports both PT100 and PT1000. Set the sensor type correctly during the use. You can view the motor temperature via b0.34

If the motor temperature exceeds the value set in PA.53, the AC drive reports an alarm and acts according to the selected fault protection action.

If the motor temperature exceeds the value set in PA.54, the DO terminal on the AC drive allocated with function 39 (Motor overheat warning) becomes ON.

PA.55	Action selection at instantaneous power failure	Setting Range: 0∼2	0
PA.56	Action pause judging voltage at instantaneous power failure	Setting Range: 80%∼100%	90
PA.57	Voltage rally judging time at instantaneous power failure	Setting Range: 0.00s~100.00s	0.58
PA.58	Action judging voltage at instantaneous power failure	Setting Range: 60%~100%	80

Upon instantaneous power failure or sudden voltage dip, the DC bus voltage of the AC drive reduces. This function enables the AC drive to compensate the DC bus voltage reduction with the load feedback energy by reducing the output frequency so as to keep the AC drive running continuously.

If PA.55 = 1, upon instantaneous power failure or sudden voltage dip, the AC drive decelerates. Once the bus voltage resumes to normal, the AC drive accelerates to the set frequency. If the bus voltage remains normal for the time exceeding the value set in PA.57, it is considered that the bus voltage resumes to normal.

If PA.55 = 2, upon instantaneous power failure or sudden voltage dip, the AC drive decelerates to stop.

For details, see the fllowing figure 6-34

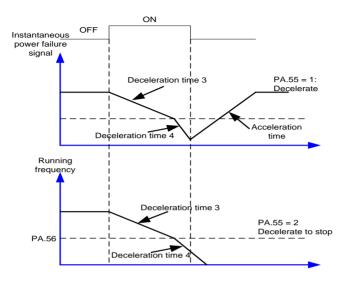


Figure 6-34 AC drive action diagram upon instantaneous power failure

PA.59	Protection upon load becoming 0	Setting Range: 0~1	1
PA.60	Detection level of load becoming 0	Setting Range: 0.0%~100.0%	10.0%
PA.61	Detection time of load becoming 0	Setting Range: 0.0s∼60.0s	1.0s

0: Disabled; 1: Enabled

If protection upon load becoming 0 is enabled, when the output current of the AC drive is lower than the detection level (PA.60) and the lasting time exceeds the detection time (PA.61), the output frequency of the AC drive automatically declines to 7% of the rated frequency. During the protection, the AC drive automatically accelerates to the set frequency if the load resumes to normal.

PA.63	Over-speed detection value	Setting Range:	20.0%
-------	----------------------------	----------------	-------

		0.0%~50.0%	
PA.64	Over-speed detection time	Setting Range: 0.0s∼60.0s	1.0s

This function is valid only when the AC drive runs in the CLVC mode.

If the actual motor rotational speed detected by the AC drive exceeds the maximum frequency and the excessive value is greater than the value of PA.63 and the lasting time exceeds the value of PA.64, the AC drive reports E-29 and acts according to the selected fault protection action.

If the over-speed detection time is 0.0s, the over-speed detection function is disabled.

PA.65	Detection value of too large speed deviation	Setting Range:	20.0%
PA.66	Detection time of too large speed deviation	Setting Range: 0.0s∼60.0s	5.0s

This function is valid only when the AC drive runs in the CLVC mode.

If the AC drive detects the deviation between the actual motor rotational speed detected by the AC drive and the set frequency is greater than the value of PA.65 and the lasting time exceeds the value of PA.66, the AC drive reports E-30 and according to the selected fault protection action.

If PA.66 (Detection time of too large speed deviation) is 0.0s, this function is disabled.

6.12 Multi-Reference and Simple PLC Function (Group Pb)

The GLORY multi-reference has many functions. Besides multi-speed, it can be used as the setting source of the V/F separated voltage source and setting source of process PID. In addition, the multi-reference is relative value.

Pb.00~15	Multi-reference 0 to Multi-reference	Setting Range:	0.0%
	15	-100.0%~100.0%	0.0%

Multi-reference can be the setting source of frequency, V/F separated voltage and process PID. The multi-reference is relative value and ranges from -100.0% to 100.0%.

As frequency source, it is a percentage relative to the maximum frequency. As V/F separated voltage source, it is a percentage relative to the rated motor voltage. As process PID setting source, it does not require conversion.

Multi-reference can be switched over based on different states of X terminals. For details, see the descriptions of group P3.

Pb.16	Simple PLC running mode	Setting Range: 0∼3	0
-------	-------------------------	--------------------	---

0: Stop after the AC drive runs one cycle

The AC drive stops after running one cycle, and will not start up until receiving another command

1: Keep final values after the AC drive runs one cycle

The AC drive keeps the final running frequency and direction after running one cycle.

2: Repeat after the AC drive runs one cycle

The AC drive automatically starts another cycle after running one cycle, and will not stop until receiving the stop command.

Simple PLC can be either the frequency source or V/F separated voltage source.

When simple PLC is used as the frequency source, whether parameter values of Pb.00 to Pb.15 are positive or negative determines the running direction. If the parameter values are negative, it indicates that the AC drive runs in reverse direction. Figure 6-32 Simple PLC when used as frequency source

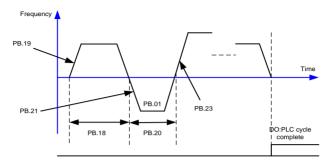


Figure 6-35 Simple PLC when used as frequency source

Pb.17	Simple PLC retentive selection	Setting Range: 00∼11	00
-------	--------------------------------	----------------------	----

Unit's digit: Retentive upon power failure; 0: NO; 1: YES

Ten's digit: Retentive upon stop; 0: NO; 1: YES

PLC retentive upon power failure indicates that the AC drive memorizes the PLC running moment and running frequency before power failure and will continue to run from the memorized moment after it is powered on again. If the unit's digit is set to 0, the AC drive restarts the PLC process after it is powered on again.

PLC retentive upon stop indicates that the AC drive records the PLC running moment and running frequency upon stop and will continue to run from the recorded moment after it starts up again. If the ten's digit is set to 0, the AC drive restarts the PLC process after it starts up again.

P b.18	Running time of simple PLC reference 0	Setting Range: 0.0s(h)∼6553.5s(h)	0.0s(h)
Pb.19	Acceleration/deceleration time of simple PLC reference 0	Setting Range: 0∼3	0
Pb.20~46 (even)	Running time of simple PLC reference n	Setting Range: 0.0s(h)∼6553.5s(h)	0.0s(h)

Pb.21~46 (singular)	Acceleration/deceleration time of simple PLC reference n	Setting Range: 0∼3	0
Running time of simple PLC P b.48 reference 15		Setting Range: 0.0s(h)∼6553.5s(h)	0.0s(h)
Pb.49 Acceleration/deceleration time of simple PLC reference 15		Setting Range: 0∼3	0
Pb.50 Time unit of simple PLC running		Setting Range: 0∼1	0

0: s(second); 1: h(hour)

P b.51 Reference 0 source	Setting Range: 0∼5	0
---------------------------	--------------------	---

0: set by PA.00; 1~3: VI, CI, WI; 4: PULSE setting; 5: PID; 6: Set by preset frequency

It determines the setting channel of reference 0. You can perform convenient switchover between the setting channels. When multi-reference or simple PLC is used as frequency source, the switchover between two frequency sources can be realized easily.

6.13 Communication Parameter (Group PC)

Please refer to chapter 9 《GLORY RS485 communication protocol》

6.14 Function Code Parameter (Group Pd)

Pd.00	User password	Setting Range:	0
1 4.00	OSCI PUSSIVOI U	0~5555	•

If it is set to any non-zero number, the password protection function is enabled. After a password has been set and taken effect, you must enter the correct password in order to enter the menu. If the entered password is incorrect you cannot view or modify parameters.

If Pd.00 is set to 00000, the previously set user password is cleared, and the password protection function is disabled

Pd.01	Restore default settings	Setting Range: 0~2	0
-------	--------------------------	--------------------	---

0: No operation

1: Restore factory settings except motor parameters

If Pd.01 is set to 1, most function codes are restored to the default settings except motor parameters, frequency reference resolution, fault records, accumulative running time, accumulative power-on time and accumulative power consumption.设

2: Clear records

If Pd.01 is set to 2, the fault records, accumulative running time, accumulative power-on time and accumulative power consumption are cleared.

Pd.02	AC drive parameter	Setting Range: 0∼1111	0011
Fu.02	display property	Setting Kange. 0' 1111	0011

Unit's digit: Group b display selection 0: Not display; 1: Display

Ten's digit: Group E display selection 0: Not display; 1: Display

Pd.04	Parameter modification	Setting Range: 0∼1	0
	property	Coming Namiger Co.	

It is used to set whether the parameters are modifiable to avoid mal-function. If it is set to 0, all parameters are modifiable. If it is set to 1, all parameters can only be viewed.

6.15 Swing Frequency, Fixed Length and Count (Group PE)

The swing frequency function is applied to the textile and chemical fiber fields and the applications where traversing and winding functions are required.

The swing frequency function indicates that the output frequency of the AC drive swings up and down with the set frequency as the center. The trace of running frequency at the time axis is shown in the following figure.

The swing amplitude is set in PE.00 and PE.01. When PE.01 is set to 0, the swing amplitude is 0 and the swing frequency does not take effect.

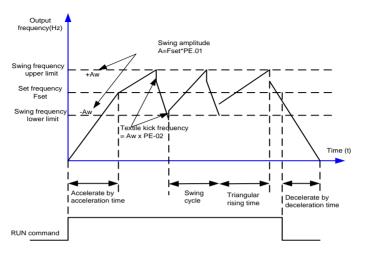


Figure 6-36 Swing frequency control

This parameter is used to select the base value of the swing amplitude.

0: Relative to the central frequency

It is variable swing amplitude system. The swing amplitude varies with the central frequency (set frequency).

1: Relative to the maximum frequency (PE.04)

It is fixed swing amplitude system. The swing amplitude is fixed.

PE.01	Swing frequency amplitude	Setting Range: 0.0%∼100.0%	【0.0%】
PE.02	Jump frequency amplitude	Setting Range: 0.0%~50.0%	【0.0%】

This parameter is used to determine the swing amplitude and jump frequency amplitude. The swing frequency is limited by the frequency upper limit and frequency lower limit.

If relative to the central frequency (PE.00=0), the actual swing amplitude AW is the

calculation result of P0.19 (Frequency source selection) multiplied by PE.01.

If relative to the maximum frequency (PE.00=1), the actual swing amplitude AW is the calculation result of PE.04 (Maximum frequency) multiplied by PE.01.

Jump frequency = Swing amplitude AW x PE.02 (Jump frequency amplitude).

If relative to the central frequency (PE.00=0), the jump frequency is a variable value.

If relative to the maximum frequency (PE.00=1), the jump frequency is a fixed value.

The swing frequency is limited by the frequency upper limit and frequency lower limit.

PE.03	Swing frequency cycle	Setting Range: 0.0s∼3000.0s	10.0s
PE.04	Triangular wave rising time coefficient	Setting Range: 0.0%∼100.0%	50.0%

PE.03 specifies the time of a complete swing frequency cycle.

PE.04 specifies the time percentage of triangular wave rising time to PE.03 (Swing frequency cycle).

Triangular wave rising time = PE.03 (Swing frequency cycle) x PE.04 (Triangular wave rising time coefficient, unit: s)

Triangular wave falling time = PE.03 (Swing frequency cycle) x (1 -PE.04 Triangular wave rising time coefficient, unit: s)

PE.05	Set length	Setting Range: 0m∼65535m	1000m
PE.06	Actual length	Setting Range: 0m∼65535m	0m
PE.07	Number of pulses per meter	Setting Range: 0.1∼6553.5	100.0

The preceding parameters are used for fixed length control.

The length information is collected by X terminals. PE.06 (Actual length) is calculated by dividing the number of pulses collected by the X terminal by PE.07 (Number of pulses each meter).

When the actual length PE.06 exceeds the set length in PE.05, the DO terminal allocated with function 10 (Length reached) becomes ON.\

During the fixed length control, the length reset operation can be performed via the X terminal allocated with function 28. For details, see the descriptions of Group P3.

Allocate corresponding X terminal with function 27 (Length count input) in applications. If the pulse frequency is high, X5/HDI must be used.

PE.08	Set count value	Setting Range: 1∼65535	1000
PE.09	Designated count value	Setting Range: 1∼65535	1000

The count value needs to be collected by X terminal. Allocate the corresponding X terminal with function 25 (Counter input) in applications. If the pulse frequency is high, X5/HDI must be used

When the count value reaches the set count value (PE.08), the DO terminal allocated with function 8 (Set count value reached) becomes ON. Then the counter stops counting.

When the counting value reaches the designated counting value (PE.09), the DO terminal allocated with function 9 (Designated count value reached) becomes ON. Then the counter continues to count until the set count value is reached.

PE.09 should be equal to or smaller than PE.08

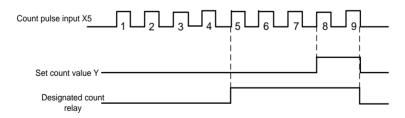


Figure 6-37 Reaching the set count value and designated count value

6.16 Al/AO Correction and Al Curve Setting (Group PF)

PF.00 VI measured voltage 1	Setting Range:	Factory-corrected
-----------------------------	----------------	-------------------

		0.500 V∼4.000 V	
PF.01	VI displayed voltage 1	Setting Range: 0.500 V∼4.000 V	Factory-corrected
PF.02	VI measured voltage 2	Setting Range: 6.000V∼9.999V	Factory-corrected
PF.03	VI displayed voltage 2	Setting Range: 6.000V∼9.999V	Factory-corrected

These parameters are used to correct the VI to eliminate the impact of AI zero offset and gain.

They have been corrected upon delivery. When you resume the factory values, these parameters will be restored to the factory-corrected values. Generally, you need not perform correction in the applications.

Measured voltage indicates the actual output voltage value measured by instruments such as the multimeter. Displayed voltage indicates the voltage display value sampled by the AC drive.

During correction, send two voltage values to each AI terminal, and save the measured values and displayed values to the function codes PF.00 to PF.03. Then the AC drive will automatically perform AI zero offset and gain correction.

If the input voltage and the actual voltage sampled by the AC drive are inconsistent, perform correction on site. Take AI as an example. The on-site correction is as follows:

- 1) Send a voltage signal (approximately 2 V) to Al.
- 2) Measure the AI voltage and save it to PF.00.
- 3) View the displayed value of b0.21 and save the value to PF.01.
- 4) Send a voltage signal (approximately 8 V) to Al.
- 5) Measure Al voltage and save it to PF.03.
- 6) View the displayed value of b0.21 and save the value to PF.04.

PF.04	CI measured voltage 1	Setting Range: 0.500 V∼4.000 V	Factory-corrected
PF.05	CI displayed voltage 1	Setting Range: 0.500 V∼4.000 V	Factory-corrected
PF.06	CI measured voltage 2	Setting Range: 6.000V∼9.999V	Factory-corrected
PF.07	CI displayed voltage 2	Setting Range: 6.000V∼9.999V	Factory-corrected

These parameter corrected method is the same with PF.00 to PF.03, view the displayed value of b0.22.

PF.08	WI measured voltage 1	Setting Range:	Factory-corrected
PF.09	WI displayed voltage 1	Setting Range:	Factory-corrected
PF.10	WI measured voltage 2	Setting Range: -9.999V~10.000V	Factory-corrected
PF.11	WI displayed voltage 2	Setting Range: -9.999V~10.000V	Factory-corrected

These parameter corrected method is the same with PF.00 to PF.03, view the displayed value of b0.23.

PF.12	AO1 target voltage 1	Setting Range: 0.500 V∼4.000 V	Factory-corrected
PF.13	AO1 measured voltage 1	Setting Range: 0.500 V∼4.000 V	Factory-corrected

PF.14	AO1 target voltage 2	Setting Range: 6.000V∼9.999V	Factory-corrected
PF.15	AO1 measured voltage 2	Setting Range: 6.000V∼9.999V	Factory-corrected

These parameters are used to correct the AO

They have been corrected upon delivery. When you resume the factory values, these parameters will be restored to the factory-corrected values. Generally, you need not perform correction in the applications.

Measured voltage indicates the actual output voltage value measured by instruments such as the multimeter. Displayed voltage indicates the voltage display value sampled by the AC drive.

PF.16	AO2 target voltage 1	Setting Range: 0.500 V∼4.000 V	Factory-corrected
PF.17	AO2 measured voltage 1	Setting Range: 0.500 V∼4.000 V	Factory-corrected
PF.18	AO2 target voltage 2	Setting Range: 6.000V∼9.999V	Factory-corrected
PF.19	AO2 measured voltage 2	Setting Range: 6.000V∼9.999V	Factory-corrected

Corrected method is the same with AO1.

PF.36	Jump point of VI input corresponding setting	Setting Range: -100.0%∼100.0%	【0.0%】
PF.37	Jump amplitude of VI input corresponding setting	Setting Range: 0.0%~100.0%	【0.5%】

PF.38	Jump point of CI input corresponding setting	Setting Range: -100.0%~100.0%	【0.0%】
PF.39	Jump amplitude of CI input corresponding setting	Setting Range:	【0.5%】
PF.40	Jump point of WI input corresponding setting	Setting Range: -100.0%~100.0%	【0.0%】
PF.41	Jump amplitude of WI input corresponding setting	Setting Range:	【0.5%】

The X terminals (CI,VI,WI)of the GLORY all support the corresponding setting jump function, which fixes the X input corresponding setting at the jump point when X input corresponding setting jumps around the jump range.

For example, AI input voltage jumps around 5.00 V and the jump range is 4.90–5.10 V. AI minimum input 0.00 V corresponds to 0.0% and maximum input 10.00 V corresponds to 100.0%. The detected AI input corresponding setting varies between 49.0% and 51.0%.

If you set PF.36 to 50.0% and PF.37 to 1.0%, then the obtained AI input corresponding setting is fixed to 50.0%, eliminating the fluctuation effect.

6.17 User-Defined Function Codes (Group E0)

E0.00	User-Defined Function Code 0	Setting Range: uP0.00∼ub0.xx	P0.00
E0.01 ~ A2.30	User-Defined Function Code 01 to 30	Setting Range: uP0.00∼ub0.xx	P0.01
E0.31	User-Defined Function Code 31	Setting Range: uP0.00∼ub0.xx	P0.02

Group E0 is user-defined parameter group. You can select the required parameters from all GLORY functions codes and add them into this group, convenient for view and modification.

Group E0 provides a maximum of 32 user-defined parameters. If "uP0.00" is displayed, it indicates that group E0 is null. After you enter user-defined function code mode, the displayed parameters are defined by E0.00 to E0.31 and the sequence is consistent with that in group E0.

6.18 Motor 2 to Motor 4 Parameters (Group E3, E4, E5)

Motor 2 parameters E3.00 to E3.37 in group E3 are the same with P8.00~P8.37, while E3.38 to E3.55 is same with P9.01to P9.18.

Motor 3 parameters E4.00 to E4.37 in group are the same with P8.00 to P8.37, while E4.38 to E4.55 is same with P9.01 to P9.18.

Motor 4 parameters E5.00 to E5.37 in group E5 are the same with P8.00 to P8.37, while E5.38 to E5.55 is same with P9.01 to P9.18.

6.19 Standard Monitoring Parameters (Group b0)

Group b0 is used to monitor the AC drive's running state. You can view the parameter details description in chapter 5(Group b0).

Chapter 7 Troubleshooting

7.1 Fault Alarm and Troubleshooting

When inverter trips, protection function acts as LED displays fault code, fault relay acts, inverter output stops and motor coasts to stop. GLORY series inverter's fault contents and troubleshooting are shown in Table 7-1. After fault alarm occurs, inverter should be inspected according to Table 7-1. When technical assistance required, please contact your supplier.

Table 7-1 Alarms and troubleshooting

Fault code	Type of faults	Possible fault reasons	Troubleshooting
		Acc time is short	Adjust acc time
		V/F curve setup is not suitable	Adjust V/F curve
E-01	Acc over	Restart the motor in running	Setup start mode as speed tracking
	current	Torque boost setup is big	Adjust torque boost or set as auto
		Inverter power is small	Select inverter with proper capacity
		Dec time is short	Adjust Dec time
E-02	Dec over	Potential load or load inertia is big	Add suitable braking device
	current	Inverter power is small	Select inverter with proper capacity
		Load mutation	Check load
	Over current	Acc or Dec time is short	Adjust Acc or Dec time
E-03	at constant	Input voltage abnormal	Check input power supply
	speed running	Load abnormal	check load
		Inverter power is small	Select inverter with proper capacity
		Input voltage abnormal	Check input power supply
E-04	Acc	Acc time is too short	Adjust Acc time
	overvoltage	Restart the motor in running	Setup start mode as speed tracking
Fault code	Type of faults	Possible fault reasons	Troubleshooting

	Dec	Dec time is short	Adjust the Dec time
E-05	overvoltage	Potential load or load inertia is big	Add suitable braking device
		Input voltage abnormal	Check input power supply
	Overvoltage	Acc or Dec time is short	Adjust the Acc or Dec time
E-06	at constant speed running	Abnormal change of input voltage	Mount input reactor
		Load inertia is big	Add suitable braking device
E-07	Contactor	Drive board or power supply fault	Replace drive board or power board
L-01	fault	Contactor fault	Replace contactor
		Air duct obstruction	Clean air duct
		Environment temperature is	Improve the ventilation or decrease
E-08	Inverter overheat	high	the carrier frequency
		Fan damaged	Replace a new fan
		Inverter module abnormal	Contact supplier
		Acc time is short	Adjust Acc time
		DC braking value is high	Decrease DC braking current and increase braking time
F 00	Inverter	V/F curve setup is not suitable	Adjust V/F curve
E-09	overload	Restart the motor in running	Setup start mode as speed tracking restart
		Grid voltage is low	Check grid voltage
		heavy load	Select inverter with proper capacity
		V/F curve setup is not suitable	Adjust V/F curve
	Motor	Grid voltage is low	Check grid voltage
E-10	overload	General motor runs at low	Use a special motor for long term
		speed with heavy load for long	running

		Wrong setting of motor overload protection factor	Set the factor right
		Motor chocked or sudden change of load	Check load
E-11	Under voltage in running	Grid voltage is low	Check grid voltage
		Cable between Inverter and motor is fault	Check the peripheral fault
	Output lack	Output 3-phases un balance	Check motor 3 phases winding
E-12	phases	Drive board fault	Contact supplier
	priases	IGBT module fault	Contact supplier
		Control board connecting wire or plug-in unit loose	Check and re-wiring
E-13	Peripheral fault	External fault terminals closed	Check the reason
	Current	Loose wiring or terminal connections	Check and re-wiring
E-14	detecting	Auxiliary power source damaged	Contact supplier
	Circuit rauit	Hall component damaged	Contact supplier
		Amplifier circuit abnormal	Contact supplier
		Baud rate setting incorrect	Set baud rate properly
E-15	RS232/485 Communication	Serial port communication fault	Press STOP Key to reset or contact supplier
	fault	Improper fault alarm parameter setting	Revise function code PC group

		11	Check upper computer and		
		Upper computer doesn't work	connecting cable		
E-16	System	Serious interference	Press Key to reset or install input power source filter		
	interference	DSP read/write error	Reset or contact supplier		
E-17	EP ^{2P} PROM	Read/write error of control	press key to reset or install		
	error	parameter	input power source filter		
E-18	Motor parameter over current fault	Power range of Motor and inverter do not match	Contact supplier press STOP key to reset		
E-19	Input phase	One of R, S, T port has no	Press STOP key to reset		
	loss protection	voltage	check voltage of R, S, T		
E-20	Earthing short	Motor earthing short circuit fault	Replace motor or cable		
		Encorder not matched	Select right model of Encorder		
E-21		Encorder wiring incorrect	Check wiring		
L-21	Encorder fault	Encorder damaged	Replace encorder		
		PG card fault	Replace PG card		
E-22	Input Power fault	Input power out of range	Use proper power supply		
E-23	Runing time completed	Running time reach setting value	Clear record		
E-24	Power on time completed	Power on time reach setting value	Clear record		

E-25	over fault	Change the selection of the motor via terminal during running of Inverter	Perform motor switchover after inverter stops.	
E-26	Wave limiting	Load heavy or motor blocked	Reduce load or check mechanical status	
	current	Inverter power small	Select big rating inverter	
E-27	Motor over	Temperature sensor wiring loose	Check sensor wiring	
E-21	heat fault	Motor tomporature high	Reduce carrier frequency or adopt	
		Motor temperature high	other heat radiation measure.	
		The encoder parameters are	Set the encoder parameters	
	large speed deviation	set incorrectly.	properly.	
E-28		Auto-tuning is not performed.	Perform the motor autotuning.	
		PA65、PA66 setting is inproper	Set PA65 and PA66 correctly based	
		r Add setting is inproper	on the actual situation.	
		Encorder parameter setting incorrect	Set the encorder parameter properly	
E-29	Motor over	Auto-tuning is not performed	Perform motor autotuning	
E-29	speed fault	Motor speed inspection		
		parameter PA63 and PA64	Set inspection parameter as actual	
		setting is incorrect		
E 20		Inverter running current is	Check the load disconnected or the	
E-30	Load drop	lower than PA60	setting of PA60 and PA61	
E-31	PID feedback	PID feedback value less than	Check PID feedback signal or set	
	loss	P6.26 setting value	P6.26 properly	
E-32	User defined	Input user defined fault 1 signal	Reset	
	fault 1	via multi-function terminal X		

E-33	User defined fault 2	Input user defined fault 2 signal via multi-function terminal X	Reset
E-34	Contactor	Drive board or power supply is abnormal	Change drive board or power supply
	fault	Contactor is abnormal	Change contactor
E-35	Short circuit to ground fault	Motor short circuit to ground	Change motor or cable

7.2 Fault Record Search

Inverter record the fault codes occurred in the last 3 times. The fault information is reserved in PA group. Enter PA parameter group by Keypad operation

7.3 Fault Reset

When fault occurred, please select the following methods to recover:

- (1) When fault code is displayed, after ensure it can be reset, press STOP key to reset.
- (2) Set one of X1~X8 terminal as external RESET input (P3.00~P3.09=9).
- (3) Cut off power.



Attention

- (1) Reset the inverter after thoroughly investigating the cause of fault and clearing, otherwise, the inverter may be damaged.
- (2) If it can't be reseted or fault occurs again after reset, please check the cause of fault, continuous reset may damage inverter.
- (3) Reset the inverter after waiting for 5min when overload or overheat protection occurs.

Chapter 8 Preservation and Maintenance

8.1 Preservation and Maintenance

Potential hazards exist due to aging, wear and tear of inverter internal components as well as environmental influences to the inverter, such as temperature, humidity particles etc.. Therefore, daily inspection, periodic preservation and maintenance must be performed to the inverter and its driving mechanism during their storage and operation.

Daily Maintenance

The following must be verified before starting up:

- (1) No abnormal vibration and no abnormal noise.
- (2) No abnormal heat.
- (3) No abnormal ambient temperature.
- (4) The ammeter satisfy the specification
- (5) Fan is working in good condition

8.2 Periodic Preservation and Maintenance

8.2.1 Periodic Maintenance

Cut off the power when inverter is maintained thermally, check after the main circuit power indicator light is off. The checking content is shown in Table 8-1.

Table 8-1 Periodic inspections

Checking item	Checking content	Troubleshooting
Screws of control terminals and main circuit terminals	The screws are loose or not	If loose, tighten them with screw driver
Heat sink	Whether there is dust	Clean thoroughly the dust
Printed circuit board	Whether there is dust	Clean thoroughly the dust
Cooling fans	Whether there is abnormal	Replace cooling fans

	vibration or abnormal noise	
Power element	Whether there is dust	Clean thoroughly the dust
Flootrolytic conscitor	Whether there is discoloring,	Replace electrolytic
Electrolytic capacitor	peculiar smell	capacitor

8.2.2 Thermally maintaining

In order to let inverter work well for a long term, user must maintain the inverter thermally. The replace time of element of inverter is shown in Table 8-2.

Table 8-2 frequency inverter parts replacement

Items	Time criterion
Cooling fans	2-3 years
Electrolytic capacitors	4-5 years
Printed circuit board	5-8 years
Fuse	10 years

The working condition of the inverter as following:

(1) Environment temperature: average 30C.

(2) Load coefficient: under 80%.

(3) Running time: under 12 hour everyday.

8.3 Warranty of Inverter

Our company supply warranty in the following condition:

- (1) Only inverter in the warranty range.
- (2) In the normal using, inverter damaged in 15 month. Over 15 month, our company will charge for the repair service.
- (3) In the following condition in 15 month, our company also will charge for the repair service:
- Inverter is damaged caused by user not complying with instructions.
- Inverter is damaged caused by fire, flood, and abnormal voltage.

- Inverter is damaged caused by wrong wiring.
- Inverter is damaged when it is used in the abnormal applications.
- (4) Service charge will be calculated with reference to actual cost, but if included in the contract, then according to the contract.

Chapter 9 Serial port RS485 communication protocol

9.1 Communication overview

Our series of inverters provide users with a common industrial control RS485 communication interface, in which The MODBUS standard protocol is used for communication. The inverters can be used as slave connected to the host (such as PLC controller, PC), both of which have the same communication interface and protocol, for the purpose of centralized monitoring of the inverters. Or one inverter can be used as host and other inverters as slaves, all connected with RS485 communication interface, to achieve multi-machine interaction of the inverters. And with this communication interface, a Keyboard can also be connected to inverters for remote operation.

The MODBUS communication protocol of the inverter supports two transmitting ways: RTU mode, the following is a detailed description of the communication protocol of the inverter.

9.2 Communication protocol specification

9.2.1 Communications networking methods

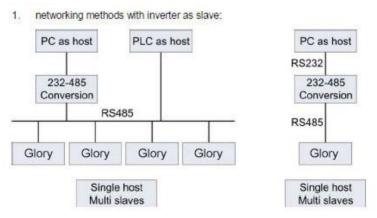


Fig. 9-1 networking of slaves

(2) The networking of multi-machine interaction:

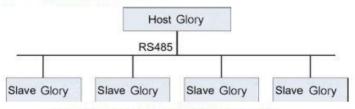


Fig. The networking of multi-machine interaction

9.2.2 Communication protocol

The inverter can either used as a host or slave in RS485 network. It can be used for controlling our other inverters as host to achieve multi-level linkage, or controlled by host (PC or PLC) as a slave. The specific communication mode as follows:

- Inverter is used as slave, in point-to-point communication of master-slave mode.
 Host sends commands from broadcast address, while slave doesn't answer.
- Inverter is used as host, sending commands from broadcast address, while slave doesn't answer.
- 3) The address, baud rate and data format of the inverter can be setup by using the keyboard or the serial communication.
- message of error is reported by slave, in the recent response frame against host polling

9.2.3 Communication Interface

The communication is using RS485 interface, with asynchronous serial and half-duplex transmission. The default communication protocol is in RTU mode.

The default data format: 1 start bit, 7 data bits, 2 stop bits.

The default rate is 9600bps. Communication parameter settings reference P3.09 ~ P3.12 function code.

9.3 RTU protocol

Character structure:

11 characters box (For RTU)

(1-8-2 format, no parity)

Start bit	1	2	3	4	5	6	7	Stop bit	Stop bit
(1-8-1 fo	rmat,	odd pa	rity)						

Odd

parity

Stop

bit

(1-8-1 format, even parity)

(,	- · · · · · ·	,							
Start	1	2	3	4	5	6	7	Even	Stop	
bit	'	_	0	-			'	parity	bit	

Communications data structures

RTU mode:

Start

bit

START	Maintaining no input signal for more than or equal to 10ms	
Address	address: 8-bit Binary address	
Function	Function code: 8-bit Binary address	
DATA (n - 1)	Data content:	
	N*8-bit data, N<=8, less than 8 bytes	
DATA 0		
CRC CHK Low	CRC Check code	
CDC CHK High	16-bit CRC check code is combined with 2	
CRC CHK High	8-bit Binary code	
END	Maintaining no input signal for more than	
LIND	or equal to 10ms	

The most important function of Modbus is to read and write parameters. Different function codes determine different operation requests. Inverter Modbus protocol supports the following function code operation:

function code	Function code meaning		
0x03	Read inverter function code parameters and operating		
0.03	status parameters		
0x06	Rewrite the inverter's single function code or control		
UXUO	parameters, do not save after power down		
007	Rewrite the inverter's single function code or control		
0x07	parameters, save after power down		

The function code, control and status parameters of the inverter are all mapped as

Modbus read and write registers. Read and write features and ranges of function code parameters follow the instructions of the inverter user manual. The control and status parameters of the inverter are separately assigned addresses.

Correspondence between the function code group number and its mapped high byte Address under:

Address is 0x00~0x0F, corresponding function code is Group P0~PF, Address is 0x10~0x1F, corresponding function code is Group E0~EF, Address is 0x20~0x2F, corresponding function code is Group F0~FF, Address is 0x30~0x3F, corresponding function code is Group d0~dF, Address is 0x40~0x4F, corresponding function code is Group c0~cF, address is 0x500x, the inverter status parameter read address: address is 0x600x, inverter control parameter group address: address is 0x8000, inverter fault status address: address is 0x8001, inverter communication error address:

Inverter status parameter address	Order content	Inverter status Parameter address	Order content
0x5000	Communication given frequency	0x5011	PID feedback

	-10000 ~1000			
	(Decimal)			
0x5001	Operating frequency	0x5012	PLC steps	
			PULSE Input pulse	
0x5002	bus voltage	0x5013	frequency, unit	
			0.01KHz	
0x5003	output voltage	0x5014	Feedback speed, unit	
0x3003	output voltage	0x3014	0.1Hz	
0x5004	Output current	0x5015	Remaining runtime	
0x5005	Output power	0x5016	All sampling voltage	
0x5006	Output torque	0x5017	Al2 sampling voltage	
0x5007	Performance feedback	0x5018	Al3 sampling voltage	
UX5007	frequency	0x3016	Als sampling voltage	
0x5008	DI input status	0x5019	Line speed	
0x5009	DO output status	0x501A	current power-on time	
0x500A	All corrected voltage	0x501B	current running time	
0x500B	Al2 corrected voltage	0x501C	PULSE Input pulse	
0x300B	AIZ corrected voltage	0.5010	frequency in 1Hz	
0x500C	Al3 corrected voltage	0x501D	Encoder feedback	
0x500C	Als corrected voltage	0x301D	speed 0.01Hz	
0x500D	Count value input	0x501E	Actual feedback	
0x300D	Count value input	OXSOTE	speed	
0x500E	length value input	0x501F	Main frequency X	
UXSOUE	iengtii value input	0x301F	display	
0x500F	Load speed	0x5020	Auxiliary frequency Y	
UAJUUF	Load speed	0.5020	display	
0x5010	PID setting			

Control command address:

Control word address	Order content	Control word address	Order content
	0001:Forward running	0x6001(Communicatio n control analog AO1 output address)	0x0~0x7FFF
0x6000 (control	0002:Reverse running	0x6002(Communicatio n control analog AO2 output address)	0x0~0x7FFF
command word address)	0003:Positive rotation 0004:Reverse jogging 0005:Deceleration stop		BIT0:DO1 output control BIT1:DO2 output control BIT2:Relay 1
	0006:Free downtime	00002/0	BIT3:Relay 2
	0007:Fault reset	0x6003(Communication DO output address)	BIT4:HDO as normal DO output
0x6004(HDO pulse output system)	0x0~0x7FFF		Other bits: Reserved

Note:

Communication setting is a percentage of relative value, 10000 corresponds to 100.00%, -10000 corresponds to -100.00%.

For frequency dimension data, the percentage is a percentage of the maximum frequency (P 0.05); for torque dimension data, the percentage is P9.26 (torque ceiling digital setting).

AO and HDO output 0x0 ~ 0x7FFF, respectively, with 0% to 100%.

Inverter fault address	Inverter fault information	Inverter fault address	Inverter fault information
	0000: no fault		0012:Motor parameter
			over current fault
	0001:Acc overcurrent		0013: Input phase loss
			protection
	0002:Dec overcurrent		0014: Earthing short circuit
			fault
	0003:Over current at		0015: Encorder fault
	constant speed running		
	0004:acc overvoltage		0016: Input Power fault
	0005:Dec overvoltage		0017: Running time
			completed fault
	0006:Overvoltage at		0018: Power on time
0x8000	constant speed running 0x8000	0x8000	completed fault
	0007:Contactor fault		0019: Motors switch over
	ooor.oomastor radic		fault during running
	0008:Inverter overheat		001A:Motor over heat fault
	0009:Inverter overload		001B:large speed
	0009.iliverter overload		deviation
	000A:Motor overload		001C:Motor over speed fault
	000B:Under voltage in		001D: Load drop
	running		001D. Load drop
	000C:Output lack phase		001E:PID feedback loss
	000D:Peripheral fault		001F:User defined fault 1
	000E: Current detecting		0028: User defined fault 2
	circuit fault		0020: Osei deililed idult 2

000F: RS232/485		0000 DID foodbask less	
Communication fault		0029: PID feedback loss	
0010: System interference		002A:User defined fault 1	
0011: EP2PPROM		002B:User defined fault 2	
error		002D.Oser delined fault 2	

Note:

The inverter fault information read from the fault address is consistent with the fault record code in Table 7-1 in Chapter 7.

If the operation request fails, the response is the error code and the exception code. The address is 0x8001 the meaning of the exception code is as follows:

Abnormal code	Abnormal code meaning	Abnormal code	Abnormal code meaning
			Illegal data, operating data is
0x0001	wrong password	0x0005	not within the upper and lower
			limits
0x0002	Read and write command	0x0006	Parameter read-only, does not
0x0002	error	000006	allow changes
			Read and write failed, factory
0x0003	CRC check error	0x0007	parameters are not allowed to
			operate
0x0004	Illegal address, operation	0x0008	Parameter does not allow
0x0004	address error	0.0000	changes

CRC check

Taking into account the need to improve speed, CRC-16 is usually achieved using the form, the following is to achieve CRC-16 C language source code, pay attention to the final result has been exchanged high and low byte, that is, the result is to send the CRC checksum . uint16 CrcValueByteCaA0(const uint16 *data, uint16 len)

{

```
uint16 CRCValue = 0xFFFF;
uint16 tmp;
uint16 a;
while (len--)
{
    tmp = *(data++);
    a = (CRCValue ^ tmp) & 0x000F;
    CRCValue >>= 4;
    CRCValue ^= crc16Table[a];
    a = (CRCValue & 0x000F) ^ (tmp >> 4);
    CRCValue >>= 4;
    CRCValue ^= crc16Table[a];
} return crcValue;
}
```

Application examples

Read command frame: The request frame is to read two consecutive parameter values from P0.02 function code of No.1 engine.

address	ddress Order code		Register		of bytes of	Chackaum
address	Order code	ad	dress	operation		Checksum
0x01	0x03	0x00	0x02	0x00	0x02	To be calculated

Read command response frame:

address	Order	Number of	P0.02 Data		P0.03 Data		Checksum
	code	data sections	content		content		
0x01	0x03	0x04 (2*2)	0x13	0x88	0x00	0x00	To be calculated

Write command frame: Request frame is write data frame of P0.02 parameter of machine number 1:

address	Order code	Register address		Write the value		Checksum
0x01	0x06	0x00	0x02	0x13	0x88	To be calculated

Write command response frame:

address	Order code		gister dress	Write th	e value	Checksum
0x01	0x06	0x00	0x02	0x13	0x88	To be calculated

Write command frame: Unit 1 is running forward start (P0.03 need to be set to 2)

address	Order code		gister dress	Write th	e value	Checksum
0x01	0x06	0x60	0x00	0x00	0x01	To be calculated

Parameter Description

PC.00	Baud rate	Range: 0~9	6
-------	-----------	------------	---

- 0: 300BPS;
- I: 600BPS;
- 2: 1200BPS;
- 3: 2400BPS:
- 4: 4800BPS;
- 5: 9600BPS;
- 6: 19200BPS;
- 7: 38400BPS;
- 8: 57600BPS;
- 9: 115200BPS.

This parameter is used to set the data transmission rate between host computer and inverter.

Note that the host computer and the inverter set the baud rate must be the same. Otherwise, communication will not work

PC.01	Data Format	Range: 0∼3	0
-------	-------------	------------	---

- 0: No parity: data format <8,N,2>;
- 1: Even check = data format <8,E,1>;
- 2: Odd parity = data format $\langle 8, 0, 1 \rangle$;
- 3: No parity, data format<8-N-l>.

This parameter must be consistent with the host computer, or can not communicate.

PC.03	Local address	Range: 1∼247	1
-------	---------------	--------------	---

When the local address is set to 0, that is broadcast address, to achieve PC broadcast function.

The uniqueness of the local address (in addition to broadcast address sunset, which is to achieve PC and inverter peer-to-peer communications.

PC.03	Response delay	Range: 0~20ms	2ms
-------	----------------	---------------	-----

Response delay: refers to the inverter data reception to the host computer to send data to the middle of the interval. If the response delay is less than the system processing time, the response delay is based on the system processing time. If the response delay is longer than the system processing time, the system delays the processing after the data is processed until the response delay time arrives. Send data.

PC.04	communication timeout	Range: 0.0s~60.0s	【0.0s】
-------	-----------------------	-------------------	--------

When this function code is set to 0.0 s, the communication timeout parameter is invalid.

When this function code is set as valid value, if the interval time between one communication and the next communication exceeds the communication timeout, the system will report a communication error (E-15 will be set to invalid normally.) If the function of continuous communication of the system, set the secondary parameters, you can monitor the communication status.

PC.05	Read data return format selection	Range: 0~1	[0]
-------	-----------------------------------	------------	-----

^{0:} return data is 2 bytes high and low 8 bits:

^{1:} return data bit 1 byte.

www.intouss.com